


FURUNO

DSC-6/6A

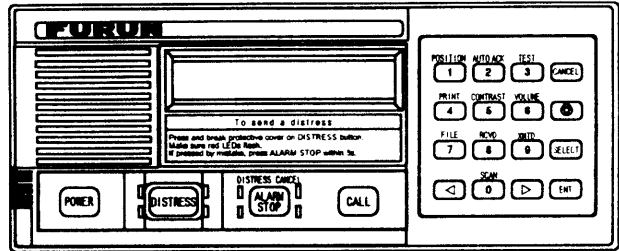

*** Operator's Guide ***

(For detailed information, refer to Operator's Manual.)


Contents

	<u>Page</u>
1. Basic Operation	1
2. Remote Function and Automatic Acknowledge (AUTO ACK)	3
3. Transmitting Distress Alert	4
4. Receiving Distress Alert from Other Ship	5
(1) On MF Band	
(2) On HF Band	
5. Transmitting Distress Relay Call on MF/HF	7
6. Preparing and Transmitting Messages	8
7. Receiving a Message	10
(1) Receiving "All Ships Call"	
(2) Receiving "Individual Call"	
8. Setting Up	11
(1) Entering date, time	(4) Setting receive alarms
(2) Setting the printer	(5) Programming scan frequencies
(3) Selecting monitor line	
9. Transmit and Receive Message Memory	14
10. Self-Test	15

1. Basic Operation

About the display


When the DSC-6/6A is turned on, the following display appears. This display is known as the “normal display.”

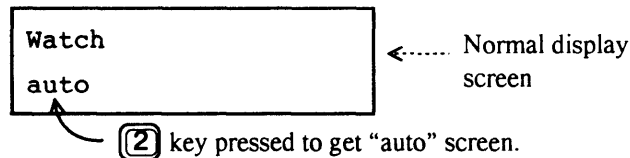

Should you get lost in operation you can return to the normal display by pressing the **[CANCEL]** key several times.


Selecting and registering items



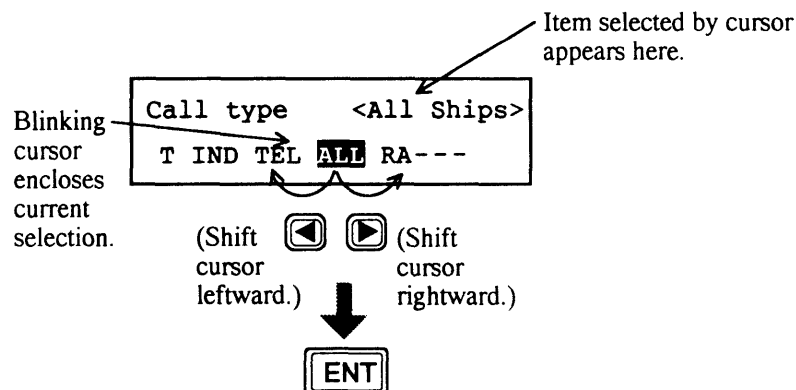





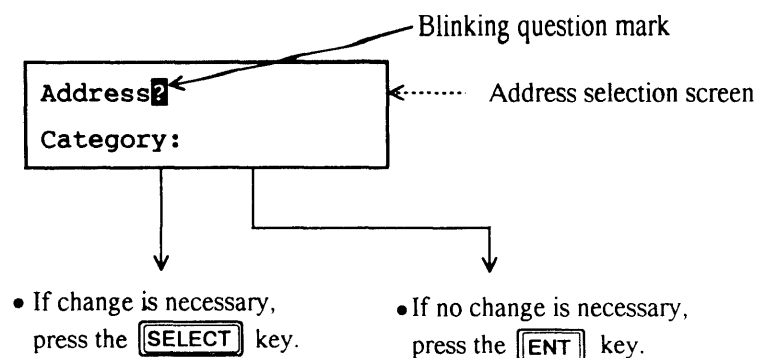






The arrow keys (**[←]** and **[→]**) function to select items on the LCD. After selecting item, press the **[ENT]** key to register it.



When blinking question mark appears

Press the **[ENT]** or **[SELECT]** key depending on your desire.

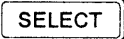

Key	Function
	Transmits the distress alert. (Press and break the protective cover on this key.)
	Silences the receive alarm. To stop repetitive alerts, press this key.
	Transmits messages other than distress.
POSITION 	Ship's position and time are shown while pressed and held down.
AUTO ACK 	Turns transceiver remote and automatic transmission of acknowledge call (AUTO ACK) on or off. (Refer to page 3.) Note that distress alert cannot be automatically acknowledged by "auto acknowledge" function.
TEST 	Conducts self-test. (Refer to page 15.)
PRINT 	Printing. (This is also available for automatic setting of the printer.)
CONTRAST 	Adjusts contrast of LCD in eight levels.
VOLUME 	Adjusts volume of speaker in eight levels. (Distress and urgency alarms always sound at maximum volume.)
FILE 	Retrieves files.
RCVD 	Display contents of received messages (Storage capacity: 100 files, 50 each of distress and other). (Refer to page 14.)
XMTD 	Displays contents of transmitted messages (Storage capacity: 50 files). (Refer to page 14.)
SCAN 	Starts and stops frequency scanning. (Refer to page 13.) (If SSB frequency is set to 2182 kHz, scan function is not operated.)
	Adjusts illumination of LCD, switches and keys in four levels.
	<ul style="list-style-type: none"> • Displays "Set up menu" (Main menu). (Refer to page 11.) • Changes settings of items appearing with blinking question mark.

2. Remote Function and Automatic Acknowledge (AUTO ACK)

AUTO ACK

The auto acknowledge feature automatically transmits the acknowledge back (ACK BQ) signal when an individual call is received. With the auto acknowledge feature turned on the remote control function is also turned on.


Remote control function

The remote control function lets the DSC-6/6A set DSC frequencies, working frequencies and class of emission for the radiotelephone.

Turning remote (& AUTO ACK) on/off

To enable or disable AUTO ACK and remote control, use the key. Each press of the key enables/disables auto acknowledge and remote control function in the sequence shown below.


Note: *The AUTO ACK function is not available when receiving or relaying the distress alert, or ECC (Error Check Character) error is received. (ECC error appears at the end of a receive message when an error is detected in the message.)*

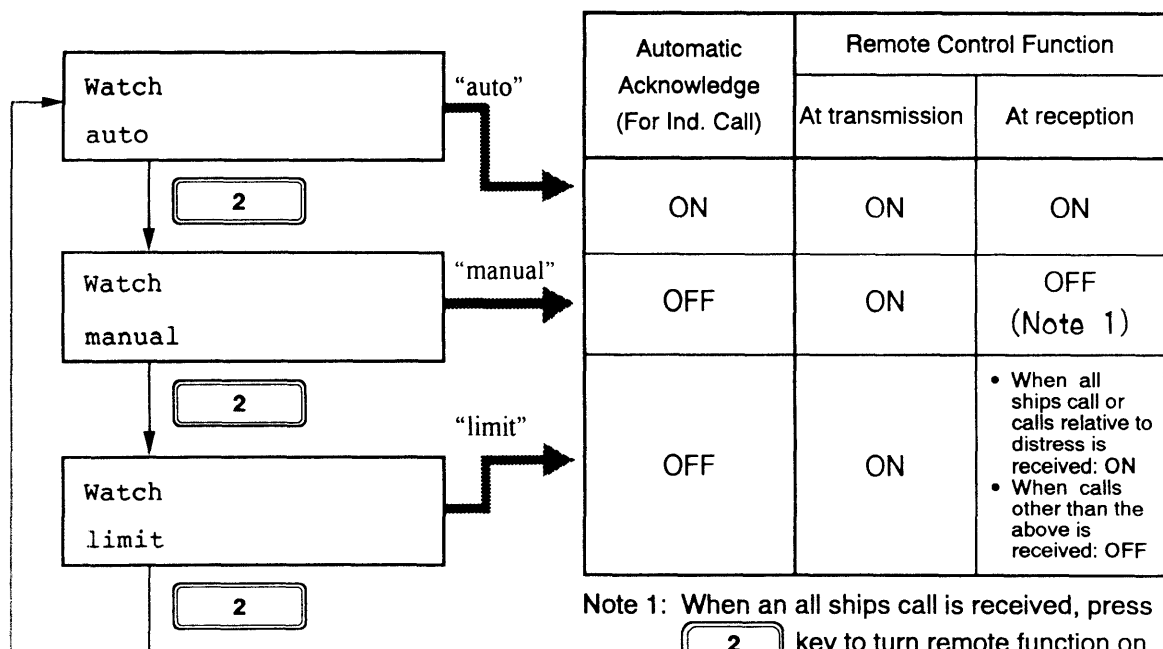


Note 1: When an all ships call is received, press key to turn remote function on, causing working frequency to be automatically set at radiotelephone.

3. Transmitting Distress Alert

To transmit the distress alert, press the **DISTRESS** key.

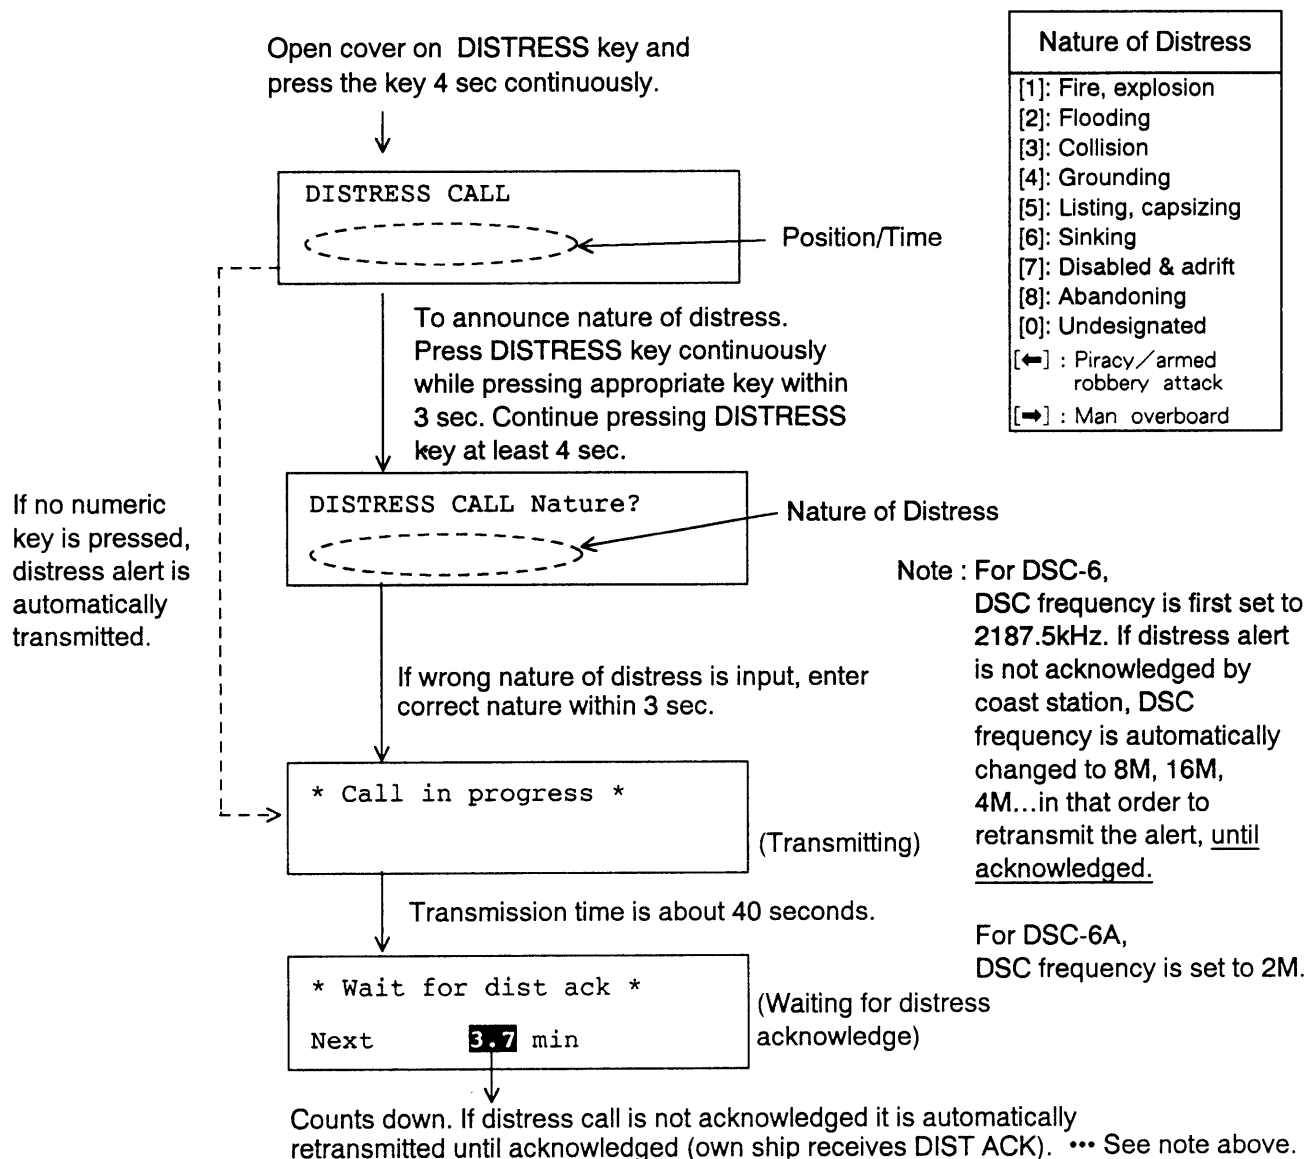


When DIST ACK is received;

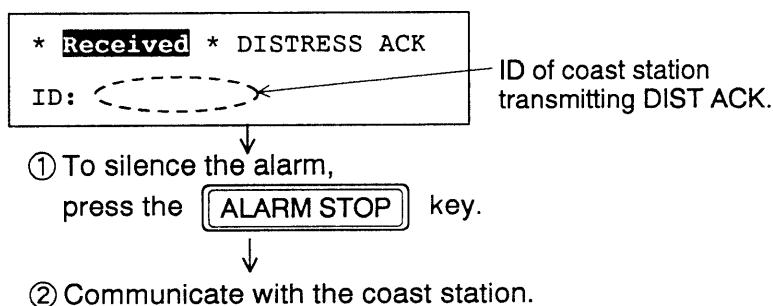

4. Receiving Distress Alert from Other Ship


When the DSC terminal receives a distress alert from other vessel it sounds the distress alarm. Silence the alarm by pressing the **ALARM STOP** key. Wait up to three minutes to receive the DIST ACK signal from a coast station.

(1) On MF Band

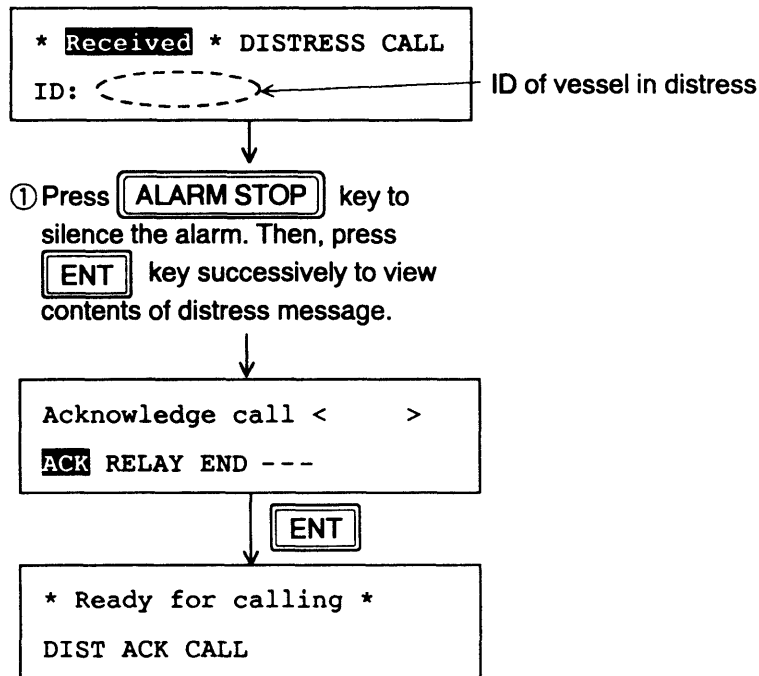

Transmitting DIST ACK


- ② If you do not receive DIST ACK from coast station within three minutes and your vessel meets requirements (see page 5-2 in the Operator's Manual) for transmitting DIST ACK, transmit it by pressing the **CALL** key.

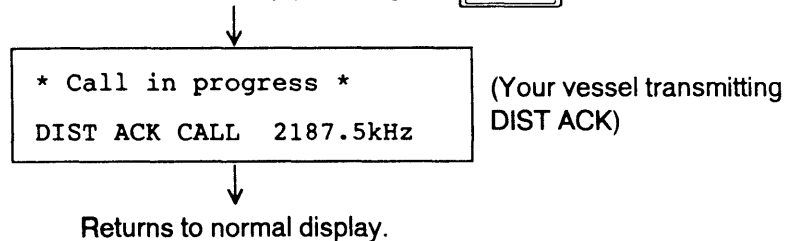

- ③ Begin search and rescue operations for the vessel in distress, communicating with the vessel over 2182kHz (automatically set). Relay distress alert to coast station on HF band. Finally, follow instructions of the coast station.

(2) On HF Band

When you receive the distress alert the audible alarm sounds and the DISTRESS CALL screen appears. If the call is not acknowledged by a coast station **within 3 min.** relay it (to a coast station) as follows.

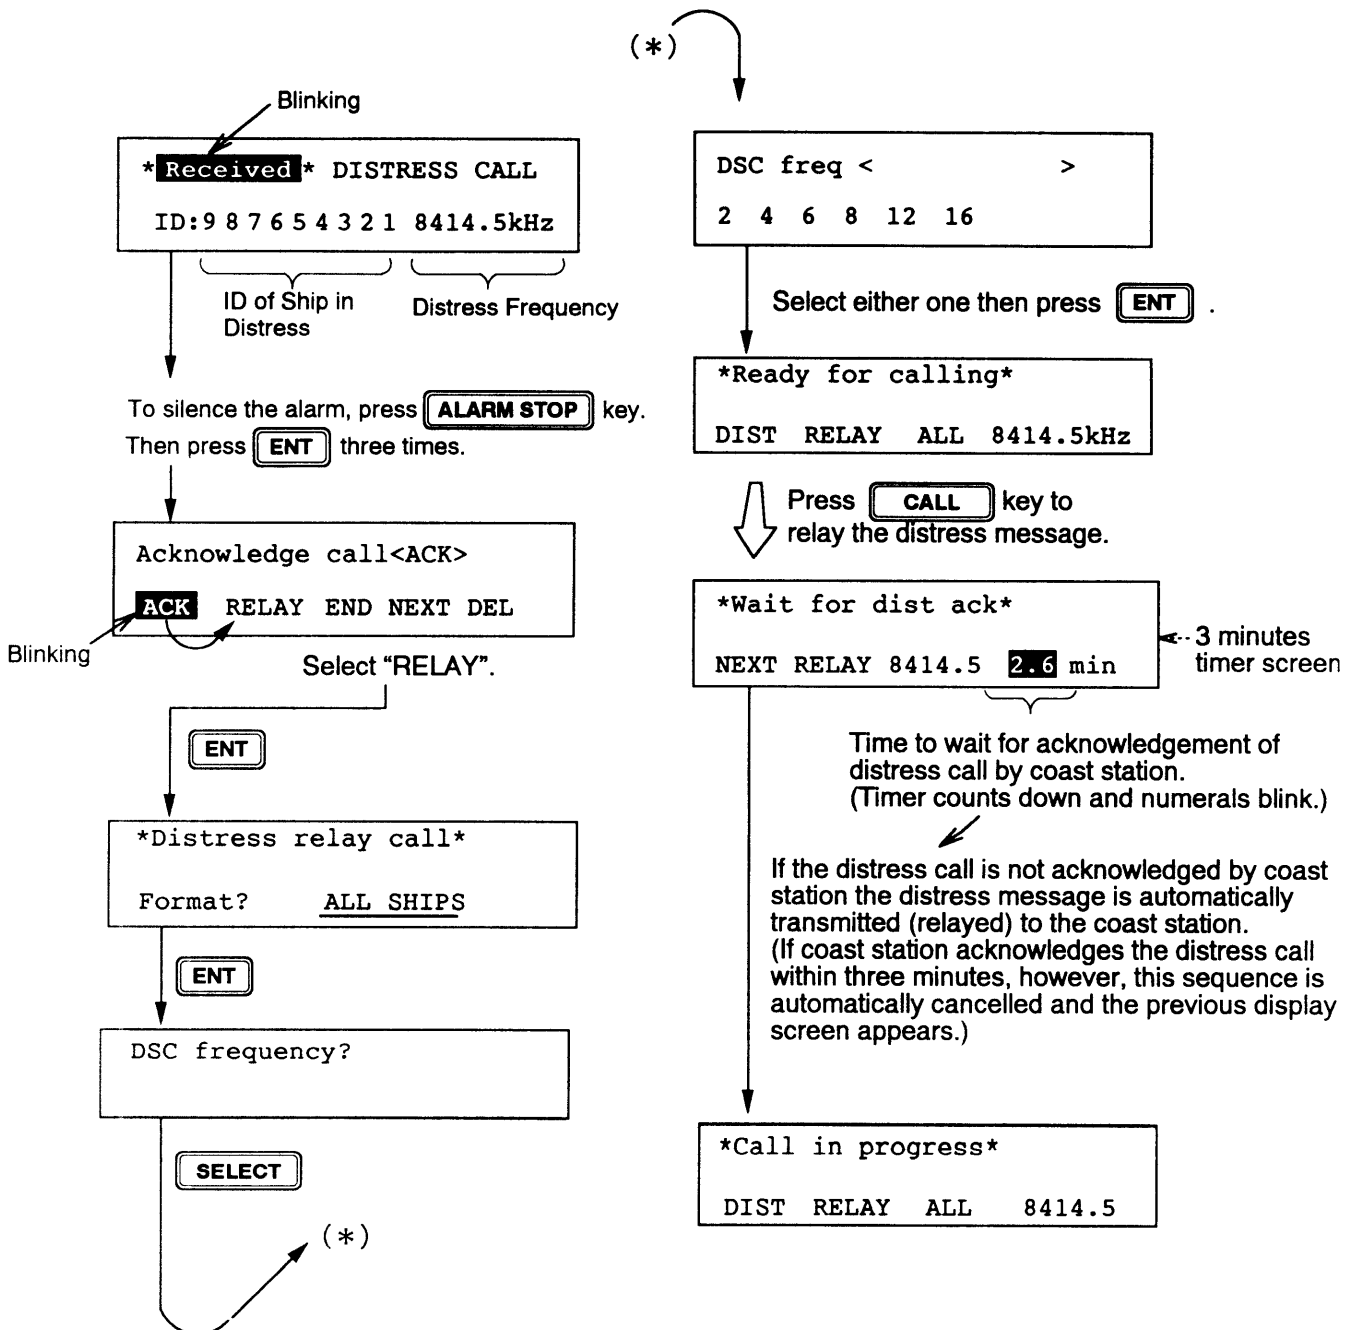

5. Transmitting Distress Relay Call on MF/HF

If a vessel in distress is obviously near your ship and is not able to transmit the distress alert by itself, you can relay (transmit) the alert on behalf of the vessel in distress.

Watch
auto

ENT → SELECT

Call type <Relay all>
T IND TEL ALL RA RS DIS

Place the cursor on "RA" then press ENT.
(RA: Relay for all ships)

MF/HF call message
Call type: DIST RELAY ALL

ENT → SELECT

Address < No inform >
DIGITS IN = - - - - - [ENT]

Enter ID of vessel in distress. (If not known, enter "99...9" to set up for "No information".)

ENT

Nature of distress ?
UNDESIGNATED DISTRESS

If OK, ENT → SELECT
To select other nature of distress, press SELECT.

Position < >
NORTH =

Enter position data of vessel in distress manually.

ENT → SELECT

(*)

(*)
Distress UTC :
UTC ?

Enter time manually. ("9999": No information)

ENT

Distress telecommand ?
J3E TELEPHONE

To change, press SELECT. (J3E : SSB)
If OK, press ENT. (H3E : AM)
(F1B : NBDP)

DSC frequency ?
8414.5kHz

To change, press SELECT.
If OK, press ENT.

Ready for calling
DIST RELAY ALL 8414.5kHz

Press CALL key.

DO NOT press DISTRESS key.

DISTRESS RELAY ALL
Dist ship ID :

Call in progress
Format: DIST REL 8414.5

Distress alert transmitted(relayed)5 times.

Returns to normal display.


6. Preparing and Transmitting Messages

There are two methods by which you can prepare and transmit messages, and they are shown below.

Preparing message for immediate transmission


Prepare message and then transmit it.

(ex.) All ships call

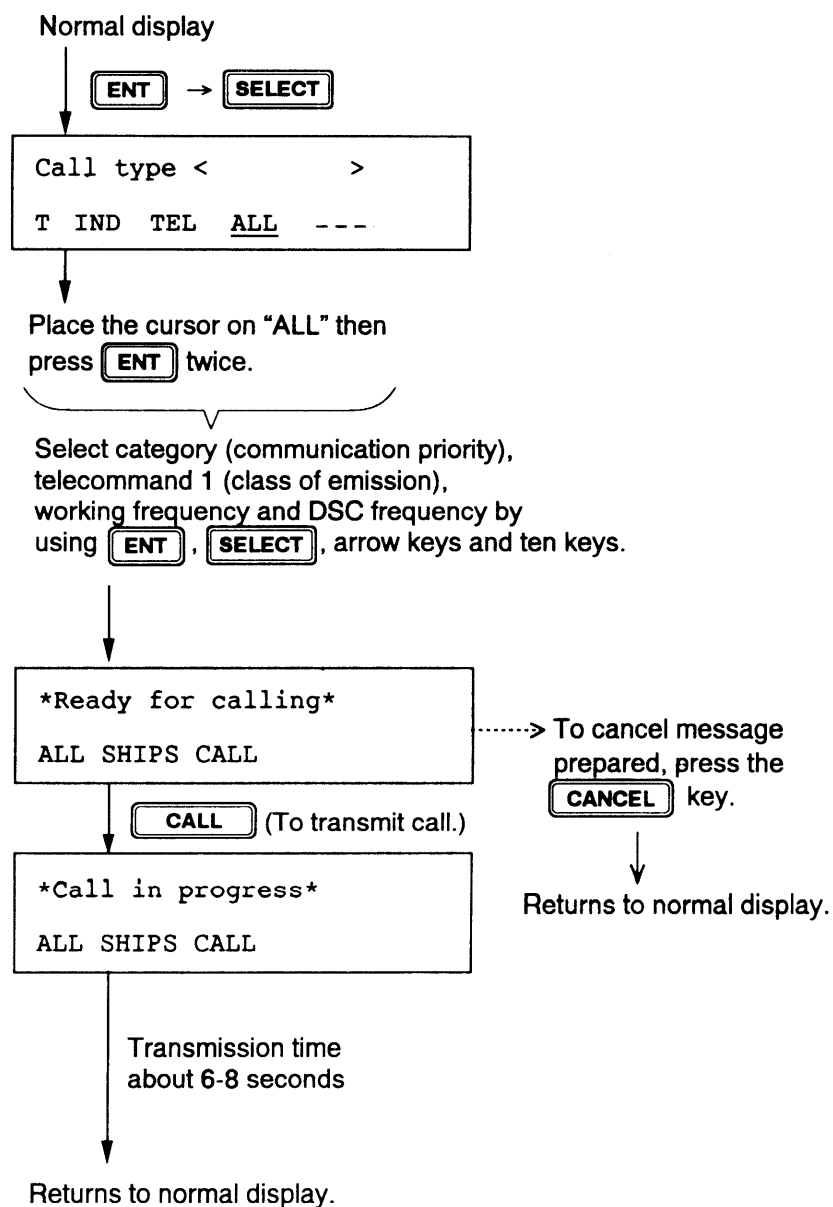

Preparing and storing message for later transmission

Prepare messages excluding distress message and save them to the memory (Maximum 99 files). You may retrieve and transmit a memory-stored message as follows.

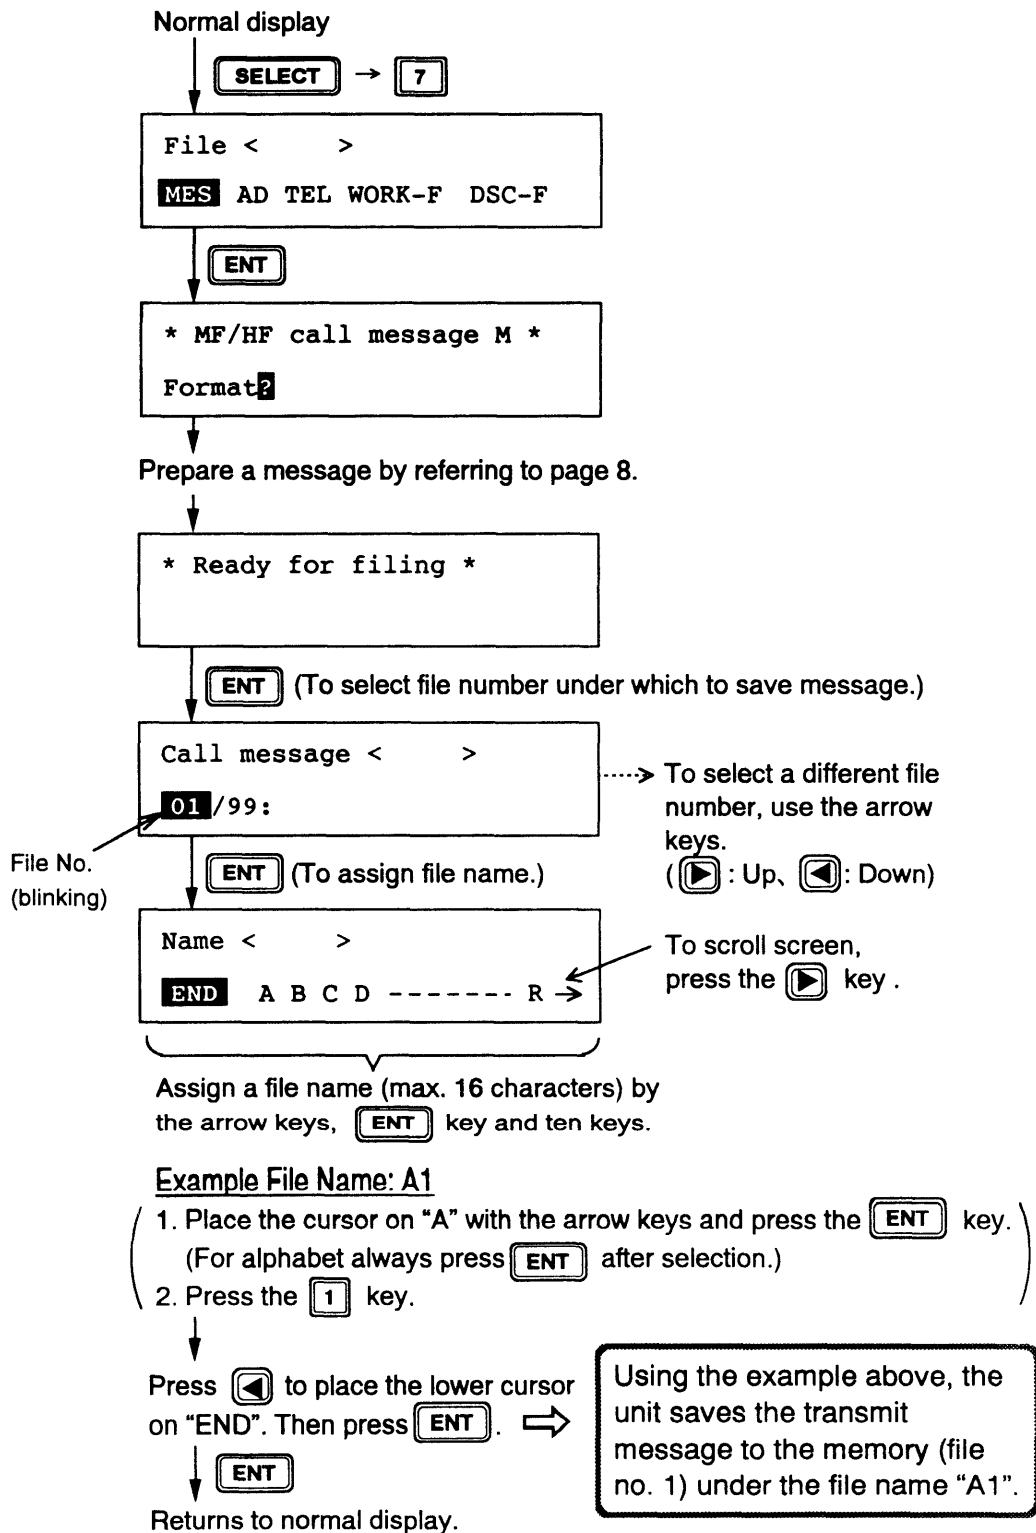


Transmitting a file (at normal display)


7 (FILE) → (Enter file no.) → **CALL**

7. Receiving a Message

(1) Receiving "All Ships Call"

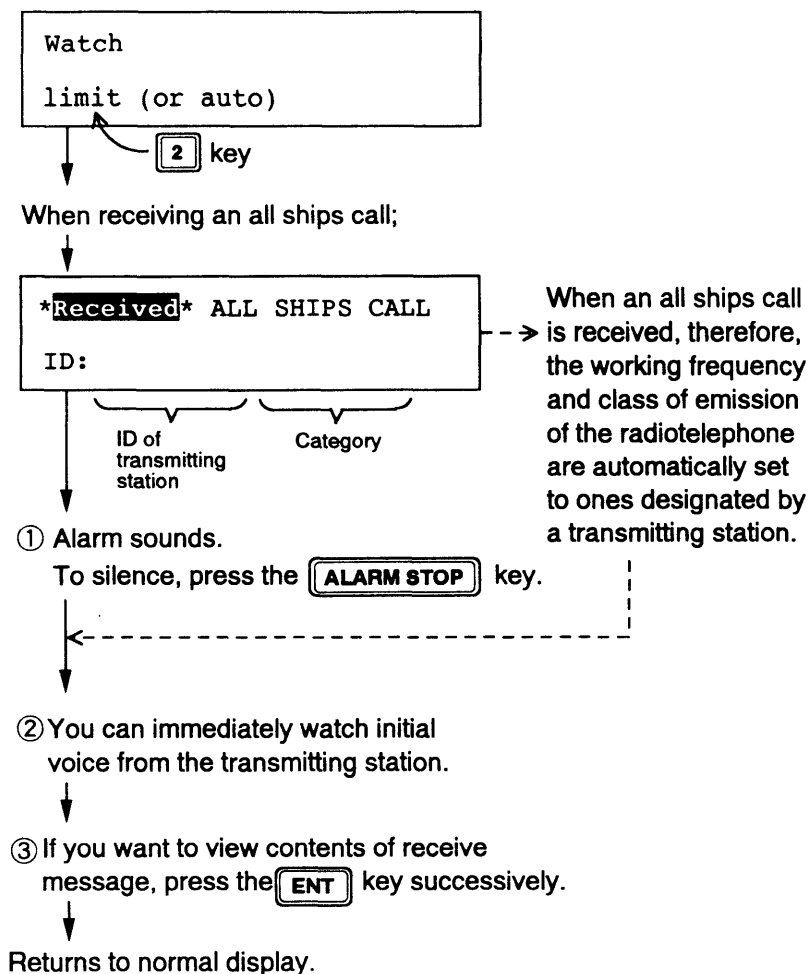


(2) Receiving "Individual Call" (Auto Ack: ON, Comply status: ABLE)

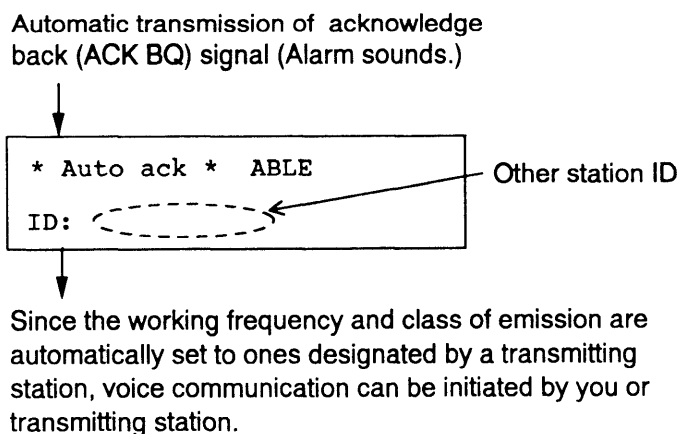

8. Setting Up


The Setup menu appears by pressing the **SELECT** key at the normal display.

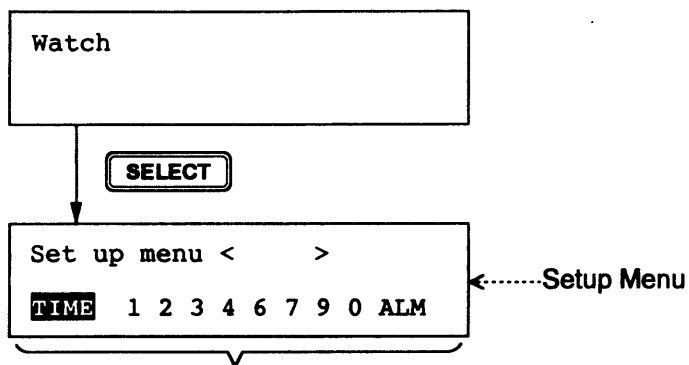

Set date, etc., as shown in the following procedure.

(1) Entering date, time

Select "TIME".

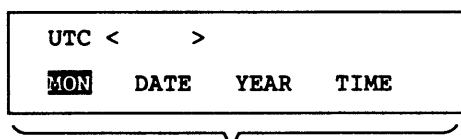

Enter month, day, year and time in that order.

Example: 1993, October 5, 14:30;


[1][0] ► **[0][5]** ► **[1][9][9][3]** ► **[1][4][3][0]**
October 5 1993 14:30

↓
Press **ENT**.

(2) Setting the printer

Select "4".


Then, select whether you want automatic or manual printing.

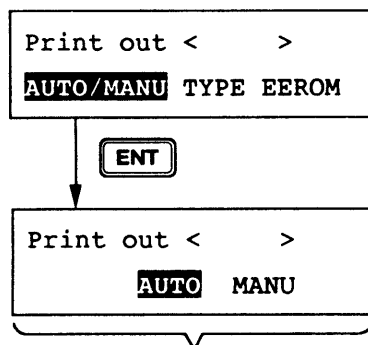


Select one and press **ENT**.

(3) Selecting monitor line

Select “6”. You can turn key response beep on or off, and select which line to monitor (by aural tone).

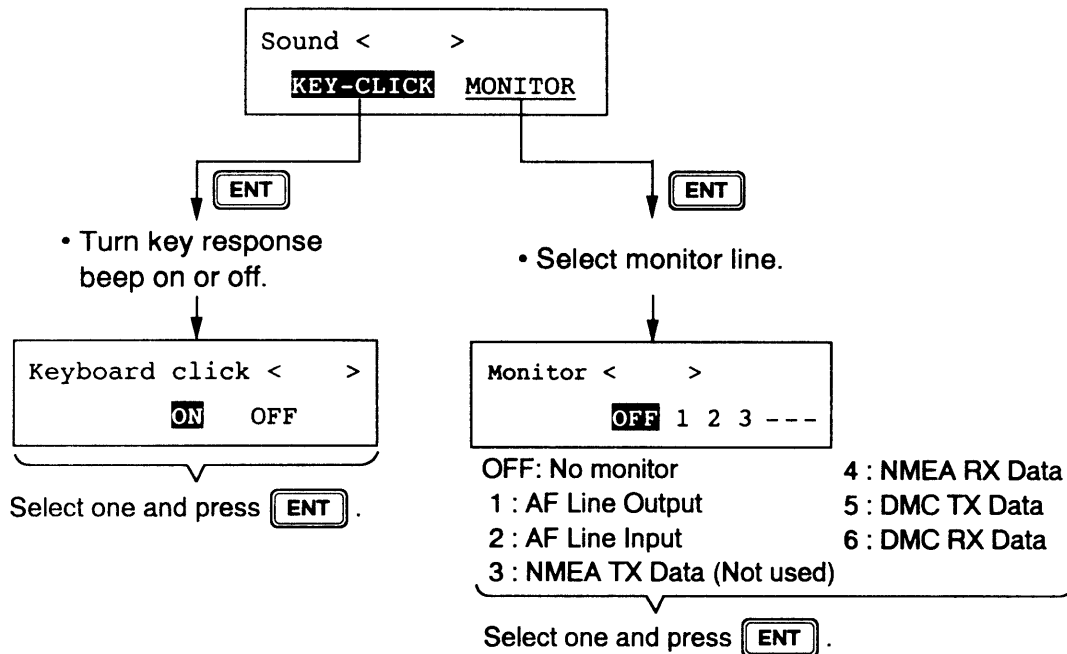

(4) Setting receive alarms

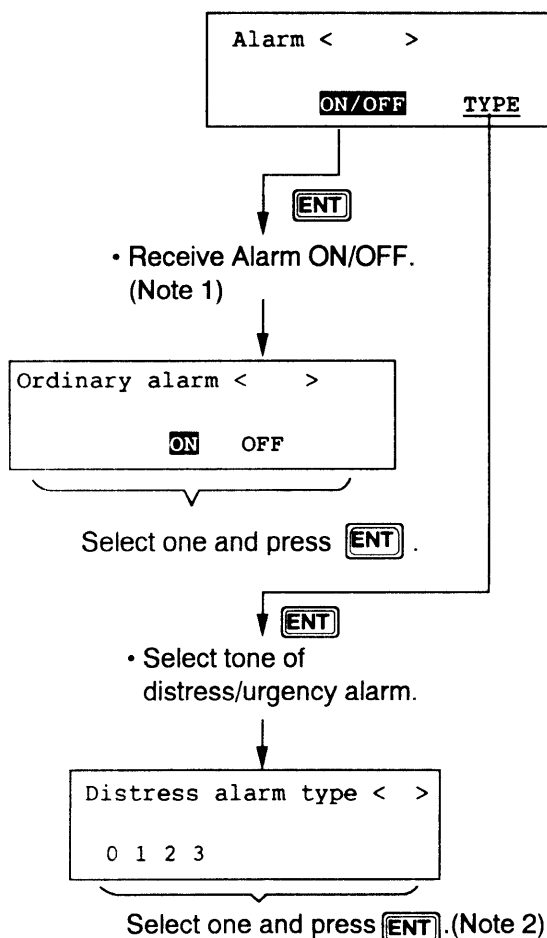


Note 1: Distress/urgency alarm always sounds at maximum volume.

Note 2: The tone specifications of the distress/urgency alarm are as follows.

Key to press	Tone Specifications	
	Frequency (Hz)	Interval (ms)
0	2200	Continuous
1	1300 and 2200	250
2	1300 and 2200	125
3	3290	Continuous
4	1945 and 3290	250
5	1945 and 3290	125
6	1100	Continuous
7	650 and 1100	250
8	650 and 1100	125
9	2200 and 0	250

(5) Programming scan frequencies

Select "0". Six general DSC frequencies (F1 to F6) can be programmed.

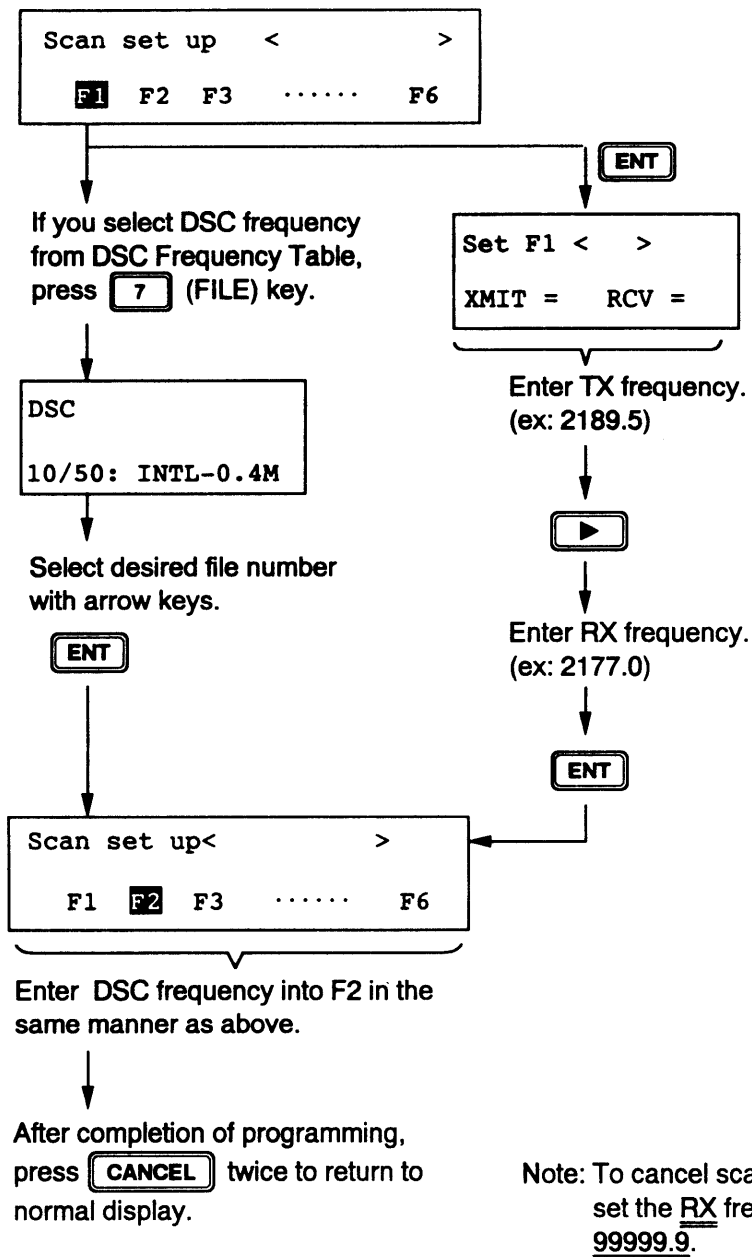


9. Transmit and Receive Message Memory

All transmitted and received messages are automatically saved to the memory.

Retrieving a transmit message (Memory Capacity: 50 messages)


Press the **[9]** (XMTD) key at the normal display.

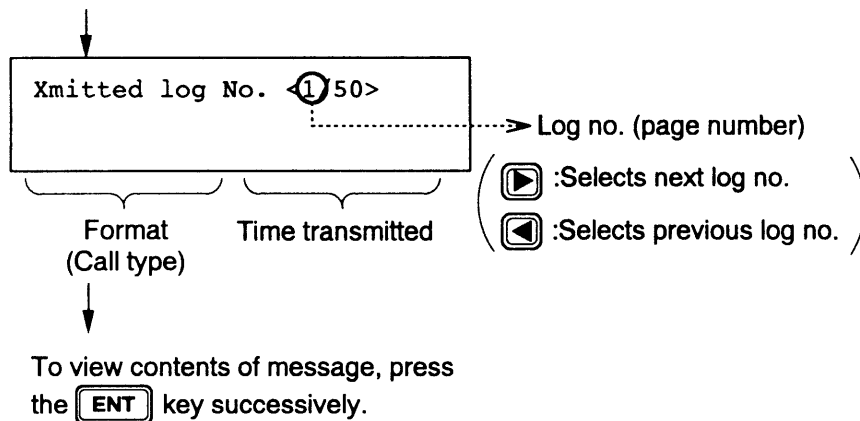


Retrieving a receive message

(Memory Capacity: 50 for distress, 50 for other than distress)

Press the **[8]** (RCVD) key at normal display.

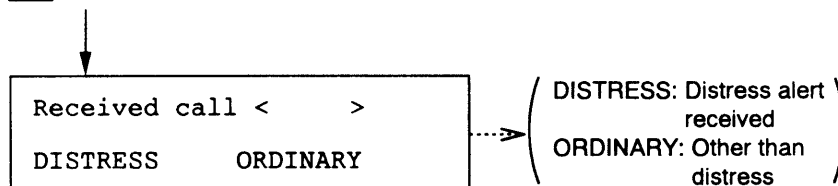

For example, "ORDINARY" log;

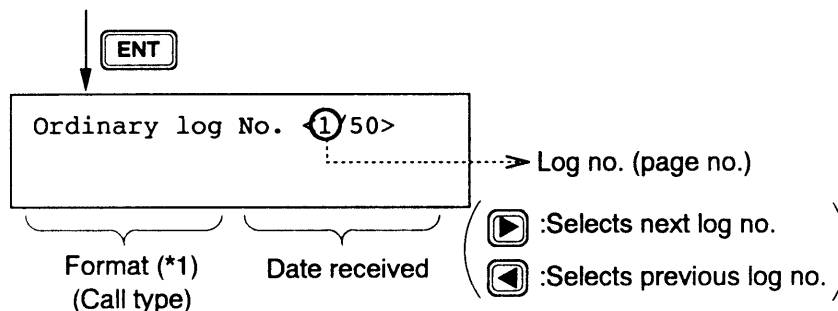

To view contents of message, press the **ENT** key successively.

(*1): If own ship did not transmit "ACK BQ" (acknowledge back) signal a blinking sharp symbol (#) appears at head of Format.

10. Self-Test

Press the **[3]** key at the normal display. (Set the frequency of radiotelephone other than 2182 kHz.)

