# **FURUNO USA**

# A3 GMDSS CONSOLE DAILY TEST MANUAL

**MODEL: RC18xx Series** 

# TABLE OF CONTENTS

This manual contains the daily self-tests for all equipment in the Furuno USA GMDSS console. These tests are to assist in determining the daily operational status of console and its associated equipment.

A daily test log is included and is to be used as a supplement for the current ship's radio log.

1.	Felcom 18	1
2.	FM-8900	. 2
3.	FS-1575/FS-2575	. 3
4.	IB-585	, <b>4</b>
5.	Daily Test Log	5

#### 1.1 Felcom 18


#### 1.1.1 Testing

- 1) Log out the unit.
- 2) Press the [F7], [8], and then [3] to enter the self-test.
- 3) Select Yes, and press the [Enter] key.
- 4) All tests should be OK. If any errors are shown, record them and contact your Furuno agent.
- 5) Press the [Esc] key to end.


#### 2.1 FM-8900

#### **2.1.1** Testing

1) Press the [MENU] key, then use the rotary knob to select [TEST].

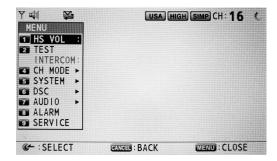

2) The test will now begin.

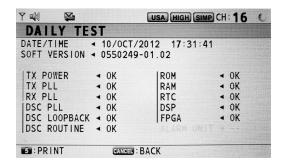


- 3) Press [4] to print the test. Record any errors and contact your Furuno agent.
- 4) Press the [CANCEL] key to end the test and reurt to the main RT screen.


#### 3.1 FS-1575/FS-2575

#### 3.1.1 Daily Test

1) At the RT screen press the [4], Daily Test, key.

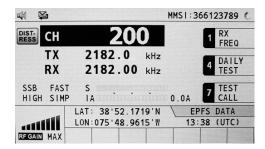

2) The self test will run.

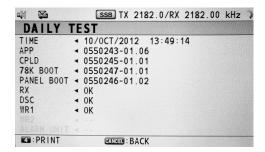

- 3) After the test press [4], to print the results.
- 4) Record any errors and contact your Furuno agent.
- 5) Press the [CANCEL] key to end the test and return to the RT screen.

#### 4.1 IB-585

#### **4.1.1 Testing**

- 1) Press the [F6] key to begin.
- 2) Use the arrow keys to select **Change**.
- 3) Use the down arrow key to select **Self Test**.
- 4) Press the [Enter] key to start the test.
- 5) If **NG** appears, record the error and contact your Furuno agent.
- 6) Press the **[Esc]** key to end.

### DAILY TEST LOG

Month			Year				
Day	<u> </u>	<u> </u>	<u> </u>	<u> </u>			<u> </u>
2 43	Sunday	Monday	Tuesday	Wednesday	Thursday	Friday	Saturday
	OK	OK	OK	OK	OK	OK	OK
Felcom 18							
FM-8900 #1							
FM-8900 #2							
FS-1575							
FS-2575							
IB-585							
IC-350							
Initials:							
Notes:							
<u> </u>				·			