


FR10 FR12 Display

Software Update Instructions



Procedure



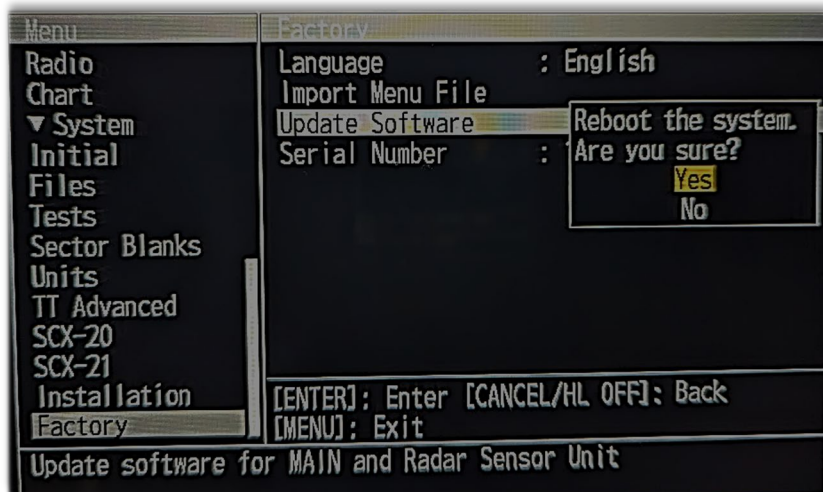







- ① Insert the prepared USB memory with program into USB port of the FR-10/12.
- ② Press [MENU] key on the FR-10/12 to open the menu screen.
- ③ While holding down the [CANCEL/HL OFF] key, briefly press [MENU] key five times.
*This operation enables the special equipment setup menu.
- ④ Press the arrow key to move to the following menu items.
[SYSTEM] ⇒ [Factory] ⇒ [Software Update]
- ⑤ After pressing [ENTER] key, select “YES” .



- ⑥ The FR-10/12 display screen now transitions to 「Now Updating...」
*The name of the program being updated is displayed. (“[RDP] FR-10/12 Program etc.)
*The update of the antenna unit will be executed after the update of the FR10-12 is complete.
*Please do not turn off the power to the FR-10/12 until the update is complete
- ⑦ When the update is complete (successful) “Completed” is displayed on the screen and the FR-10/12 automatically restarts.
*If “failed” is displayed, turn off the power to the FR-10/12 and re-execute the steps 2 thru 6.
- ⑧ Open the menu screen and move through the following menu items.
[System] ⇒ [File] ⇒ [Remove USB Memory]
- ⑨ After pressing the [ENTER] key, select “YES” and remove the USB memory from the FR10-12.
*When the removal is completed, the message “Completed” will appear.

PROCESS COMPLETED: Power cycle machine and ensure proper operations.

Informational supplement regarding required USB memory file structure

 FR-10_12 <i>(Main display program and connected radar programming)</i>	
	 Update
	FR-10_12.bin
	idcode.sys
	Loader.bin
	Update.ini
	 DRS2D4D_NXT
	 DRS6A12A25A_NXT_ENG
	 DRS4DX
	 DRS6A12A25AX
	 DRS4DL_PLUS
 RP002	
	 Update
	 OS
	ubootuppgA.bin
	bootuppg.bin
	systemuppg.bin
	updateconfig.bin
	version.ini

RP update files.
(Used when optional RP module has been installed into FR12.)