

**NAVnet**  
*TZ2*  
touch

**IF-NMEA2k2 Software  
Update Procedure  
Using TZT2**

# Preperation for IF-NMEA2k2 Software update


1. USB memory (Do not use SD to USB Adapter)



2. Download IF-NMEA2k2 Software for the TZT2 from the Furuno USA website under the “Software” selection of the IF-NMEA2k2 product page.

3. Unzip IF-NMEA2k2 Software

4. Move unzipped software contents to root of USB memory. Root of USB memory will contain the following only:

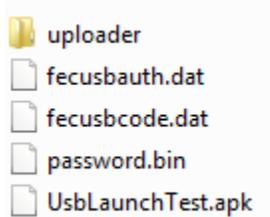


(Note: When you open your USB memory window, you should see only the files shown above. They should not be changed or placed inside any additional folders. Other software, photos, or files should NOT be on the USB along with this upgrade software)



5. With the power off to the MFD. Insert USB memory into the USB pigtail cable located on the back of the TZT2 MFD. This will be a white pigtail cable. Power on the TZT2 MFD and boot up normally.

You are now ready to begin the IF-NMEA2K2 software update

### 1. Press Home Button

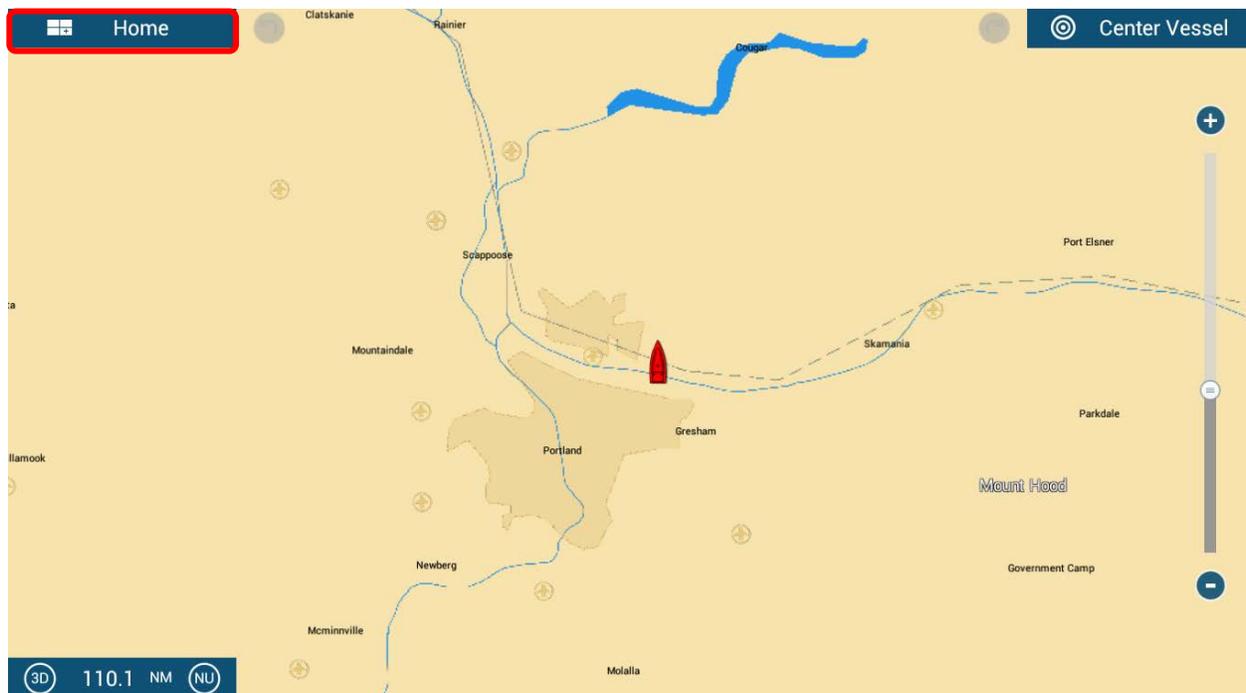


### 2. Press Settings




### 3. Press Initial Setup




### 4. Press Update Network Equipment

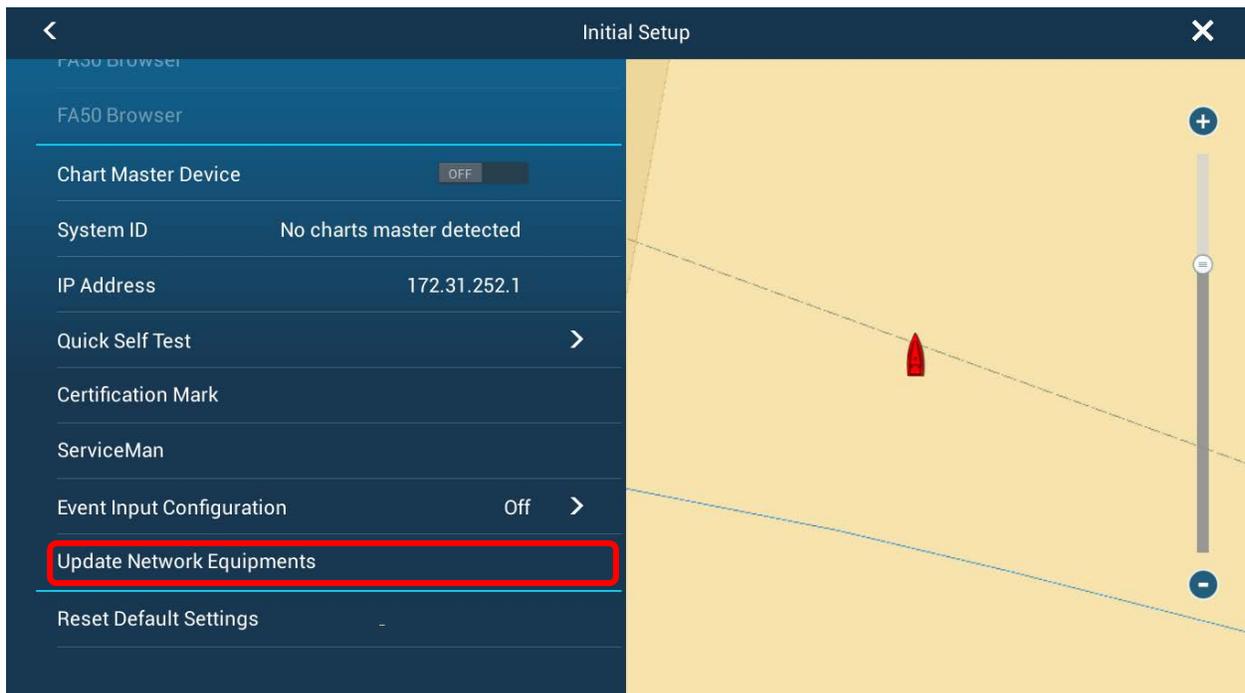

**5. If IF-NMEA2K2 is not recognized Press **Scan****

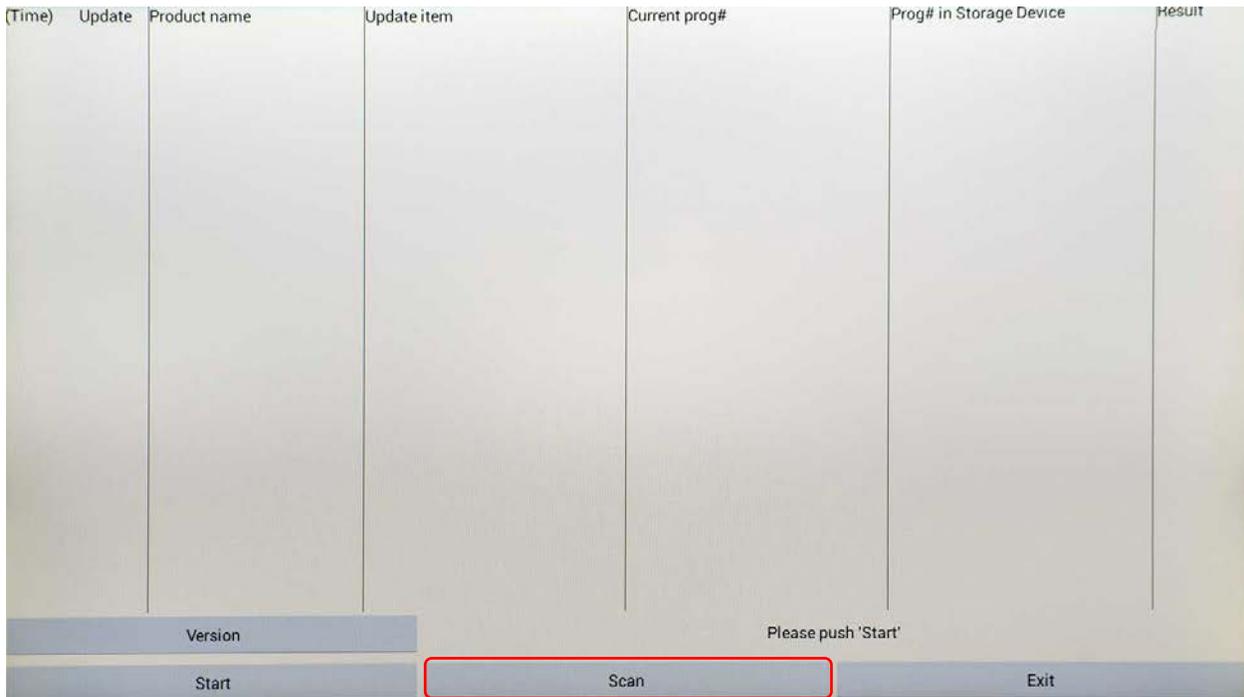


**6. Make sure the Update Box is checked for IF-NMEA2K2 then press **Start** and acknowledge the update to begin the Update process.**

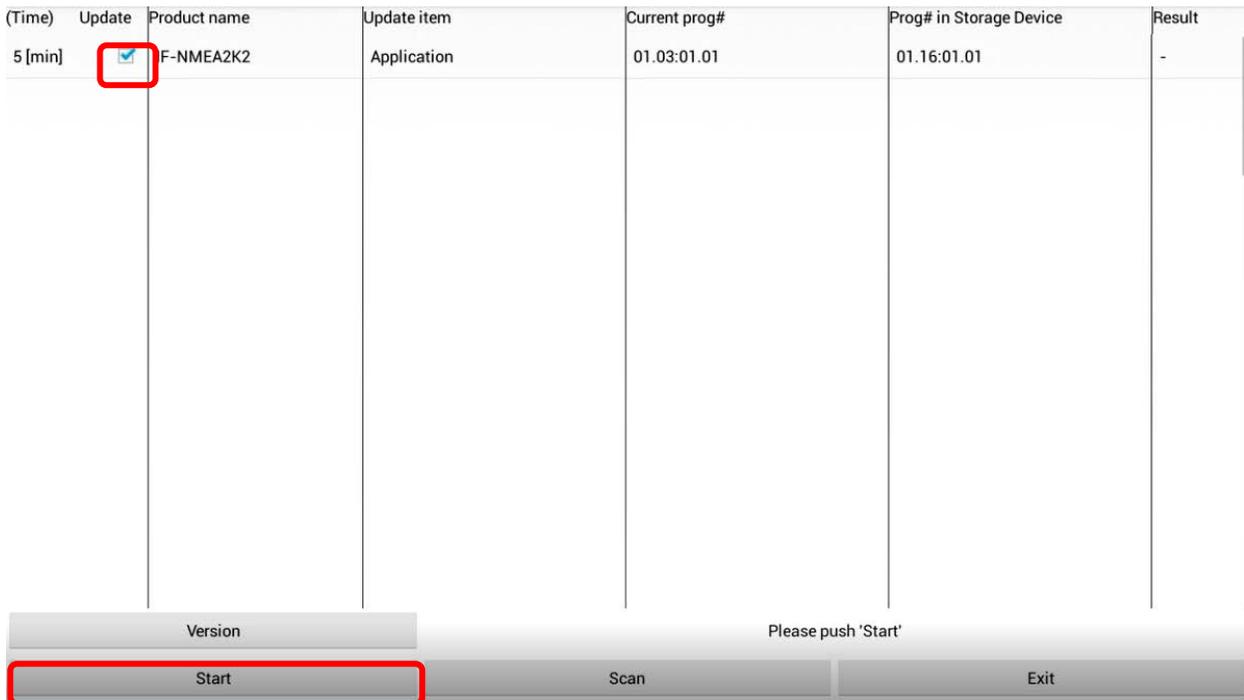

7. You will be notified once the update process is finished.

Press **Ok** and then press **Exit**

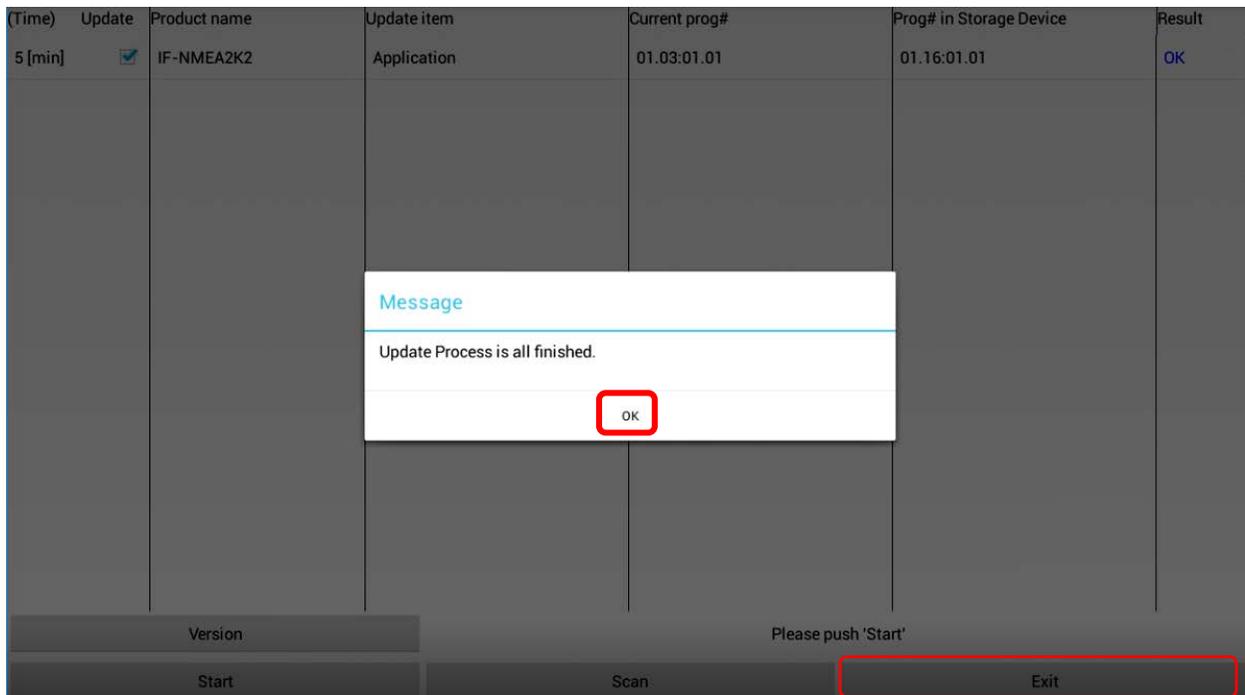

The unit will reboot back to normal mode. You may now remove the USB memory.

# How to verify IF-NMEA2K2 has been successfully updated.

1. Access the **Initial Setup** menu. Press **Sensor List**



2. Verify that the updated software version is displayed.  
(v1.16 is shown in this example)

A screenshot of a table titled 'CAN BUS SENSOR'. The table has five columns: Name, NickName, Version, Instance, and HostName. The first row shows a network sensor: Name 'TZTL15F (Me)', NickName 'TZTL15F', Version '06.21:06.21:06.23:', IP '172.031.252.001', and HostName 'MF252001'. The second row shows a CAN bus sensor: Name 'IF-NMEA2K2', NickName 'IF-NMEA2K2', Version '01.16:01.01', Instance '0', and HostName (empty). The '01.16:01.01' version number is highlighted with a red rectangular box.

NETWORK SENSOR				
Name	NickName	Version	IP	HostName
TZTL15F (Me)	TZTL15F	06.21:06.21:06.23:	172.031.252.001	MF252001
CAN BUS SENSOR				
Name	NickName	Version	Instance	HostName
IF-NMEA2K2	IF-NMEA2K2	01.16:01.01	0	