

FURUNO

OPERATOR'S MANUAL

DOPPLER SPEEDLOG

Model **DS-50**

ECF

(Elemental Chlorine Free)

The paper used in this manual
is elemental chlorine free.

FURUNO ELECTRIC CO., LTD.

9-52 Ashihara-cho,
Nishinomiya, 662-8580, JAPAN

• FURUNO Authorized Distributor/Dealer

All rights reserved. Printed in Japan

Pub. No. OME-72410-P2

(ETMI) DS-50

A : APR. 1996

P2 : FEB. 01, 2019



0 0 0 8 0 7 5 6 8 1 3

IMPORTANT NOTICES

General

- The operator of this equipment must read and follow the descriptions in this manual. Wrong operation or maintenance can cancel the warranty or cause injury.
- Do not copy any part of this manual without written permission from FURUNO.
- If this manual is lost or worn, contact your dealer about replacement.
- The contents of this manual and equipment specifications can change without notice.
- The example screens (or illustrations) shown in this manual can be different from the screens you see on your display. The screens you see depend on your system configuration and equipment settings.
- Save this manual for future reference.
- Any modification of the equipment (including software) by persons not authorized by FURUNO will cancel the warranty.
- All brand and product names are trademarks, registered trademarks or service marks of their respective holders.

How to discard this product


Discard this product according to local regulations for the disposal of industrial waste. For disposal in the USA, see the homepage of the Electronics Industries Alliance (<http://www.eiae.org/>) for the correct method of disposal.

How to discard a used battery

Some FURUNO products have a battery(ies). To see if your product has a battery(ies), see the chapter on Maintenance. Follow the instructions below if a battery(ies) is used.


In the European Union

The crossed-out trash can symbol indicates that all types of batteries must not be discarded in standard trash, or at a trash site. Take the used batteries to a battery collection site according to your national legislation and the Batteries Directive 2006/66/EU.

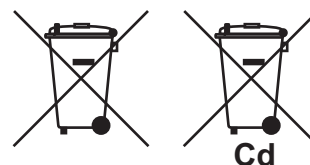

In the USA

The Mobius loop symbol (three chasing arrows) indicates that Ni-Cd and lead-acid rechargeable batteries must be recycled. Take the used batteries to a battery collection site according to local laws.

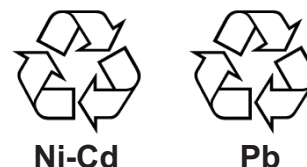

In the other countries

There are no international standards for the battery recycle symbol. The number of symbols can increase when the other countries make their own recycling symbols in the future.



SAFETY INSTRUCTIONS



WARNING



ELECTRICAL SHOCK HAZARD
Do not open the equipment.

Only qualified personnel should work inside the equipment.

Immediately turn off the power at the switchboard if water leaks into the equipment or an object is dropped into the equipment.

Continued use of the equipment can cause fire or electrical shock. Contact a FURUNO agent for service.

Do not place liquid-filled containers on the top of the equipment.

Fire or electrical shock can result if the liquid spills into the equipment.

Do not disassemble or modify the equipment.

Fire, electrical shock or serious injury can result.

Keep the equipment away from rain and water splash.

Fire or electrical shock can result if the rain or water gets into the equipment.

Do not operate the equipment with wet hands.

Electrical shock can result.

Keep heater away from equipment.

A heater can melt the equipment's power cord, which can cause fire or electrical shock.

Use the proper fuse.

Fuse rating is shown on the equipment. Use of a wrong fuse can result in damage to the equipment.



CAUTION

Do not use the equipment for other than its intended purpose.

Improper use of the equipment can result in personal injury or equipment damage.

Turn off the equipment immediately if you feel it is abnormal.

Turn off the power from the switchboard if the equipment is emitting strange noises or becomes excessively hot. Contact your dealer for advice.

The useable ambient temperature range is 15°C to 55°C.

Do not use the equipment out of the above temperature range.

Do not place objects around the equipment.

Overheating may result.

Do not power the equipment when the transducer is in air.

The transducer may become damaged.

Handle all units carefully.

Damage can lead to corrosion.

Do not use chemical cleaners such as alcohol, acetone and benzene to clean the equipment.

Chemical cleaners can remove paint and markings. Use only a soft, dry cloth. For stubborn dirt, use a soft cloth moistened with water-diluted mild detergent.

When dry docked remove marine life from the transducer.


Remove marine life to maintain good sensitivity.

Do not paint the transducer face. Further, handle the transducer with care.

Paint will affect equipment performance.

WARNING LABEL

A warning label is attached to the units shown right. Do not remove the labels. If a label is missing or is illegible, contact a FURUNO dealer or agent about replacement.

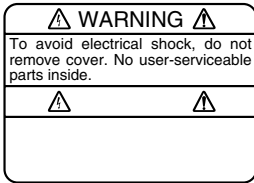


Name: Warning Label (1)
Type: 86-003-1011-1
Code No.: 100-236-231




MAIN DISPLAY UNIT
DS-500

Warning label

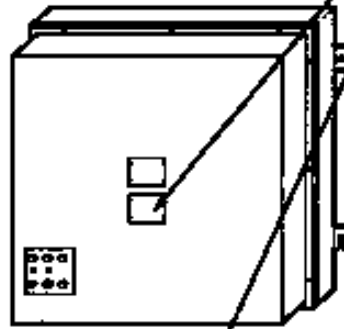

PROCESSOR UNIT
DS-510, DS-511

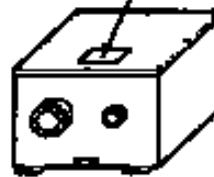

TRANSCIVER UNIT
DS-520

TABLE OF CONTENTS


INTRODUCTION	1
SPECIFICATIONS	2
SYSTEM CONFIGURATION	5
OPERATION	6
Controls and Indications on the Main Display Unit	6
Turning on the Power, Adjusting Panel Dimmer	8
Selecting Speed Tracking Mode	9
Selecting Unit of Speed Measurement	9
Displaying Distance Run or Keel Clearance	9
Setting Distance Run	10
System Settings	11
CONTROL BOX (option) OPERATION	13
MAINTENANCE & TROUBLESHOOTING	14
Preventive Maintenance	14
Troubleshooting	15
Operation Checks	15
Error Displays	17
Program Number	17
PRINCIPLE OF DOPPLER SPEED LOG	18
DIGITAL INTERFACE (IEC 61162-1 EDITION 2)	19
LIST OF ABBREVIATIONS.....	22
Declaration of Conformity	

INTRODUCTION

The FURUNO DS-50 is a highly advanced, precision Doppler Speed Log incorporating FURUNO's advanced computer technology. The DS-50 provides accurate display of speed over a wide range from dead slow to 40 kn. Speeds are detected relative to ground or water both fore/aft and athwart ship. This feature ensures the safety and efficiency of navigation for ships operated under SOLAS 1974 and other ships.

Features

- Ground speed and water speed measurements. Three beam arrangement for highly accurate and stable measurement.
- Highly accurate speed measurement in shallow waters with under keel clearance as little as 1 meter, enabling close control of speed for safe berthing and anchoring operations.
- Ground tracking speed measured between 1 and 200 meters for accurate speed measurement in coastal waters.
- Wide variety of both analog and digital displays optionally available for remote monitoring.
- Analog speed data and distance run signal, fed to various onboard equipment for improving bridge automation.
- Conforms to the following standards: IMO A.824(19), as amended by MSC.96(72), IMO A.694(17), IEC 61023, IEC 60945 (3rd edition), IEC 61162-1 (2nd edition).

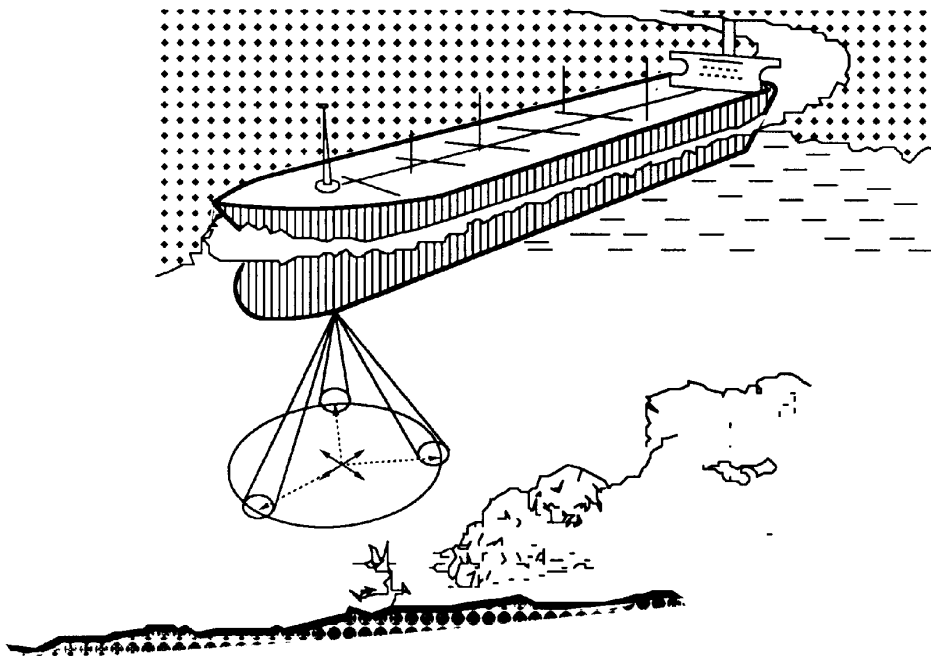

SPECIFICATIONS

General Specifications

1. **Ultrasonic frequency** 440 kHz
2. **Number of beams** 3 beams for dual-axis speed indication
3. **Measuring range and accuracy**
 - Ship's speed Fore/aft: -10.0 to +40.0kn
Port-Starboard: -9.9 to +9.9kn
 - Working depth Ground tracking: 1 to 200 m beneath the keel
Water tracking: 3 to 25 m below hull bottom. (It will change by installation conditions and surrounding water conditions of transducer. The measuring accuracy will be reduced for the depth shallower than 30 m.)
 - Total distance run 0 to 99999.99 NM
 - Accuracy (ship's speed) 1.0% or 0.1kn, whichever is greater. Rolling $\pm 10^\circ$, pitching $\pm 5^\circ$
4. **Display**
 - Main display unit LED, Color: orange
 - Digital indicator LCD or LED
 - Nominal viewing distance 1m
 - Brilliance control Duty cycle of ON/OFF
5. **Input/Output signals**
 - Input External keying pulse: 2 ports
 - Output Ship's speed: 2 ports (digital) 1 port (analog or through distribution box)
Distance signal: 1 port (400 p/NM, forward data only)
Distance signal: 6 ports with contact closure signal, 200 p/NM, contact capacity 30 V, max 0.2A, forward data only.
Alarm signal: 1 port (contact closure signal, contact capacity 30 V, max 0.2 A)
Keying pulse: 1 port
 - Digital interface IEC 61162-1 2nd Edition: 2 ports VBW, VTG, VHW, VLW (VTG is not output when these abed is not acquired. Heading data in VTG and VHW is " null".)
6. **Power supply** 100/110/115/220 230 VAC, 50/60 Hz
7. **Environmental conditions**
 - In-bridge units -15°C to +55°C
 - Relative humidity 95% at 40°C
 - Magnetic field No influence

Note: Performance may be affected by air bubbles, interference and other factors.

Specifications of DS-350/351 Digital Display (option)

1. Display device	DS-350: LCD, DS-351: LED
2. Indication	
Speed	Fore/Starboard: □□.□□
Unit	Port/Starboard: □.□□
Direction	↑↓ (Fore/Aft), ↔ (Port/Starboard)
Mode	Ground or Water tracking
Depth (clearance)	□□.□m
3. Other features	Dimmer controls, Mode selector, Unit of speed selector
4. Power consumption	DS-350: 12 VA, DS-351: 44 VA

Specifications of DS-370 Distribution Box (option)

1. Input signal (TTL level)	Digital speed signal Log signal (400 p/NM) Alarm signal Power on/off signal
2. Output signal	The following output boards are available optionally.
(1) OTX board	Serial signal for DS-350/351 Digital Indicator and/or cascade connection of DS-370 Distribution Box (1 port /1board)
(2) ODD board	BCD serial signal for DS-720/DS-370/DS-377 Digital Display (Analog current signal for analog display, 1 board), -2.5mA to 10.0 mA/-10kn to 40kn or -3.33mA to 10.0mA/ - 10kn to 30kn
(3) OAD board	Analog current signal for analog display, 1 board, -2.5mA to 10.0 mA/-10kn to 40kn or -3.33mA to 10.0 mA/-10kn to 30kn
(4) OLG board	For Distance Indicator (1 port /1 board) and Log signal (3 ports /1 board, 200/400 p/NM contact closure signal, 30V/0.2A or RS-422 current loop signal). One Log signal port can be modified for Fore/aft status signal port (contact closure signal, 30 V/0.2A or RS-422 current loop signal).
(5) OAC board	Ship's speed current voltage signal (1 port /1 board), Current signal (4.0mA to 20.0 mA/-10kn to max, speed, max impedance: 250 ohms)
(6) OAV board	Ship's speed voltage signal (1 port / 1board), voltage signal (-2.50 to 10.0 V/-10kn to 40kn, -3.33 V to 10.0 V/-10kn to 30kn, -4.00 V to 10.0 V/-10kn to 25kn, -5.00 V to 10.0V/-10kn to 20kn,max,impedance: 1 kohm)+ Fore aft status signal (RS-422 current loop)
3. Power supply and power consumption	115/230 VAC, 1φ,50/60 Hz, 50 VA max

Specifications of DS-381SeriesAnalogDisplay (option)

- | | |
|----------------------|-------------------|
| 1. Indication system | Dual range system |
| 2. Panel dimensions | φ200 mm |
| 3. Power consumption | 5 VA approx. |

Specifications of DS-382SeriesAnalogDisplay (option)

- | | |
|----------------------|-------------------|
| 1. Indication system | Dual range system |
| 2. Panel dimensions | φ200 mm |
| 3. Power consumption | 5 VA approx. |


Specifications of DS-501 Control Box (option)

- | | |
|------------------------|-------------|
| 1. Installation method | Flush mount |
| 2. Power consumption | 200mW max |
| 3. Illumination | LED |

Specifications of DS-760 Series Analog Display (option)


- | | |
|----------------------|--|
| 1. Indication range | -10 to 30kn |
| 2. Panel dimensions | DS-761/762: φ200 mm
DS-763: φ100 mm |
| 3. Power consumption | 5 VA approx. |

SYSTEM CONFIGURATION

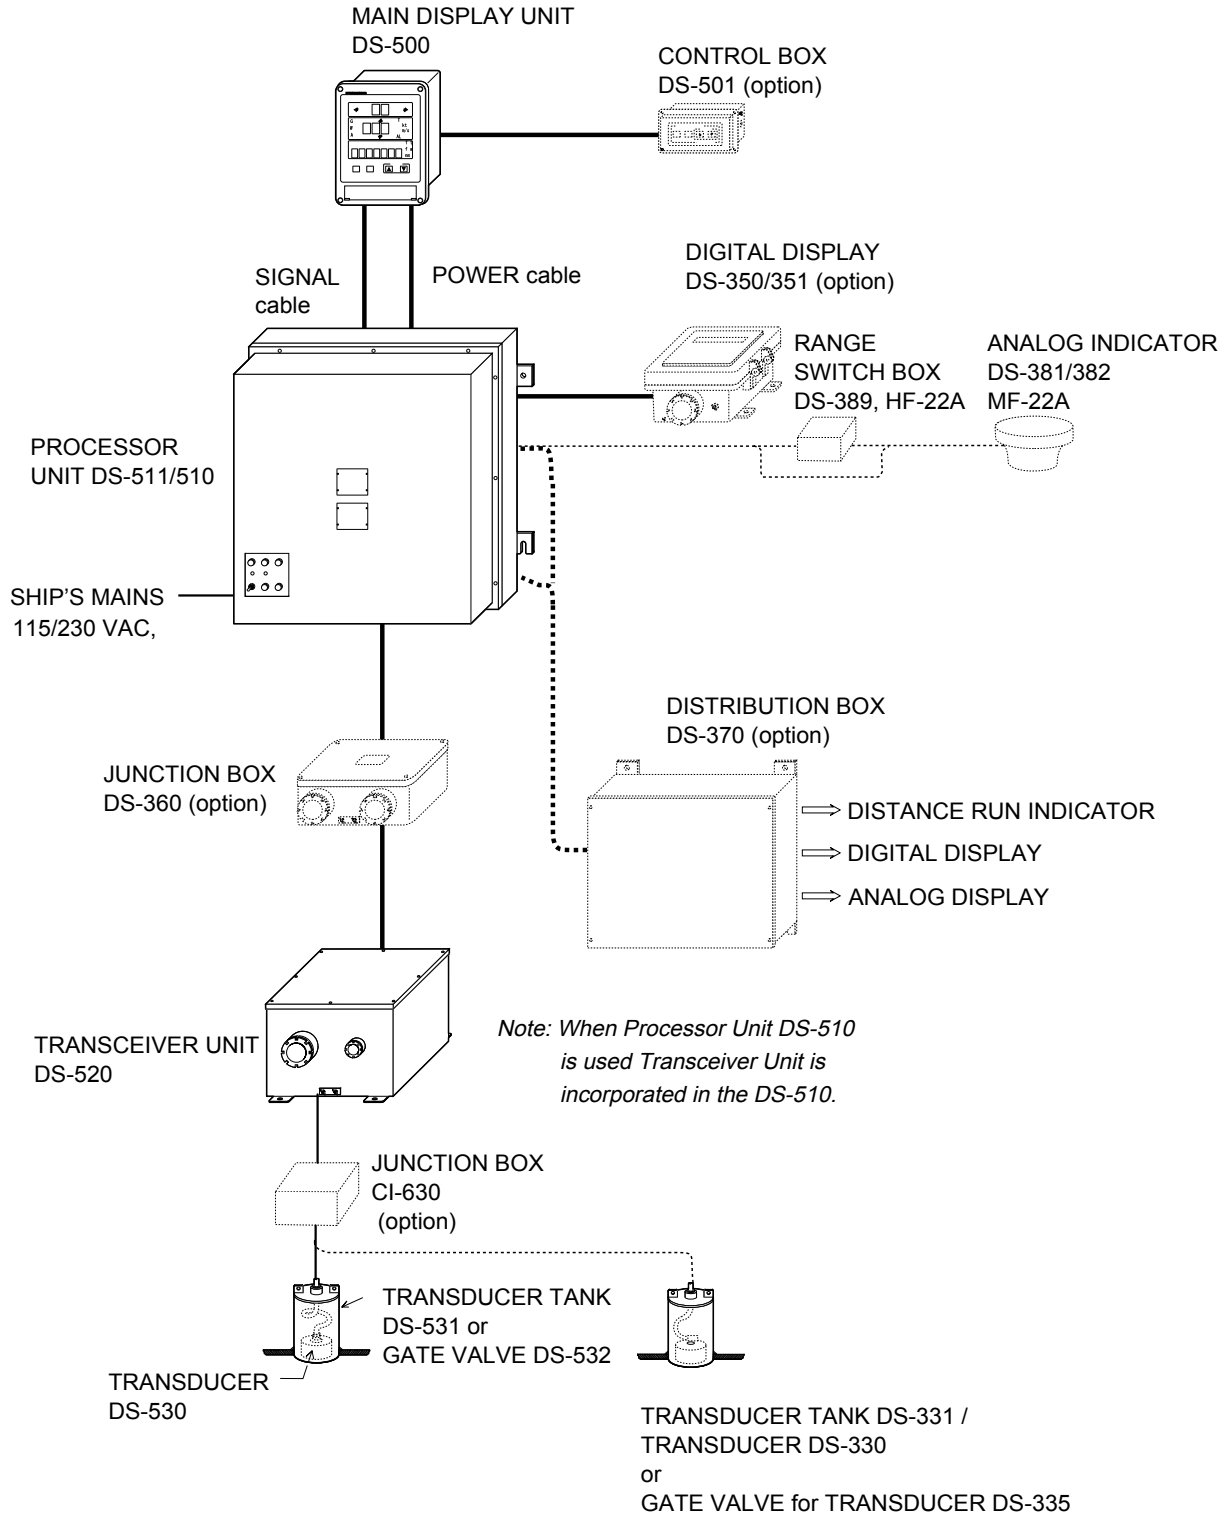

OPERATION

Controls and Indications on the Main Display Unit

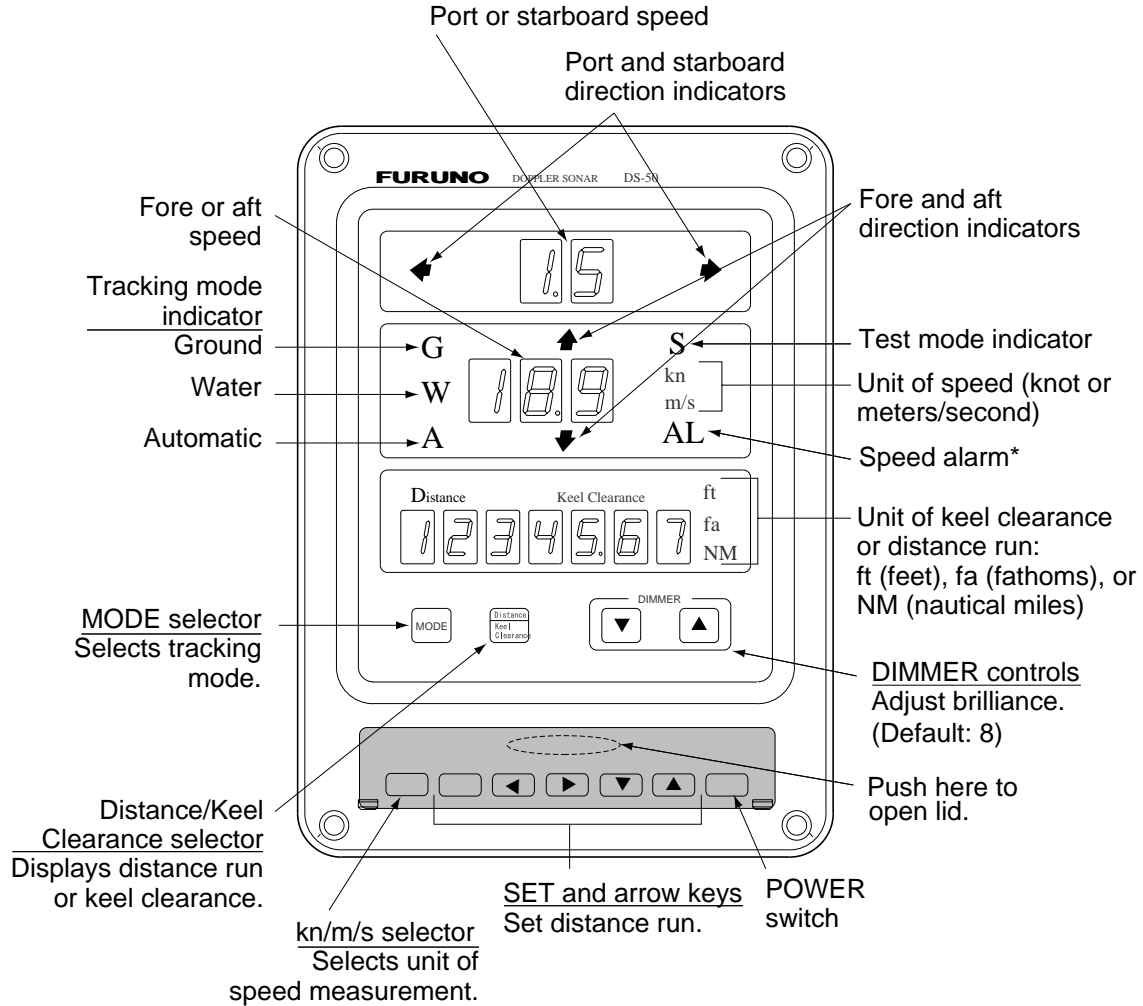

*: If a speed error occurs, the "AL" lights in red.
When the normal speed is restored, this indication disappears.

Note: Performance may be affected by air bubbles, interference and other factors.

Control description

Main controls


MODE selector Selects tracking mode among ground, water and automatic. Each time the key is pressed the tracking mode changes in the sequence of ground, water and automatic. Current tracking mode is denoted by the tracking mode lamps.

Distance/Keel Displays distance run or depth below keel at each pressing.

Clearance selector "Distance" or "Keel Clearance" lights to show current selection.

DIMMER controls Adjust panel brilliance.

Controls in compartment

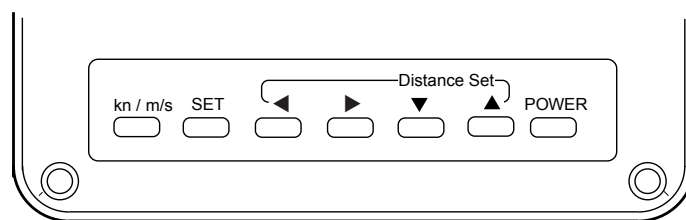

kn/ m/s selector Selects the unit of speed measurement; knots or meters/second.

SET key Sets distance run display.


Arrow keys Set the distance run indication.

POWER switch Turns power on and off.


Turning on the Power, Adjusting Panel Dimmer

1. Press the [POWER] switch to turn on the power. The equipment is tested in the sequence below:

1) Communications test between main display unit and the processor unit is conducted. Three zeroes blink about 30 s.

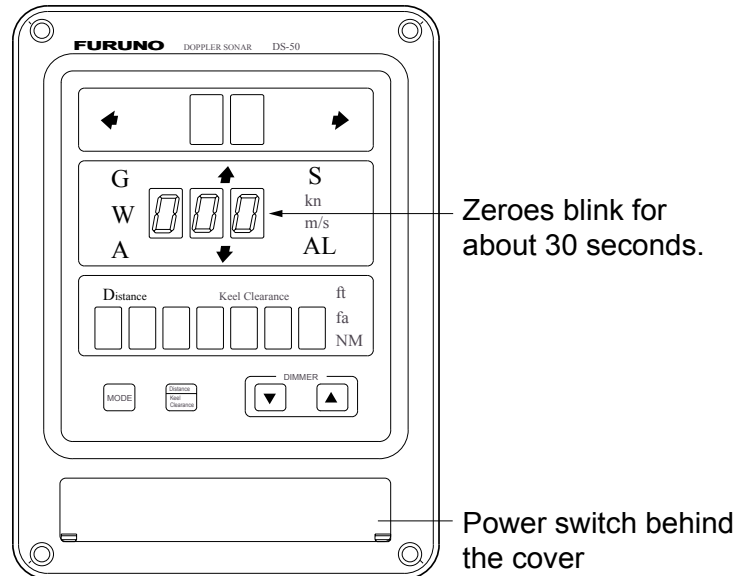

2) Testing of main display and processor unit begins. Memory, LEDs and buzzer are tested in order, each tested eight times consecutively. Then the program version number of both the main display unit and the processor unit appear.

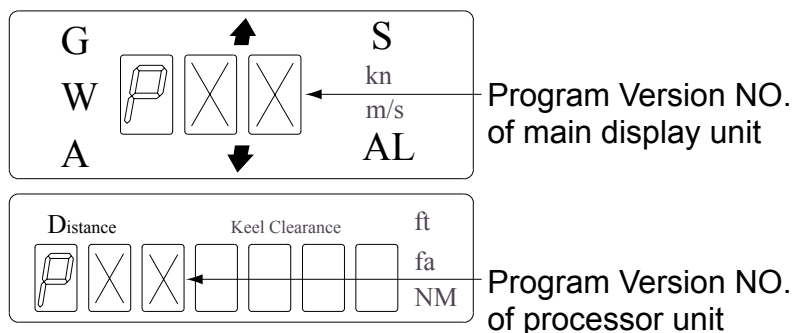

The equipment is normal if the program version nos. appear. If an error is found an error message appears instead of a program version number. Error messages are described on page 16.

3) The normal display appears, showing speed and distance run (or depth below keel).

2. Adjust panel dimmer with the [DIMMER] controls. Press the ▲ or ▼ to increase or decrease the dimmer, respectively. Eight levels of dimmer are available. Selected dimmer appears below the distance run and depth display for 0.5 seconds.

Selecting Speed Tracking Mode

Press the [MODE] selector to select speed tracking mode among water, ground or automatic. Select the mode considering depth and speed. "G", "W" or "A" lights to show mode selected.

G: Measures and displays a speed relative to ground. The depth range usable for this mode is 1 to 200 meters below the keel.

W: Measures and displays a speed relative to the water mass. The depth from the keel to the seabed should be three meters or more.

Note: It is recommended to use the **water tracking mode** in operation with an **ARPA** for collision avoidance task.

A: Automatically selects ground tracking mode or water tracking speed mode depending on depth. Water tracking mode is selected when the keel clearance exceeds 200 meters.

Note: Actual working depth in the ground tracking mode depends on seabed and water conditions, and the reflecting properties for sonic pulses.

Selecting Unit of Speed Measurement

Speed can be measured in knots or meters/second. Press the [kn/ m/s] selector to select the unit. "kn" or "m/s" lights to show the selection.

Displaying Distance Run or Keel Clearance


Press the [Distance/Keel Clearance] selector to display distance run or keel clearance (depth) .

Distance run is always displayed in nautical miles. Keel clearance is the depth from the transducer to the seabed, and can be displayed in meters, feet or fathoms. See page 11 for how to select unit of keel clearance measurement.

Setting Distance Run

The distance run indication is backed up with an internal battery when the power is off. To reset or change the distance run, do the following:

1. Open the lid at the bottom of the display unit and press the [SET] key. The display should look like the illustration below, with the highest digit of distance run blinking.

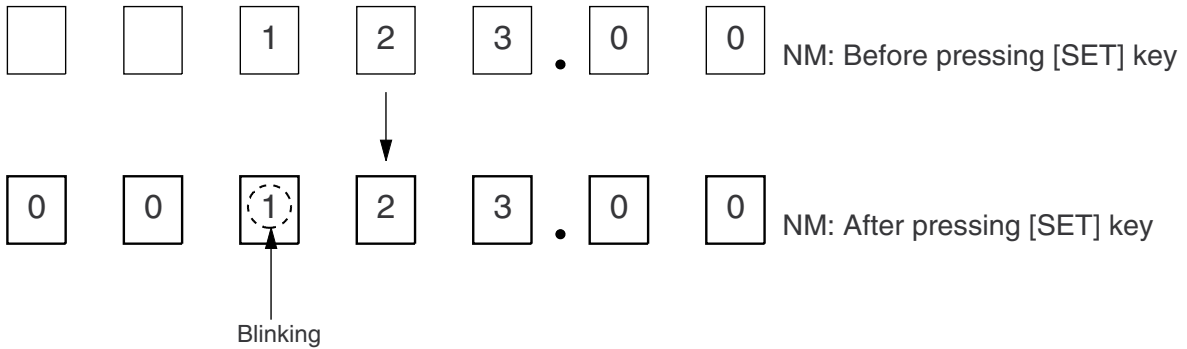

2. Press ◀ or ▶ to place the blinking cursor on the digit to change.
3. Press ▲ or ▼ to set.
4. Repeat steps 2 and 3 to change other digits.

Note 1: Distance run can be reset to zero by entering all zeroes.

Note 2: To restore previous distance run setting, do not operate arrow keys or [SET] key for more than 10 seconds. When this is done the distance run indication stops blinking and then the previous setting is restored. Note that if the ship is moving at this time the distance run indication will change.

5. Press the [SET] key.

System Settings


The system settings do not require frequent adjustment. The table below shows setting range and default setting for each parameter.

No.	Item	Setting Range	Default Setting
1	Ground speed offset	-12.8 to +12.7%, 0.1% steps	0%
2	Water speed offset	-12.8 to +12.7%, 0.1% steps	0%
3	Transducer installation offset	-12.8 to +12.7°, 0.1° steps	0°
4	Trim angle offset	-12.8 to +12.7°, 0.1° steps	0.0°
5	Heel angle offset	-12.8 to +12.7°, 0.1° steps	0.0°
6	Speed averaging	15, 30, 60, 90 sec	15 sec
7	Reference water speed depth	2.0 to 25.0 m, 1 m steps	2 m
8	External KP1 distance	0.0 to +300.0 m, 0.1 m steps	0.0
9	External KP2 distance	0.0 to +300.0 m, 0.1 m steps	0.0
10	Unit of keel clearance measurement	m/ft/fa	m

Note: The above settings are retained with an internal battery when the power is off.

Setting procedure


1. Turn off the main display unit. Turn on the power while pressing and holding down the [Distance/Keel Clearance] selector. "1" indicates system setting no. 1 at the center of the display.

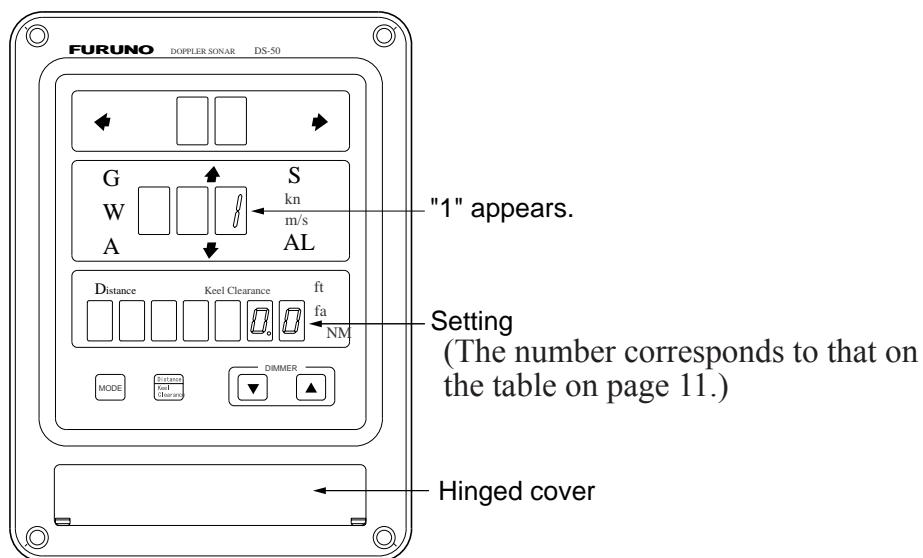


2. Press ▲ or ▼ to select system setting number to be changed.
3. Press ◀ or ▶ to change setting.
4. Press ▲ or ▼ to verify the data entered.
5. Turn off the power, and the new settings are entered in memory.

CONTROL BOX (OPTION) OPERATION

The DS-501 Control Box provides remote operation of the main display unit. The [MODE], [Distance/ Keel Clearance] and [DIMMER] controls function the same as those found on the main display unit.

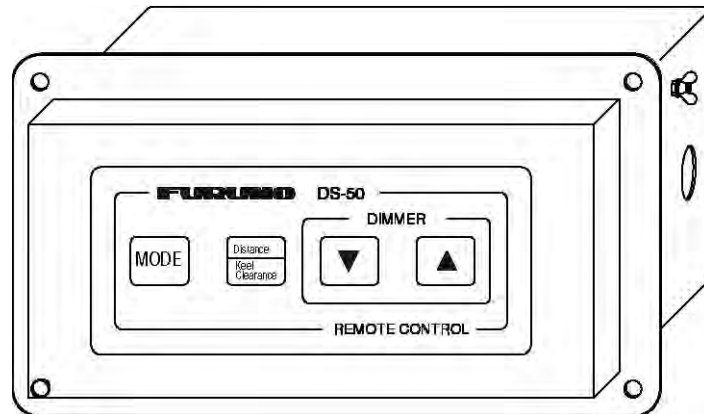

MAINTENANCE & TROUBLESHOOTING

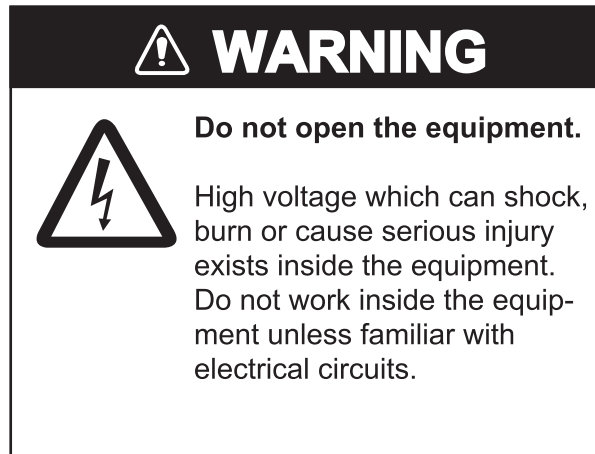

Preventive Maintenance

Monthly checks

Check the following monthly:

- All connectors and cables are securely connected.
- Check ground of main display unit and processor unit for rust. Clean if necessary.
- Check that power voltage is within prescribed rating.
- Conduct the diagnostic program.

Cleaning

Display unit

Dust and dirt may be wiped off the main display unit with a soft cloth. Mild detergent may be used if necessary. Do not use chemical cleaners to clean the unit—they may remove paint and markings.

Transducer

Marine life (barnacles, etc.) on the transducer can cause a considerable drop in sensitivity. When the ship is docked, carefully remove any marine life from the transducer. Paint the transducer yearly with SEATENDER 20 (no other paint allowed) anticorrosion paint.

Note 1: Do not mix SEATENDER 20 with SEA GRANDPRIX 660HS, or apply one over the other.

Note 2: It is possible to remove SEATENDER 20 and replace the coating with SEA GRANDPRIX 660HS. To remove the current coating, soak a nylon-based scrubbing pad in thinners, then apply the thinner to the coating in a washing motion. To prevent damage to the transducer, do not use tools (scrapers, etc) or sandpaper to remove the coating.

Troubleshooting

Below are simple troubleshooting procedures the operator can follow to restore normal operation.

Power cannot be turned on.

- Try adjusting brilliance (power may be on but brilliance is too low).
- Check the power cable for damage.
- Check that the power connector is firmly fastened.
- Check if fuse(s) on the processor unit have blown. If a fuse has blown, find out the cause before replacing it. Be sure to use proper fuse. Fuse rating appears below fuse holder.

Poor accuracy.

- Check if ground has corroded or ground connection has loosened.
- Check if cables of other equipment are near the transducer cable.

Operation Checks

Main display unit

1. Turn on the power while pressing and holding down the [MODE] selector. The following appears when the equipment is normal:
Port/starboard speed: 0.5 kn ➡
Fore/aft speed: ▲18.9 kn
Distance run: 12345.67
Depth: 12.3 (unit according to system settings)
2. Operate the [MODE], [Distance/Keel Clearance] and [kn / m/s] controls one by one. Confirm that mode or indications changes with each pressing.
3. Confirm that distance run setting can be changed.

Interconnection between main display unit and remote indicators


1. Turn on the power while pressing and holding down the [SET] key. 10.0 kn for fore/aft speed appears. "S" appears to denote the test mode.
2. Confirm that the remote indicators display 10.0 kn. If not, there may be some problem between the processor unit and remote indicators.

Main display unit diagnostic program

The diagnostic program checks the main display unit for proper operation and is automatically conducted at start up. It may also be conducted when necessary. The program checks the memory (ROM, RAM, EEPROM), LEDs and buzzer and then shows the program version number. The equipment is normal if the program version no. appears.

1. To run the diagnostic program, turn on the power while pressing the [kn/ m/s] selector. The program checks the LEDs, ROM, RAM, EEPROM and buzzer and displays the program version number. This is done continuously.
2. To escape from the diagnostic program, turn off the power.


Error display

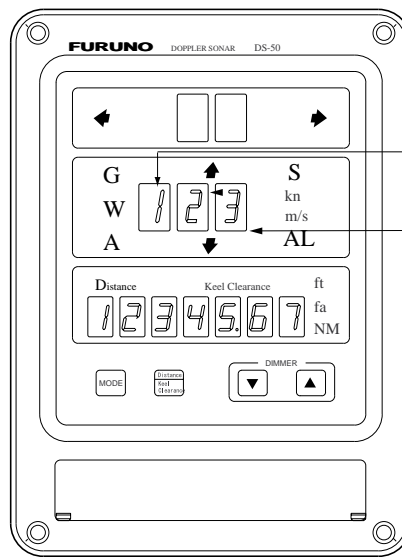

Main display unit error indications

- 1: ROM error
- 2: RAM error
- 3: EEPROM error

Error Displays

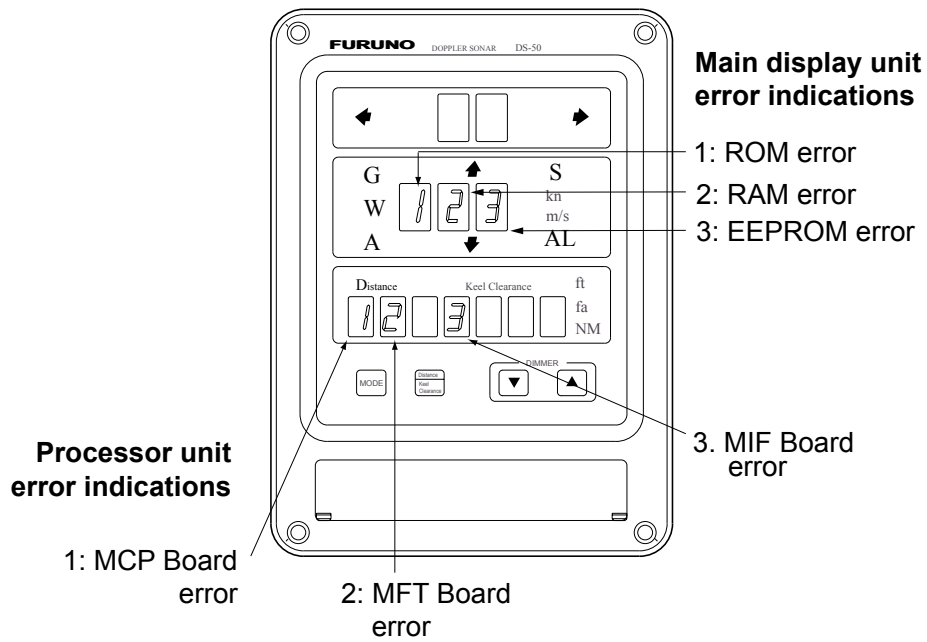

Program Number

Pub No., Modification, Date	Software Program No.
OME-72410-K Modified to fix VTG sentence 7/2002	DS-500 VCP board: 665-0400-003 DS-510 MCP board: 665-0410-007 MFT board: 665-0120-000 MIF board: 665-0122-001
OME-72410-P Modified for IEC62288 MAR, 2010	DS-500 VCP board: 665-0400-004

PRINCIPLE OF DOPPLER SPEED LOG

A doppler speed log measures ship's speed by utilizing the principle of the Doppler effect, which defines that a signal emitted from a moving object is heard with its frequency shifted at stationary locations and the degree of the frequency shift is proportional to the speed of the moving object.

For ease of understanding measurement of ship's fore-aft speed is explained in this paragraph.

Although the DS-50 employs three directional beams, let's suppose that only two beams are used as shown at right.

Ultrasonic pulses are emitted at an angle of θ relative to water line toward ship's fore and aft direction. If the ship's speed is "V", the source of the ultrasonic pulse approaches or goes away the reflecting points on the seabed at a speed of $V \cos \theta$.

This relative motion causes the Doppler shift and the ultrasonic signals reflected at the seabed are received at frequencies of " $f_0 + f_d$ " and " $f_0 - f_d$ " by the transducer. In the processor unit of the DS-50, difference of " $f_0 + f_d$ " and " $f_0 - f_d$ " are computed to extract only the Doppler shift factor " f_d ".




$$(f_0 + f_d) - (f_0 - f_d) = 2f_d$$

Since the 'fd' is theoretically given by

$$f_d = 2V \cos \theta \times f_0 / C \quad (C: \text{Sound velocity in water})$$

and f_0 , C and θ are known, V can be calculated if the " f_d " is given.

Note that the sound velocity in water changes with water temperature and water pressure but the change by water temperature is automatically compensated for by using temperature sensor.

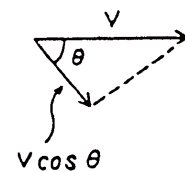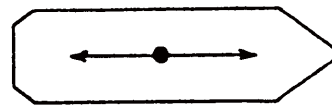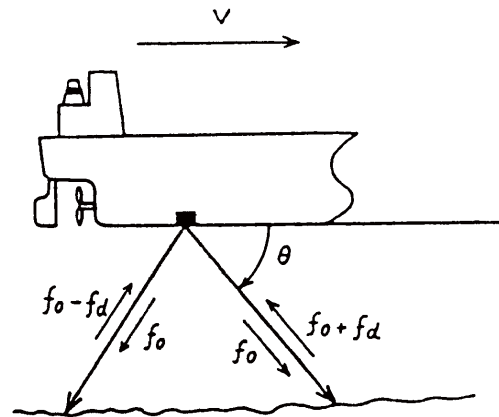

DIGITAL INTERFACE (IEC 61162-1 EDITION 2)

Output sentences of channel 1, 2 (NMEA/CIF 1, NMEA/CIF 2)

VBW, VTG, VLW, VHW. (VTG is not output when the bottom echo has not been acquired. Heading data in VTG and VHW is "null.")

Transmission interval


2 s for any sentence

Data transmission


Data is transmitted in serial asynchronous form in accordance with the standard referenced in 2.1 of IEC 61162-1. The first bit is a start bit and is followed by data bits, least-significant-bit as illustrated below.

The following parameters are used:

Baud rate: 4800 Data bits: 8 (D7 = 0), parity none Stop bits: 1

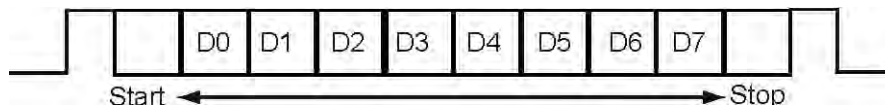


Schematic diagram

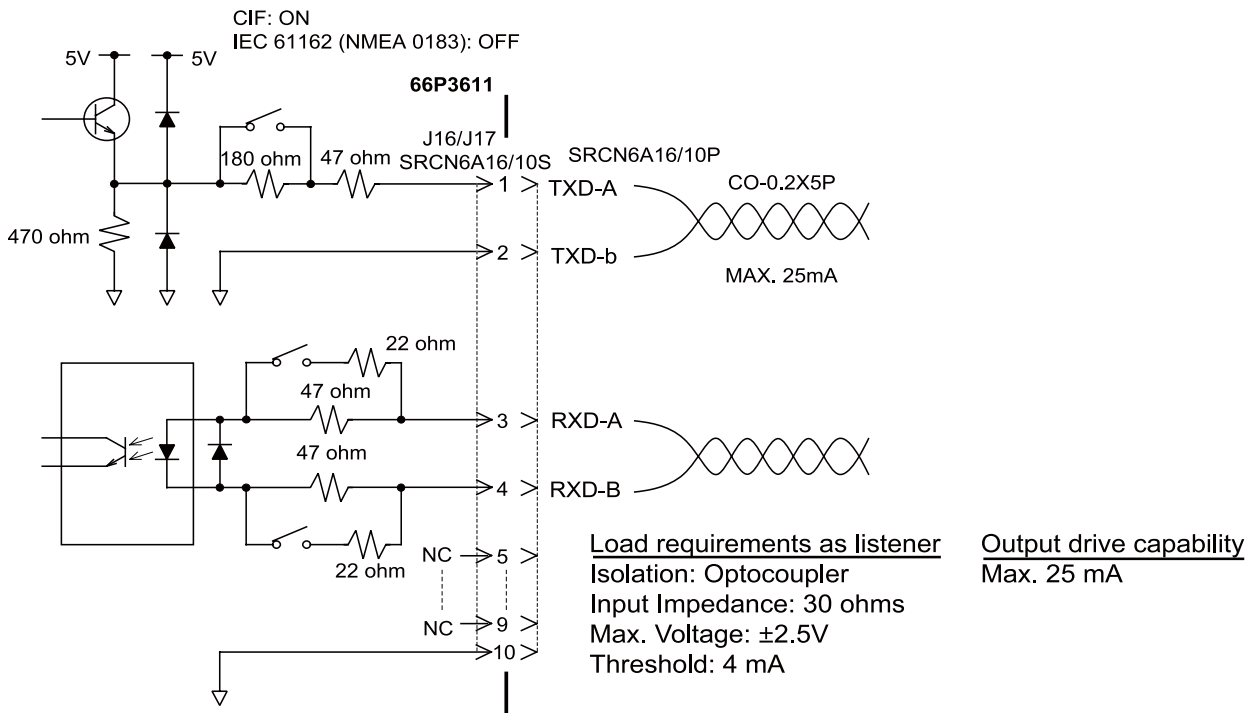

Data sentences

VBW - Dual ground/water speed

\$--VBW,x,x,x,x,A,x,x,x,x,A,x,x,A,x,x,A*hh<CR><LF>

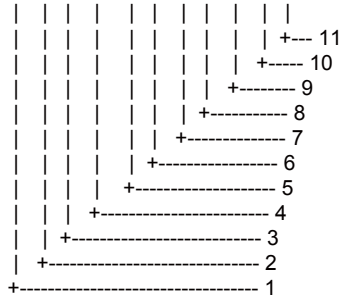

1. Longitudinal water speed, knots
2. Transverse water speed, knots
3. Status: water speed, A=data valid V=data invalid
4. Longitudinal ground speed, knots
5. Transverse ground speed, knots
6. Status: ground speed, A=data valid V=data invalid
7. Stern transverse water speed, knots
8. Status: stern water speed, A=data valid V=data invalid
9. Stern transverse ground speed, knots
10. Status: stern ground speed, A=data valid V=data invalid
11. Checksum

VHW - Water speed and heading

\$-VHW,x.x,T,x.x,M,x.x,N,x.x,K*hh<CR><LF>

```

| | | | | | | | | |
| | | | | | | | | | +----- 5
| | | | | | | | | | +--+----- 4
| | | | | | | | | | +--+----- 3
| | | | | | | | | | +--+----- 2
+--+----- 1

```

1. Heading, degrees true
2. Heading, degrees magnetic
3. Speed, knots
4. Speed, km/h
5. Checksum

VLW - Distance traveled through water

\$-VLW,x.x,N,x.x,N*hh<CR><LF>

```

| | | | |
| | | | | +----- 3
| | | | | +--+----- 2
+--+----- 1

```

1. Total cumulative distance, nautical miles
2. Distance since reset, nautical miles
3. Checksum

VTG - Course over ground and ground speed

\$-VTG,,T,,M,x.x,N,x.x,K,a*hh<CR><LF>

```

| | | | | | | | | |
| | | | | | | | | | +----- 6
| | | | | | | | | | +----- 5
| | | | | | | | | | +--+----- 4
| | | | | | | | | | +--+----- 3
| | | | | | | | | | +--+----- 2
+--+----- 1

```

1. Course over ground, degrees true
2. Course over ground, degrees magnetic
3. Speed over ground, knots
4. Speed over ground, km/h
5. Mode indicator(see note)
6. Checksum

NOTE Positioning system Mode indicator:

- A = Autonomous
- D = Differential
- E = Estimated (dead reckoning)
- M = Manual input
- S = Simulator
- N = Data not valid


The positioning system Mode indicator field shall not be a null field.

LIST OF ABBREVIATIONS

Abbreviation	Meaning
A	Automatic
Aft	After
AL	Alarm
Clearance	Clearance
CONTROL	Control
deg	Degree(s)
Dimmer, DIMMER	Dimmer
Distance	Distance
DOPPLER	Doppler
Fa, fa	Fathom(s)
ft	feet
G	Ground
GND	Ground
Keel	Keel
kn	Knot(s)
m/s	Meter per seconds
MENU	Menu
MODE	Mode
NM	Nautical Mile(s)
POWER	Power
REMOTE	Remote
S	Simulation
SET	Set (i.e., set and drift, or setting a value)
SONAR	Sonar
W	Water

Symbol	Meaning
◀	Move cursor leftward
▶	Move cursor rightward
▼	Decrease a figure
▲	Increase a figure
⇒	Starboard direction
⇐	Port direction
⇩	Aft direction
⇧	Fore direction

Declaration of Conformity

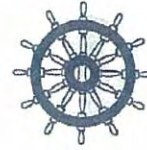

0560

We **FURUNO ELECTRIC CO., LTD.**

(Manufacturer)

9-52 Ashihara-Cho, Nishinomiya City, 662-8580, Hyogo, Japan

(Address)

declare under our sole responsibility that the product

DOPPLER SPEED LOG DS-50

(Model name, type number)

to which this declaration relates conforms to the following standard(s) or normative document(s)

Standards

Test standards

IMO Resolutions MSC.36(63)
IMO Resolution MSC.96(72)
IMO Resolution MSC.191(79)
IMO Resolution A.694(17)
IMO Resolution A.824(19)

IEC 61023: 3rd edition, 2007-10
IEC 60945: 4th edition, 2002-8
IEC 61162-1: 3rd edition, 2008-3
IEC 62288: 1st edition, 2008-7

(title and/or number and date of issue of the standard(s) or other normative document(s))

For assessment, see

- EC type-examination (Module B) certificate N^o: 09212008 issued by Telefication, The Netherlands
- Product Quality System (Module D) certificate No. P 112 issued by Telefication, The Netherlands

This declaration is issued according to the provisions of European Council Directive 96/98/EC on marine equipment and the amending Directive 2008/67/EC.

On behalf of Furuno Electric Co, Ltd.

Takahiko Kusuda
Manager, QMS Secretariat
Quality Assurance Department

Nishinomiya City, Japan
April 2, 2010

(Place and date of issue)

(name and signature or equivalent marking of authorized person)