

# **FURUNO**

## **OPERATOR'S MANUAL**

*SHIP SECURITY  
ALERT SYSTEM (SSAS)*

**MODEL**            **IC-307**

---

**ECF**

(Elemental Chlorine Free)

The paper used in this manual  
is elemental chlorine free.

**FURUNO ELECTRIC CO., LTD.**

9-52 Ashihara-cho,  
Nishinomiya, 662-8580, JAPAN

Telephone : +81-(0)798-65-2111

Fax : +81-(0)798-65-4200

• FURUNO Authorized Distributor/Dealer


All rights reserved. Printed in Japan

Pub. No. OME-56351-D1

(DAMI ) IC-307(SSAS)

A : MAY 2004

D1 : JUN . 06, 2008



\* 0 0 0 1 5 0 3 5 9 1 3 \*

# TABLE OF CONTENTS


---

- SYSTEM CONFIGURATION .....2**
- 1. OVERVIEW OF SSAS .....4**
- 2. INSTALLATION.....6**
  - 2.1 Mounting .....6
    - 2.1.1 Junction box (for FELCOM 16) .....6
    - 2.1.2 I/F box IC-312 (for FELCOM 12).....7
    - 2.1.3 SSAS alert unit .....8
  - 2.2 Wiring.....10
    - 2.2.1 Junction box (for FELCOM 16) .....10
    - 2.2.2 I/F box IC-312 (for FELCOM 12).....11
    - 2.2.3 SSAS alert unit .....12
  - 2.3 Initial Settings.....13
- 3. OPERATION.....14**
  - 3.1 Operation Mode .....14
    - 3.1.1 Changing the password .....14
    - 3.1.2 SSAS manager mode .....15
  - 3.2 Setting SSAS Report Destination and Message Contents.....16
  - 3.3 Transmitting SSAS Report .....19
  - 3.4 Testing the Button .....21
  - 3.5 SSAS Report Test .....27
  
- OUTLINE DRAWINGS.....D-1**
- INTERCONNECTION DIAGRAMS .....S-1**


# SYSTEM CONFIGURATION

Regulations require at least two SSAS alert units.


## FELCOM 15

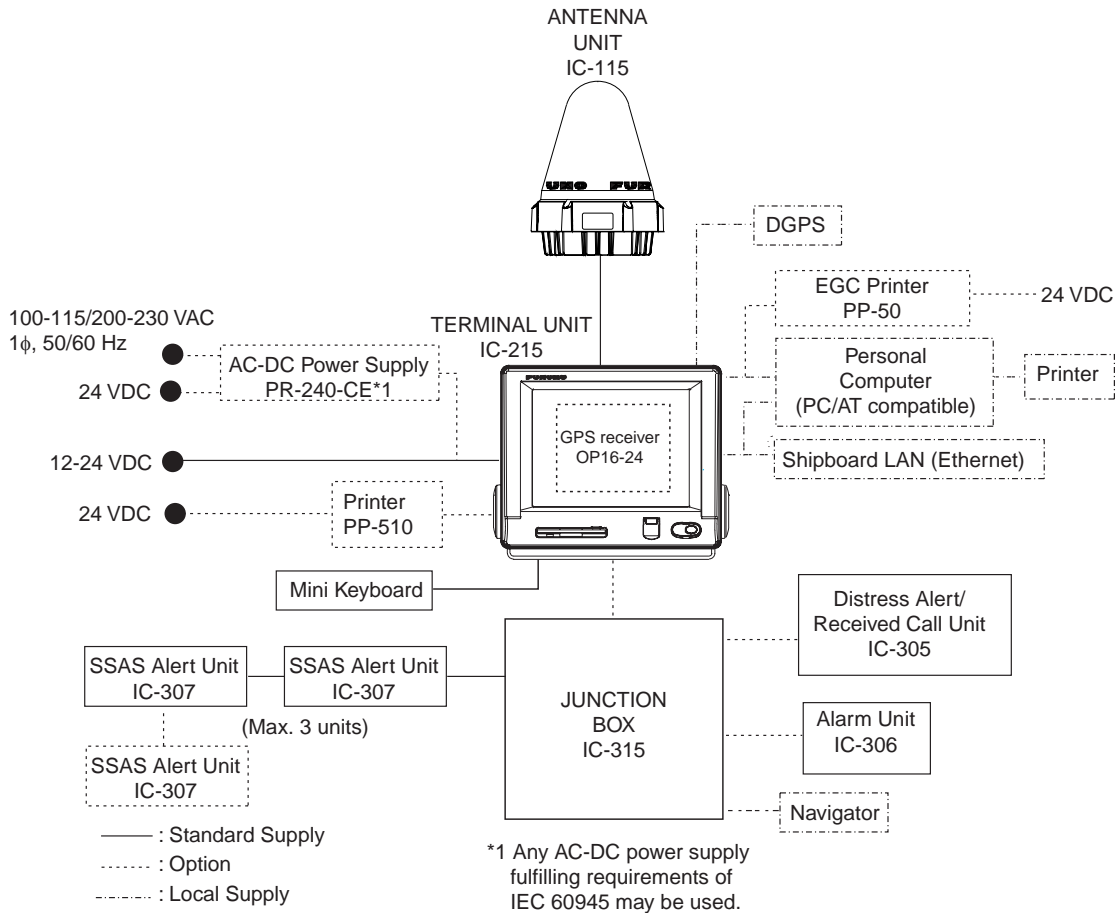

## FELCOM 16

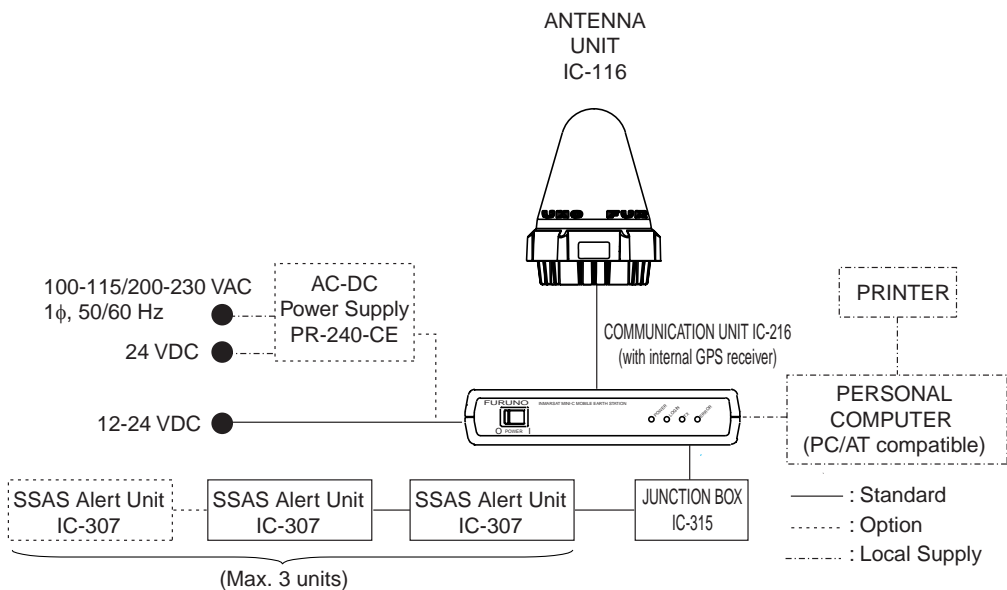

# FELCOM 12

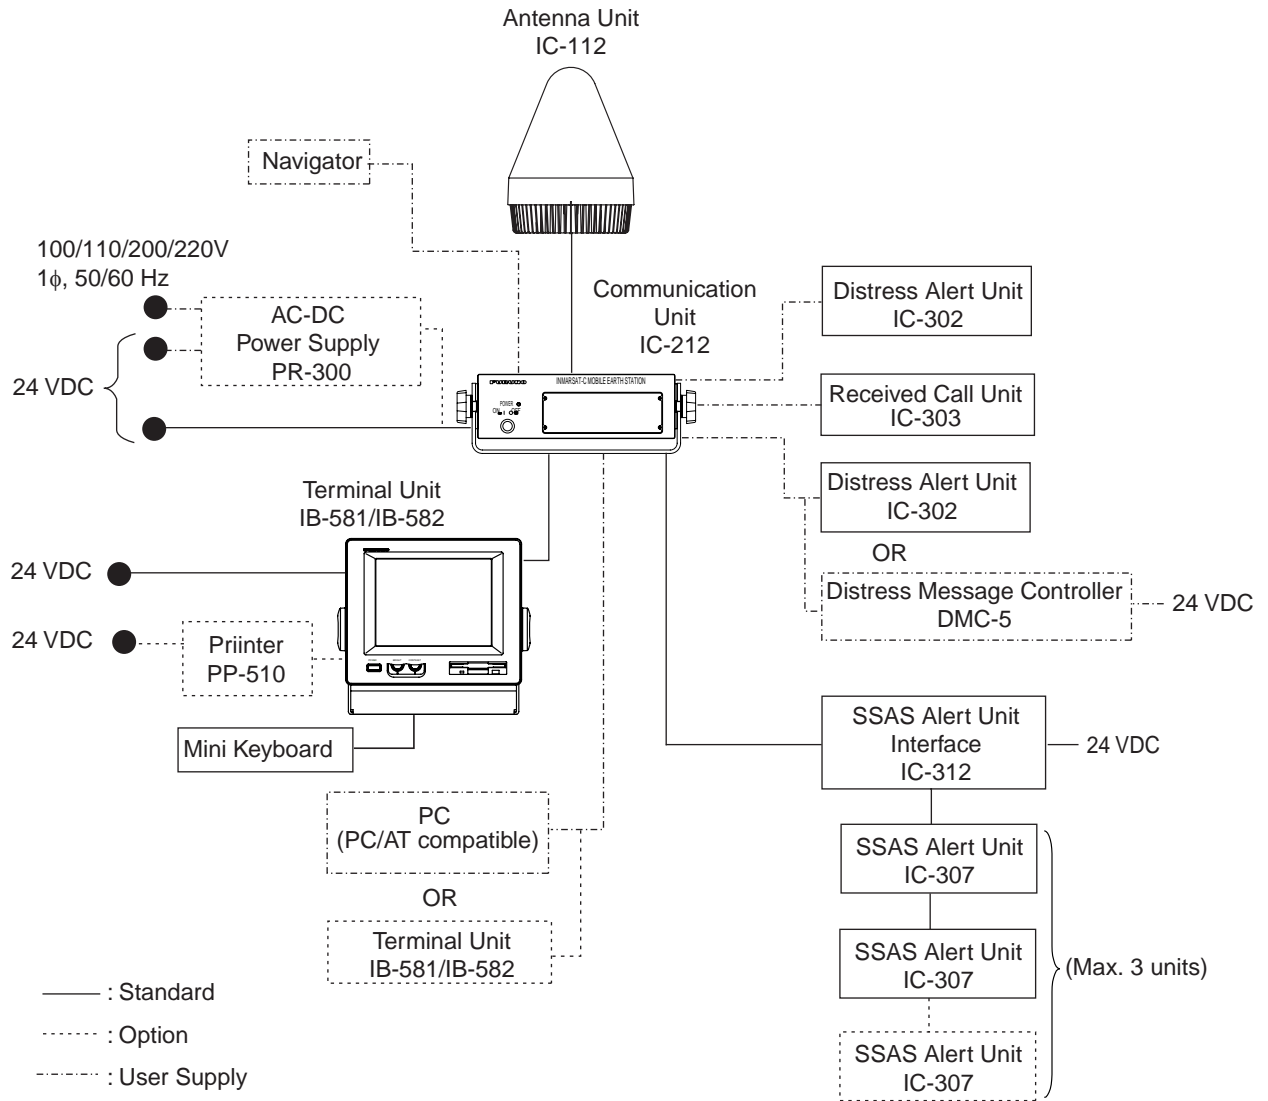


# 1. OVERVIEW OF SSAS

The IC-307 SSAS (Ship Security Alert System) Alert Unit connects to the Inmarsat-C MES FELCOM 15/FELCOM 12 or the Inmarsat Mini-C FELCOM 16 for the purpose of alerting specified addresses (for example, your ship's company) that your ship is under attack by intruders. The SOLAS Resolution XI-2/6 requires vessels of 500 GT or more constructed before 01 July 2004 to install an SSAS.

When your ship is under attack an SSAS report, which contains your ship's name, MMSI No., position, etc. is sent to up to five locations, specified by the ship's captain or authorized personnel. No audible or visible alarm is generated while the SSAS report is being transmitted, to prevent discovery of the report by the intruders.

The SSAS is protected with a password to prevent unauthorized setting or testing of it by other than the ship's captain or authorized personnel.

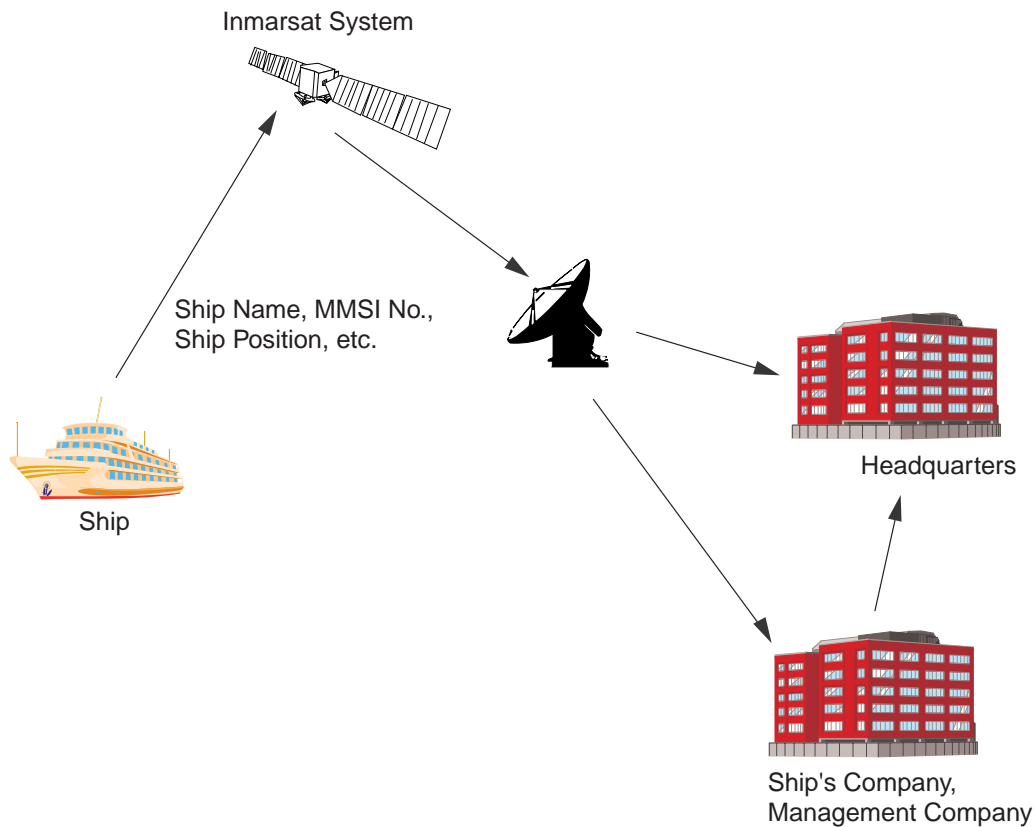

## SSAS operation flow

**1.** Open the cover of the button and then press the button.  
(This is a latch-type button; hit and release to activate the button.)



**2.** If addresses have been preset, the SSAS report is sent to one address 30 seconds after the button is activated.  
(Max. 5 addresses)  
  
(You may cancel transmission of the SSAS report by pressing the button again within 30 seconds of the initial press.)



**3.** An LES sends acknowledgement to your ship.

**4.** Steps 2-3 and are repeated in case of multiple addressees.



**5.** Continuous transmission of the SSAS report begins.  
(The interval at which to transmit the SSAS report to each address can be specified. The SSAS report is continuously transmitted while the button is ON, at the interval selected.)



**6.** To stop transmission, press the button again to deactivate it.  
(This is only possible in the SSAS manager mode. See paragraph 3.1.)

# 2. INSTALLATION

## 2.1 Mounting

### 2.1.1 Junction box (for FELCOM 16)


The junction box IC-315 is required when installing the SSAS on the FELCOM 16; it is already installed on the FELCOM 15.

Separate the junction box from a magnetic compass by the distances shown below to prevent deviation to a magnetic compass.

Standard compass: 1.0 m

Steering compass: 0.7 m

1. Remove four screws from the unit to separate the cover from the unit.
2. Fix the unit to the mounting location with four self-tapping screws (4x16, supplied).
3. Connect the cables appropriately referring to paragraph 2.2.1.

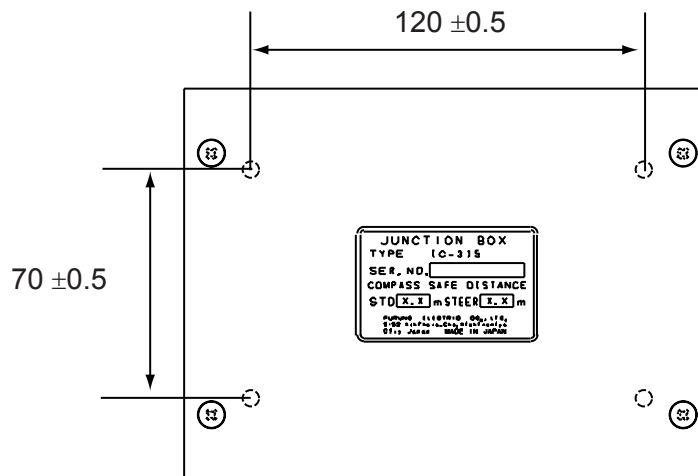

*Junction box IC-315*

The junction box is connected to the communication unit with a 2 meter cable, with D-sub connector (at the communication unit). Therefore, locate the junction box within two meters of the communication unit.



## 2.1.2 I/F box IC-312 (for FELCOM 12)

The I/F box is required to connect the SSAS alert unit to the FELCOM 12.


The I/F box is connected to the communication unit with a 5 m cable (17JE-573-10 harness). Accordingly, locate the interface within 5 m of the communication unit.

Keep the following compass safe distances in mind when choosing the mounting location:

Standard compass: 0.65 m

Steering compass: 0.45 m

1. Unfasten four screws to remove the cover.
2. Use four self-tapping screws (3X10, supplied) to fix the unit to the mounting location.
3. If the cable is led in from the rear of the unit, change the clamp location as follows:
  - a) Unfasten two screws to remove the clamp.
  - b) Turn the clamp 90 degrees.
  - c) Fasten the clamp.

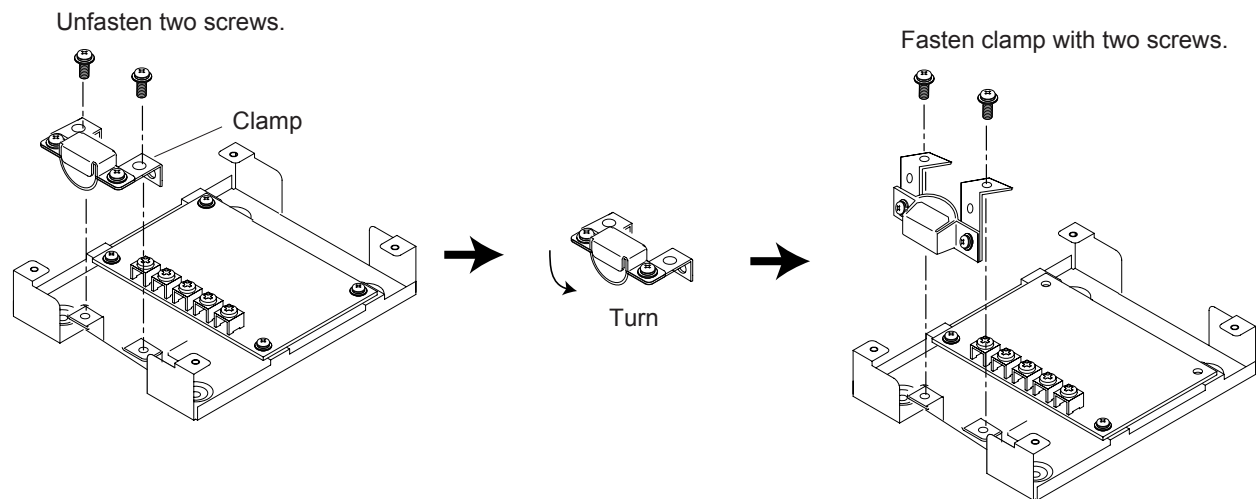

4. Pass the cable through the clamp and connect it to the terminal board, referring to the interconnection diagram.

### 2.1.3 SSAS alert unit

Separate the junction box from the SSAS alert unit by the distances shown below to prevent deviation to a magnetic compass.

Standard compass: 0.70 m


Steering compass: 0.45 m

Locate the SSAS alert unit where it cannot be found by intruders. The location should be known only by ship's captain and authorized personnel.

#### **Bulkhead mounting**

1. Remove four screws from the unit to separate the bottom chassis from the top cover.
2. Fix the unit to the mounting location with four self-tapping screws (supplied).
3. The cable can be lead in from the bottom or the rear panel. For rear panel entrance, change the clamp orientation as follows:
  - a) Unfasten three screws to remove the cable clamp.
  - b) Turn the clamp 90 degrees.
  - c) Refasten the clamp with three screws unfastened at step a) to fix the clamp.

Unfasten three screws.

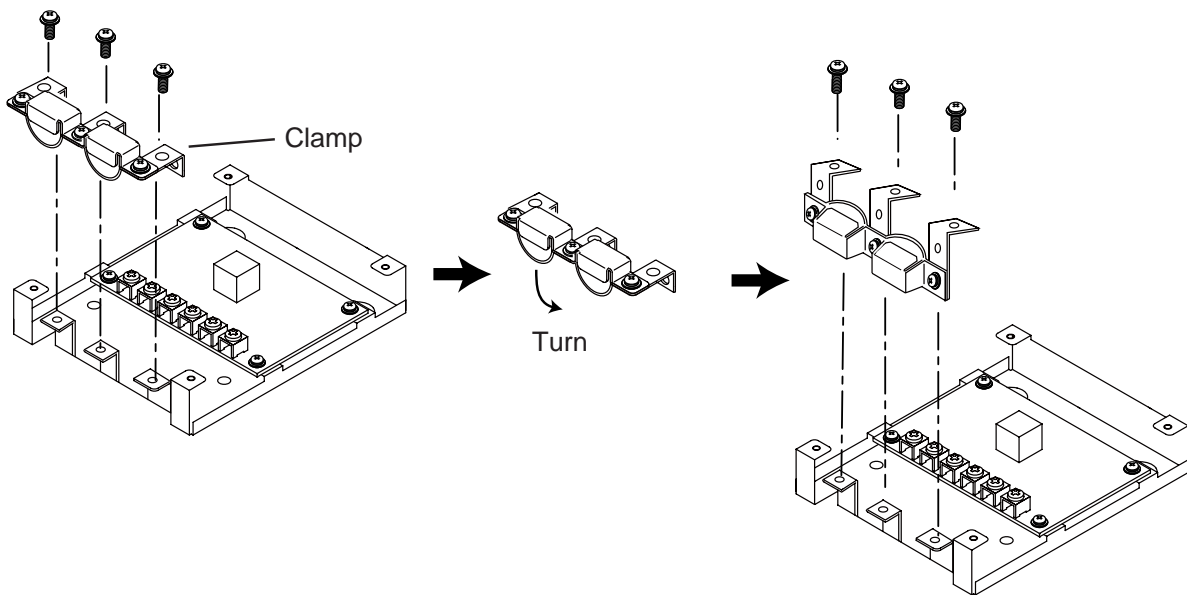


Fasten three screws.

4. Run the cable thru one of the cable entrances and connect it to terminal board.

- Attach the switch cover as shown below. Note that the cover may be turned 180° to change cover opening direction.

Press here and hold down for five seconds.

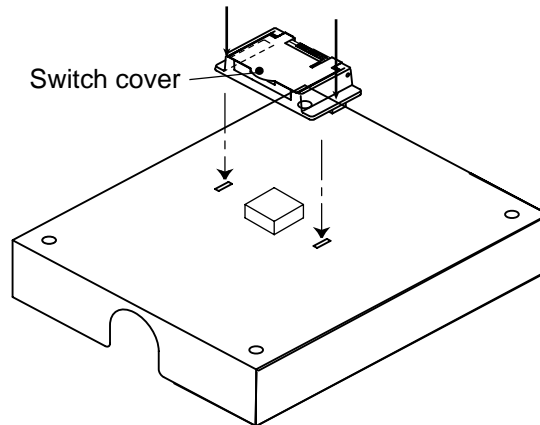

### **Flush mounting**

The optional flush mount kit OP16-28 (Code No. 004-448-010) is required.

Name	Type	Code No.	Qty	Remarks
Fixture	16-018-7201-1	100-317-931	1	
Pan head screw	M3x6	000-800-362	4	
Self-tapping screw	4x16	000-802-080	4	



- Cut out the mounting position referring to the outline drawings at the back of this manual.
- Fix the unit to the fixture with four pan head screws (supplied).
- Fasten the fixture with the unit to the mounting location with four self-tapping screws (supplied).
- Attach switch cover as shown above.

## 2.2 Wiring

### 2.2.1 Junction box (for FELCOM 16)

Use the junction box IC-315 to connect the SSAS alert unit to the FELCOM 16. Unfasten four screws to remove the cover to connect cables to terminal board. For detailed wiring information see the interconnection diagram.

For connection, use the JIS cable TTYCS-4 (or equivalent, see next page for sectional view of this cable) or the CO-SPEVV-SB-C 0.2x5P. When using the CO-SPEVV-SB-C 0.2x5P cable, replace the cable clamp with the cable clamp 16-018-6008-1, supplied with the junction box.

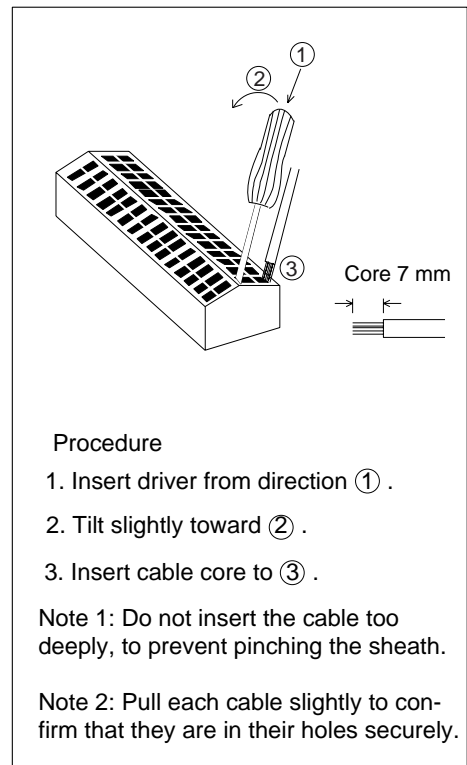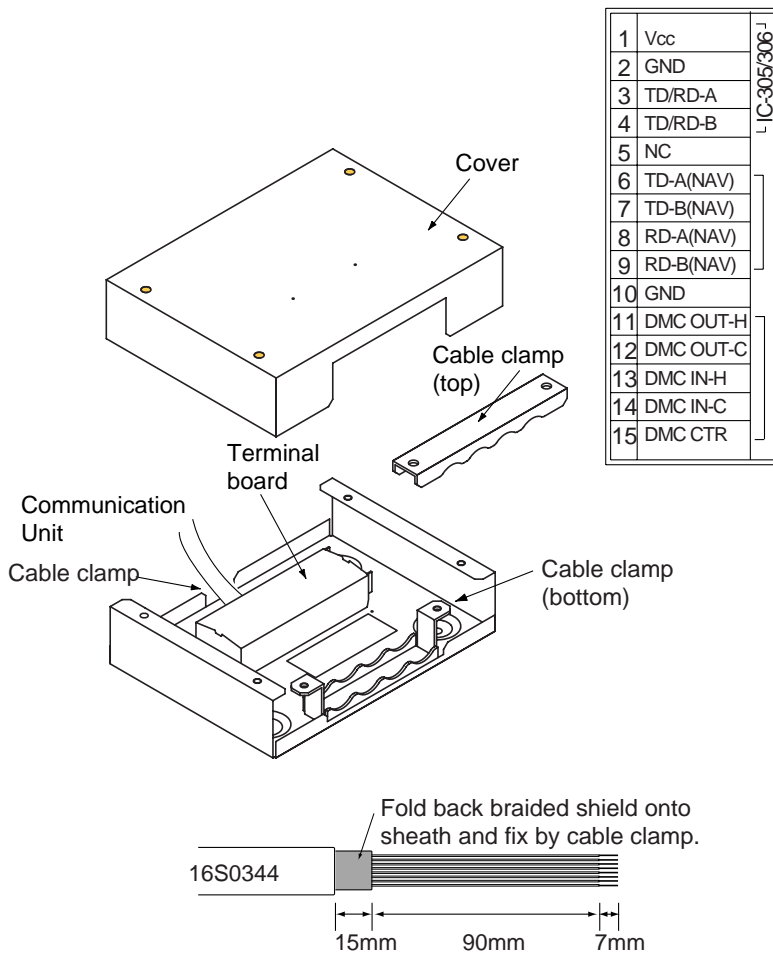


Junction box IC-315

## 2.2.2 I/F box IC-312 (for FELCOM 12)

FELCOM 12 is connected to the SSAS Alert Unit via the I/F Box IC-312.


For detailed wiring refer to the interconnection diagram at the back of this manual.

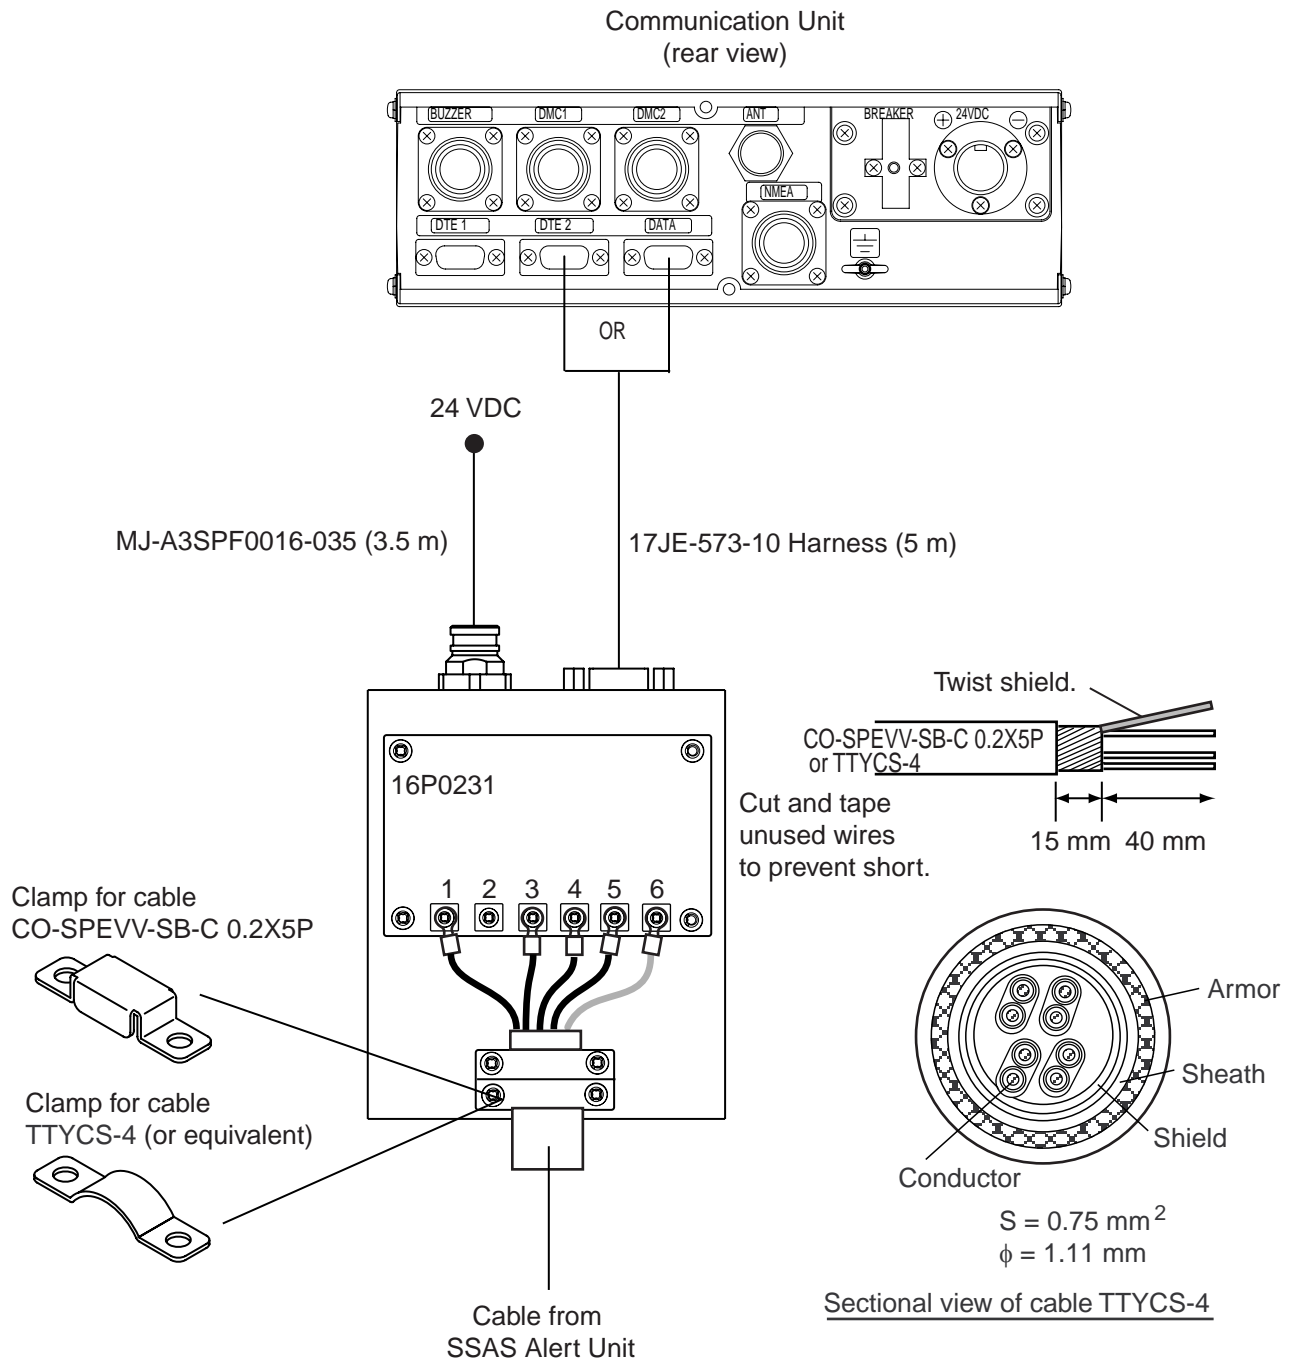

*Wiring I/F box IC-312*

## 2.2.3 SSAS alert unit

Three SSAS alert units can be connected. For wiring, see the illustrations below and the interconnection diagram at the back of this manual. For the terminal unit (FELCOM 15) and the communication unit (FELCOM 16/FELCOM 12), the wiring of the SSAS is monitored and if in error “TROUBLE: SSAS UNIT connection abnormality.” is displayed. Further the ERROR lamp (FELCOM 16) flashes.

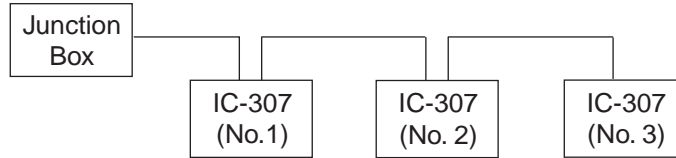

Connect wiring to the terminal board 16P0229 inside the SSAS unit. To differentiate between units in case of multiple unit installation, change jumper block settings as shown below, in accordance with how many units are installed.

Jumper settings for two IC-307


Jumper	Unit	No.1 unit*	No. 2 unit
JP1		No	Yes
JP2		Yes	No

No. 1 unit: Unit with two cables connected to it.  
No. 2 unit: Unit with one cable connected to it.

Jumper settings for three IC-307

Jumper	Unit	No.1 unit*	No. 2 unit*	No. 3 unit
JP1		No	No	Yes
JP2		Yes	Yes	No

No. 1 and No. 2 units: Units with two cables connected to them.  
No. 3 unit: Unit with one cable connected to it.

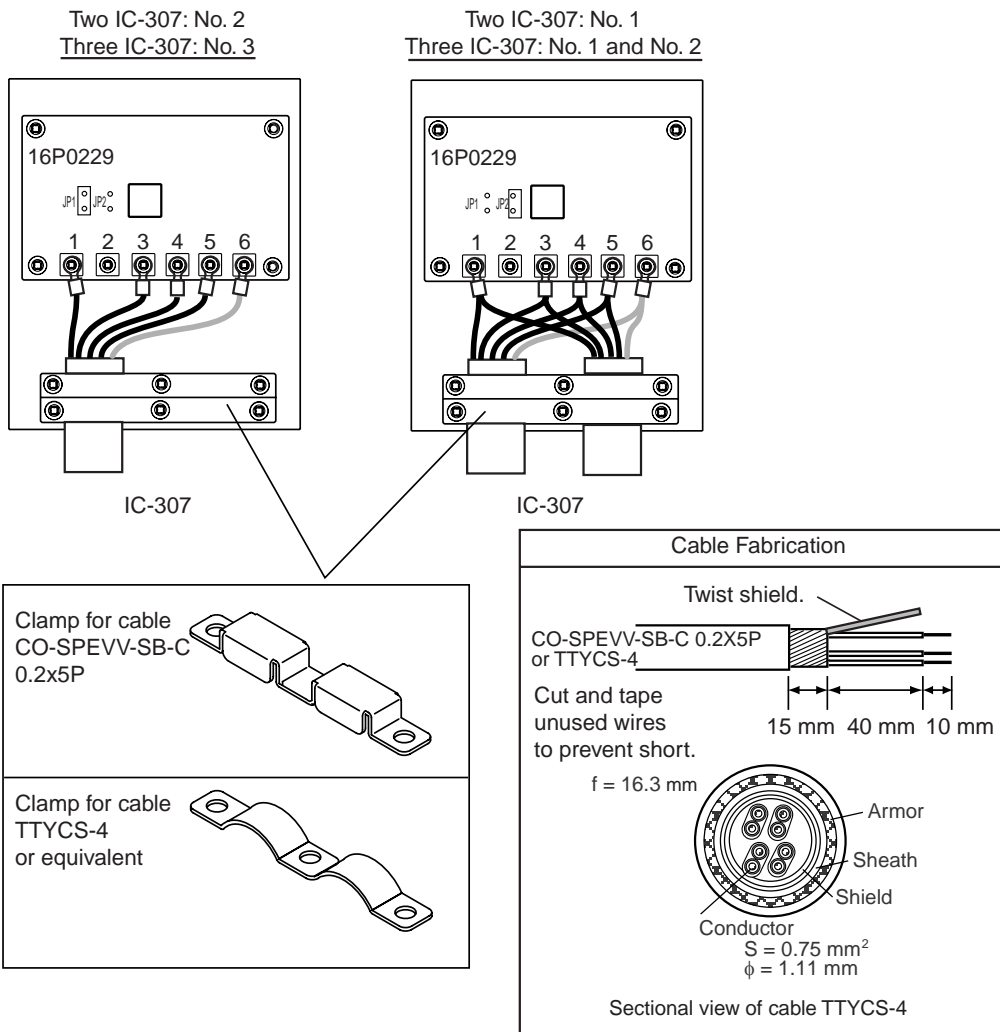

Wiring inside the SSAS alert unit

## 2.3 Initial Settings

Set up the SSAS as follows:

1. **FELCOM 15/FELCOM 12:** Press [F8], [F2] to show the System Setup menu.  
**FELCOM 16:** Press [F8], [F1] to show the System Setup menu.
2. Press [↓] to choose Command Window and then press the [Enter] key.

```
Command Window
RFCONCPU ***
[ Main Menu ]
1. Remote Box Setup
2. Internal GPS Setup
Enter JOB No. : █
```

FELCOM 15/FELCOM 16

```
Command Window
RFCONCPU ***
[ Main Menu ]
1. Remote Box Setup
Enter JOB No. : █
```

FELCOM 12

3. Type "furunoservice" (without quotation marks) in the Enter JOB No. field and then press the [Enter] key. The prompt PASSWORD appears.
4. Enter password (see FURUNO Information for SSAS) then press the [Enter] key. Then, the item Main Menu is displayed in reverse video.
5. Press [1], [Enter], [1], [Enter]. One of the following windows appears.

```
[ DMC ]
1. SSAS(IC-307)
2. DMC
3. OFF
4: SSAS(Momentary SW) E: Exit
Enter No.:
```

FELCOM 15

```
[ SSAS ]
1. ON(IC-307)
2. OFF
3: Momentary SW (for USCG)
E: Exit
Enter No.:
```

FELCOM 16

```
[ SSAS I/F (IC-312) ]
1. DTE2 Port
2. DATA Port
3. OFF E: Exit
Enter No.:
```

FELCOM 12

6. **FELCOM 15/FELCOM 16:** Press [1], [Enter]. This enables the SSAS functions.  
**FELCOM 12:** Choose the port where the SSAS unit is connected and then press the [Enter] key.
7. Press the [Esc] key several times to close the menu.

**Note:** Test the SSAS button and SSAS report for proper operation, referring to paragraphs 3.4 and 3.5, respectively.

# 3. OPERATION

---

## 3.1 Operation Mode

There are two menu operating modes:

- Normal mode:** Menus other than SSAS-related menus are displayed.
- SSAS manager mode:** The mode is activated by the password entered by the ship's captain or authorized personnel. The indication "SSAS Manager Mode" is shown at the top of the screen when this mode is activated, and it is flashing on the FELCOM 15/FELCOM 16. All SSAS-related menus are available. Transmission of the SSAS report may be cancelled in this mode. The equipment starts up in the normal mode, regardless of the mode in use when the power is turned off.

### 3.1.1 Changing the password

The default password is "ship security alert". Ship's captain or authorized personnel may change the password as follows:

1. **FELCOM 15/FELCOM 12:** Press [F8], [F2] to show the System Setup menu.  
**FELCOM 16:** Press [F8], [F1] to show the System Setup menu.
2. Press [↓] to choose Command Window and then press the [Enter] key.

```
Command Window
RFCONCPU ***
[ Main Menu ]
1. Remote Box Setup
2. Internal GPS Setup
Enter JOB No. : █
```

FELCOM 15/FELCOM 16

```
Command Window
RFCONCPU ***
[ Main Menu ]
1. Remote Box Setup
Enter JOB No. : █
```

FELCOM 12

3. On the Enter JOB No. field, type "ssas password" (without quotation marks) and then press the [Enter] key. The prompt OLD PASSWORD appears.
4. Type your current password and then press the [Enter] key. The prompt NEW PASSWORD appears.
5. Enter new password, using at least six characters, and then press the [Enter] key. The prompt RETYPE NEW PASSWORD appears.

**Note:** If less than six characters are entered for the password, the message "Please use a longer password." appears. Enter a longer password.

6. Enter new password again and then press the [Enter] key. The message "Password changed" appears.
7. Press the [Esc] key several times to close the menu.

**Note:** The SSAS manager mode cannot be unlocked without the proper password.



### 3.1.2 SSAS manager mode

All SSAS-related settings are set in the SSAS manager mode. Do the following to access this mode.

1. **FELCOM 15/FELCOM 12:** Press [F8], [F2] to show the System Setup menu.  
**FELCOM 16:** Press [F8], [F1] to show the System Setup menu.
2. Press [↓] to choose Command Window and then press the [Enter] key.

```
Command Window
RFLCONCPU ***
[ Main Menu ]
1. Remote Box Setup
2. Internal GPS Setup
Enter JOB No. : █
```

FELCOM 15/FELCOM 16

```
Command Window
RFLCONCPU ***
[ Main Menu ]
1. Remote Box Setup
Enter JOB No. : █
```

FELCOM 12

3. On the Enter JOB No. field, type "ssas manager" (without the quotation marks) and then press the [Enter] key.  
**Note:** If there is no SSAS equipment connected, the message "Command Ignored: No SSAS button is installed." appears.
4. Type password and then press the [Enter] key to go into the "SSAS Manager Mode". The indication "SSAS Manager Mode" is shown at the top of the screen when this mode is activated, and it is flashing on the FELCOM 15/FELCOM 16.

```
CAUTION
04-04-20 05:37 (UTC)
SSAS Manager Mode enabled.

<Press ESC key to continue>
```

5. Press the [Esc] key several times to close the menu. This enables the SSAS manager mode, which allows you to execute the procedure in paragraph 3.2.

**Note:** Turn the power off and on again whenever changing SSAS-related settings.


## 3.2 Setting SSAS Report Destination and Message Contents

When the SSAS is activated, the SSAS report is sent according to the addresses (max. 5) and message content set with SSAS Report 1 – SSAS Report 5 on the SSAS Report menu.


**Note 1:** The destination and message content of an SSAS report varies according to Administration. Therefore, set them as requested by ship's authorities. For information other than ship's name, MMSI no. and IMN no., set it manually with "Other Inf."

**Note 2:** The equipment must be in the SSAS manager mode to execute this procedure. See paragraph 3.1.2.

1. Press the [F5] to open the Reports menu.

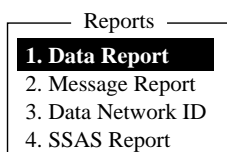


2. Press the [4] key to shown the SSAS Report menu.

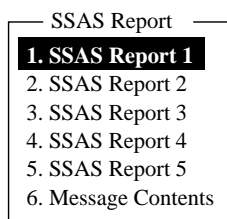

3. Press [1], [2], [3], [4] or [5] key as appropriate.

**Note:** When the button is tested on the FELCOM 12, the test report is sent to the station having the youngest SSAS report number. Therefore set at SSAS Report 1 the station which is to receive the test report.

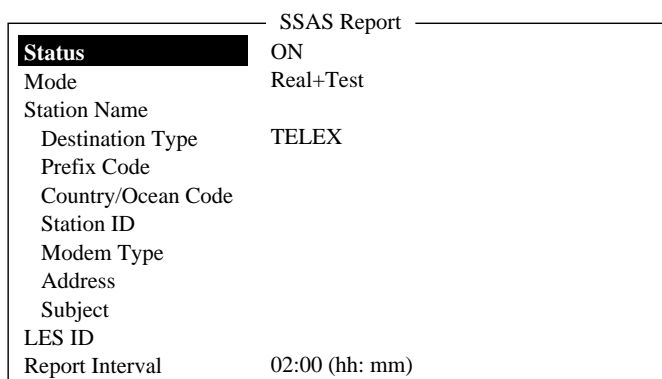

*SSAS report window (FELCOM 15/FELCOM 16)*

- FELCOM 15/16:** Press the [↓] key to choose Mode and then press the [Enter] key.  
**FELCOM 12:** Go to step 6.

<b>Real+Test</b>
Real Only
Test Only

- Press the [↑] or [↓] key to choose mode desired and then press the [Enter] key.  
 "Mode" defines what SSAS report(s) a station is to receive:  
**Real+Test:** Actual SSAS report and test SSAS report.  
**Real Only:** Actual SSAS report only.  
**Test Only:** Test SSAS report only.
- Press the [↓] key to choose Station Name and then press the [Enter] key.
- Press the [↑] or [↓] key to choose appropriate station and then press the [Enter] key.  
 You may sort the list by group name, station name or communication type as follows:  
**Group name:** Each press of [Ctrl] + [G] sorts the list by group name, ascending or descending order.  
**Station name:** Each press of [Ctrl] + [N] sorts the list by station name, in ascending or descending order.  
**Comm. type:** Each press of [Ctrl] + [T] sorts the list by communication type, in ascending or descending order.
- Press the [↓] key to choose LES ID and then press the [Enter] key.
- Press the [↑] or [↓] key to choose LES and then press the [Enter] key.  
**Note:** Change the LES whenever sea area has changed. However, the equipment automatically searches for an LES with which you can communicate and the SSAS report is transmitted to that LES.
- Press the [↓] key to choose Report Interval and then press the [Enter] key.
- Enter time interval (00:10-99:59) to transmit the SSAS report and then press the [Enter] key.
- Press the [Esc] key to open the Update window .

Status	SSAS Report	ON
Mode		Real+Test
Station Name		
Destination Type		TELEX
Prefix Code		
Country/Ocean Code		
Station ID		
Modem Type		
Address		
Subject		
LES ID		
<b>Report Interval</b>		02:00 (hh: mm)

Update

---

**Yes** | No

*FELCOM 15/ FELCOM 16 SSAS report window w/update window*

- Yes is selected; press the [Enter] key to close the SSAS report window.

14. Press the [6] key to display the SSAS Message Contents menu.

```

----- SSAS Message Contents -----
Vessel Name : -----
MMSI       : -----
IMN        : -----
Other Inf.  : -----
-----
LAT:        34: 44. 46N
LON:        135: 21. 26E
Time:       02/04/2004 04:31:48 (UTC)
COURSE:     071 deg
SPEED:      00 kt
Time:       02/04/2004 04:31:48 (UTC)
  
```

- 15. Press the [Enter] key to open the Vessel Name window.
- 16. Enter vessel's name and then press the [Enter] key.
- 17. Press the [↓] key to choose MMSI and then press the [Enter] key.
- 18. Enter MMSI number and then press the [Enter] key.
- 19. Press the [↓] key to choose IMN and then press the [Enter] key.
- 20. Enter IMN and then press the [Enter] key.
- 21. Press the [↓] key to choose Other Inf. and then press the [Enter] key
- 22. Enter appropriate message (three lines) and then press the [Enter] key.
- Note:** To shift between lines, use the [↑] or [↓] key.
- 23. Press the [Esc] key to open the Update window.
- 24. Yes is selected; press the [Enter] key to close the SSAS Message Contents menu.
- 25. Press the [Esc] key twice to return to the standby display.

**Note 1:** To delete entered subscriber's data, choose "Remove" from "Status."

**Note 2:** SSAS report settings may be saved to a floppy disk for backup.

FELCOM 15: [F8], [9], [6] to show the Save/Load window.

FELCOM 16: [F8], [8], [6] to show the Save/Load window.

```

----- Save to FD -----
1. ALL
2. Station List
3. LES List
4. E-Mail Service List
5. SSAS Report*
6. Other
  
```

```

----- Load from FD -----
1. ALL
2. Station List
3. LES List
4. E-Mail Service List
5. SSAS Report*
6. Other
  
```


\*: Available only in SSAS manager mode ("5.SSAS Report" is added in the SSAS manager mode and item numbers are shifted.)

**Note 3:** To confirm the settings, follow paragraph 3.5.

### 3.3 Transmitting SSAS Report

In the normal mode, the SSAS report is sent 30 seconds after the button on the SSAS is pressed. The SSAS repeatedly transmits the report even if the button is pushed off (■). Repeated transmission can only be stopped from the SSAS manager mode.

1. Open the cover of the SSAS alert button.

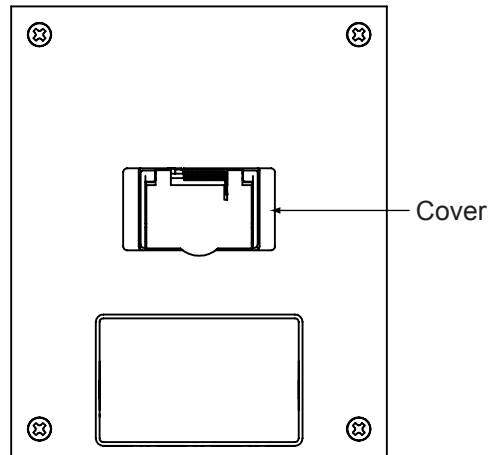

2. Push the button. The button is a latch-type button; hit and release the button to activate (■) the SSAS unit.
3. The SSAS report is transmitted 30 seconds after the button is pushed in (■). Below are the contents of the SSAS report.

```
--- SSAS ALERT MESSAGE ---  
Vessel Name: Queen Elizabeth 2 ← Ship's Name  
MMSI:      111660000 ← MMSI No.  
IMN:      443100000 ← IMN No.  
Help me! ← Desired message  
LAT:      34:44.46N ← Own ship position in latitude  
LON:      135:21.26E ← Own ship position in longitude  
Time:     02/04/2004 04:31:48 (UTC) ← Time of position data  
COURSE:   071 deg ← Course  
SPEED:    00 kt ← Speed  
Time:     02/04/2004 04:31:48 (UTC) ← Time of course and speed data
```

**Note:** If you accidentally push the button in, push it again within 30 seconds to cancel the report. The button pops out (■) and the report is not transmitted. When this is done, the message "INF: SSAS UNIT activation has been canceled." appears on the display. Additionally, for the FELCOM 16, the POWER lamp on the communication unit flashes 30 seconds.

4. An LES sends acknowledgement to your ship.
5. For multiple destinations, steps 3 and 4 are repeated.
6. The SSAS report is transmitted repeatedly while the button remains pushed in (■).
7. To stop transmission, push the button again to pop it out (■). (SSAS manager mode only.)

**Note 1:** You may cancel repeated transmission from either operating mode by pushing the button OFF→ON→OFF→ON→OFF. You must allow no more than three seconds to elapse before pushing the button again. If more than three seconds elapses, repeat the procedure. When transmission is stopped, the message “INF: SSAS UNIT activation has been cancelled.” appears and, on the FELCOM 16 only, the POWER lamp on the communication unit flashes approx. 30 seconds.

**Note 2:** If transmission is not canceled with the button and the power is turned off, the equipment resumes repeated transmission when powered again.

## 3.4 Testing the Button


The SSAS button can be tested as below.

**Note 1:** An actual SSAS report cannot be transmitted during the testing.


**Note 2:** The equipment must be in the SSAS manager mode to conduct the test.

### FELCOM 15


1. Press the [F7] key to display the Options menu.
2. Press the [7] key ([6] key when the FELCOM functions as an EGC receiver) to display the Test menu.

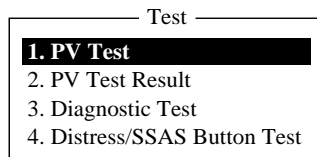

3. Press the [4] key.

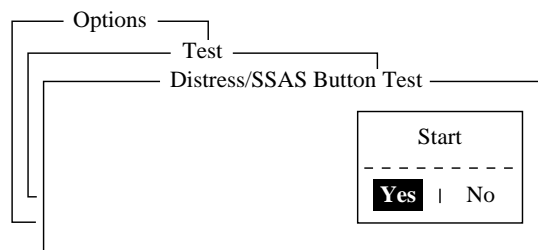

4. Press the [Enter] key to start the test.

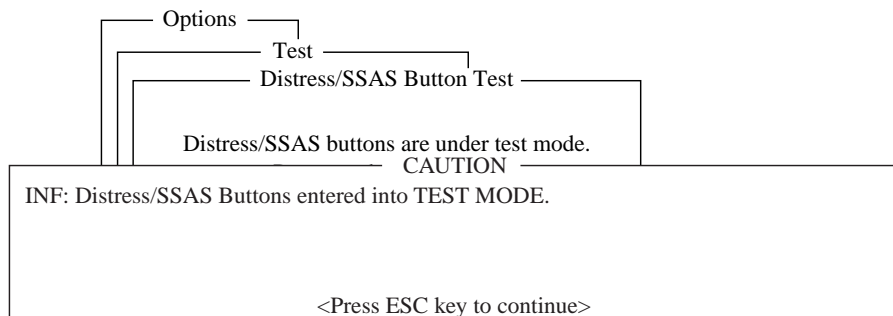


The display shows the message (in red) “Distress/SSAS buttons are under test. Cancel the test mode if a real distress/SSAS needs to sent.” appears.

5. Open the button cover on the No.1 SSAS.
6. Push the button in (■). The CAUTION window displays the message “SSAS UNIT works correctly.” appears if the unit is functioning properly.
7. 30 seconds after the button is pushed in the SSAS test report is automatically sent to the station(s) whose Mode set on the SSAS Report window is “Real+Test” or Test Only”.
8. Turn the button of the No. 1 SSAS off (■).

**Note:** To test the No. 2 and No. 3 SSAS repeat steps 6-8.

9. To escape from the test, press the [Esc] key twice on the terminal unit. The test mode is stopped and the message shown below appears to notify you that normal operation has been restored.

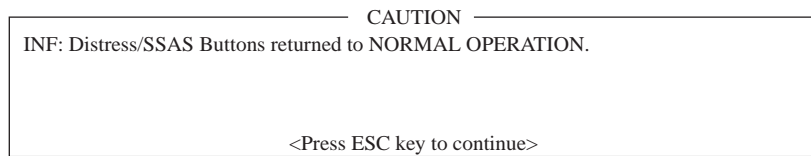


Further, because the button remains pushed in (■), the message “Please return the SSAS button into OFF-STATE.” appears.

10. Push the button again to pop it out (■).
11. Close the button cover.
12. Press the [Esc] key three times to return to the standby display.

**Note:** If the button is left pushed in (■) when the terminal unit is turned on, the equipment displays “Please return the SSAS button into OFF-STATE.” Push the button again to turn off (■) the button.




**FELCOM 16 (no PC)**

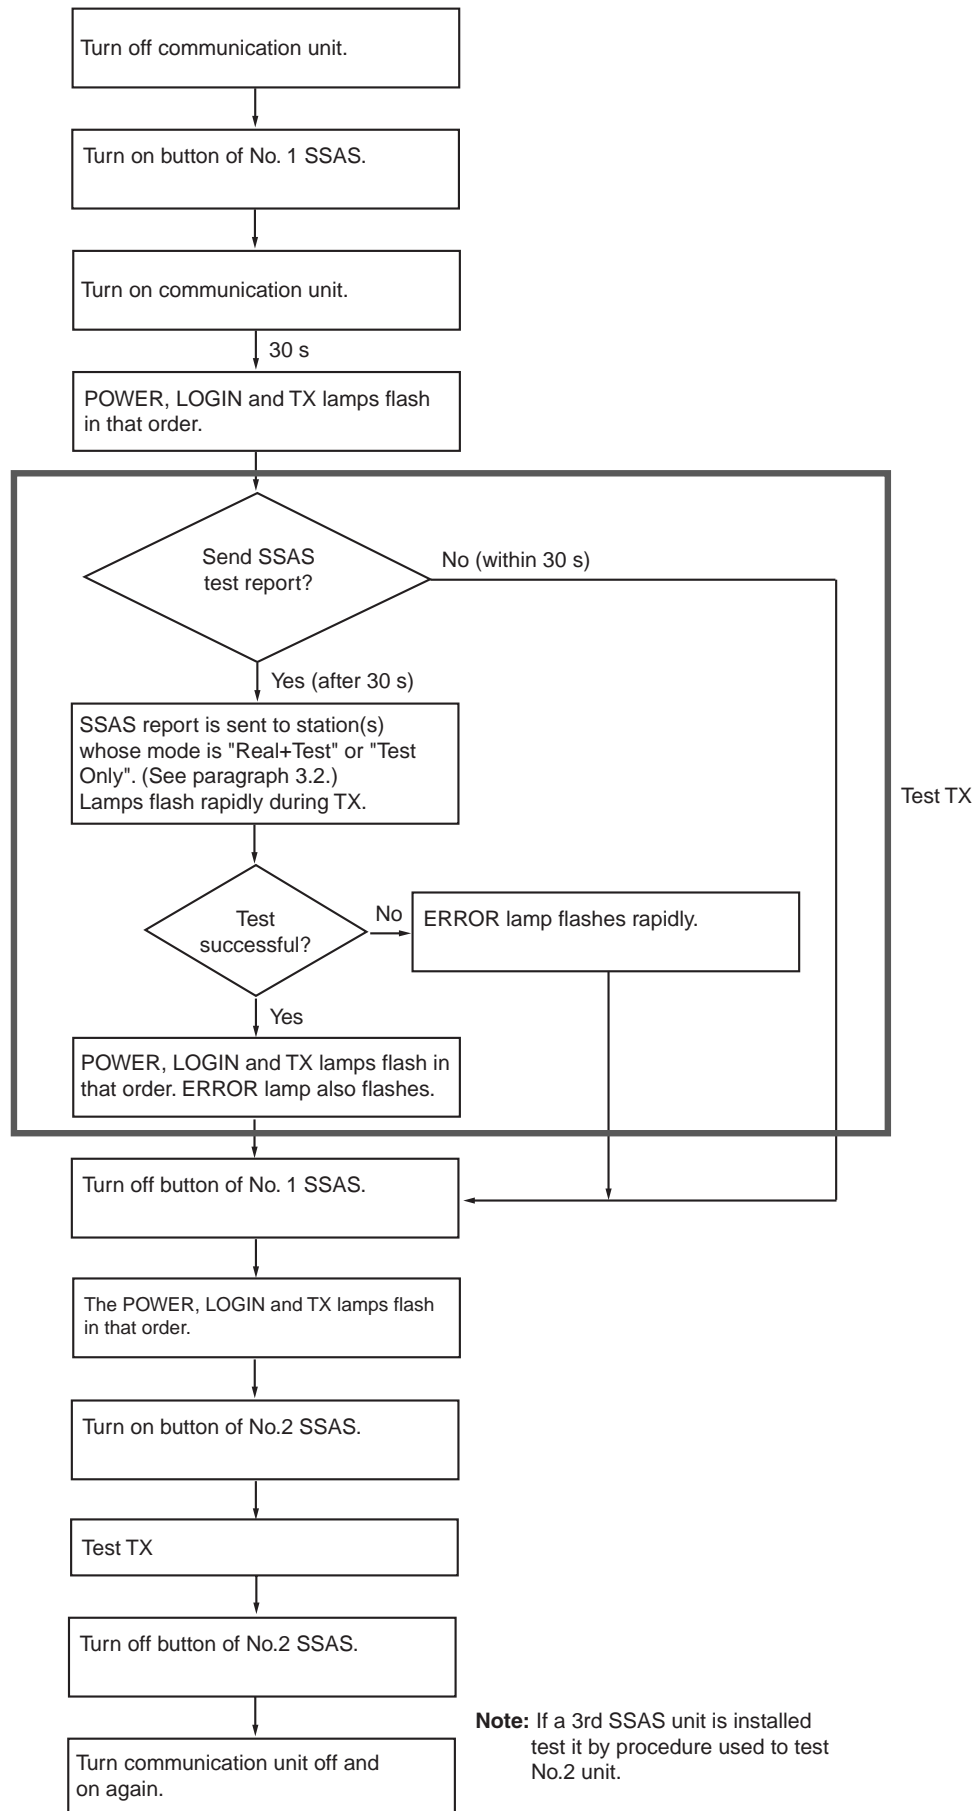


## **FELCOM 16 (by PC)**


1. Press the [F7] key to display the Options menu.
2. Press the [7] key ([6] key when the FELCOM functions as an EGC receiver) to display the Test menu.

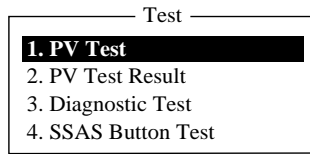

3. Press the [4] key.

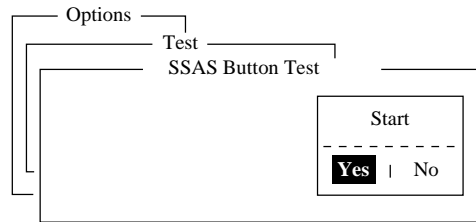

4. Press the [Enter] key to start the test.

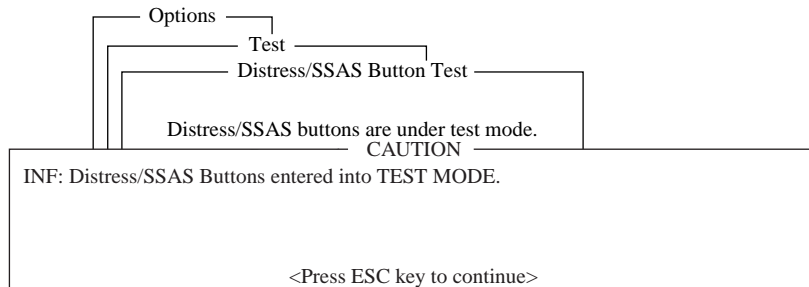


### *Test mode*

The display shows the message (in red) "SSAS buttons are under test. Cancel the test mode if a real SSAS alert needs to sent." appears.

5. Open the button cover on the No. 1 SSAS.
6. Push the button in (ON). The CAUTION window displays the message "SSAS UNIT works correctly." appears if the unit is functioning properly.
7. 30 seconds after the button is pushed in the SSAS test report is automatically sent to the station(s) whose Mode set on the SSAS Report window is "Real+Test" or Real Only".
8. Turn the button of the No. 1 SSAS off (■).

**Note:** To test the No. 2 and No. 3 SSAS repeat steps 6-8.

- To escape from the test, press the [Esc] key twice on the terminal unit. The test mode is stopped and the message shown below appears to notify you that normal operation has been restored.

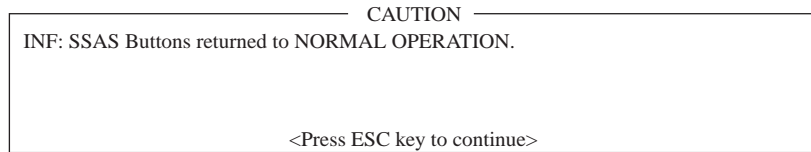


Further, because the button remains pushed in (■), the message “Please return the SSAS button into OFF-STATE.” appears.

- Push the button again to pop it out (■).
- Close the button cover.
- Press the [Esc] key three times to return to the standby display.

**Note:** If the button is left pushed in (■) when the communication unit is turned on, the equipment will go into the test mode if the SSAS is not transmitting repeatedly. To return to the standby display, push the button again to pop it out (■) and then turn the communication unit off and on again.


## **FELCOM 12**

- Press the [F7] key to open the Options menu.
- Press the [6] key if the FELCOM 12 operates as an Inmarsat C MES or the [5] key if it operates as an EGC receiver.

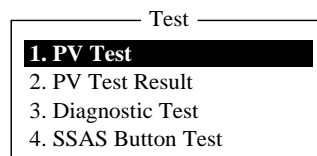


*Test menu*

- Press the [4] key.

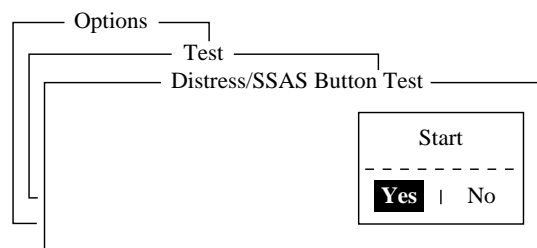


*Start window*

- Press the [Enter] key to start the test mode.

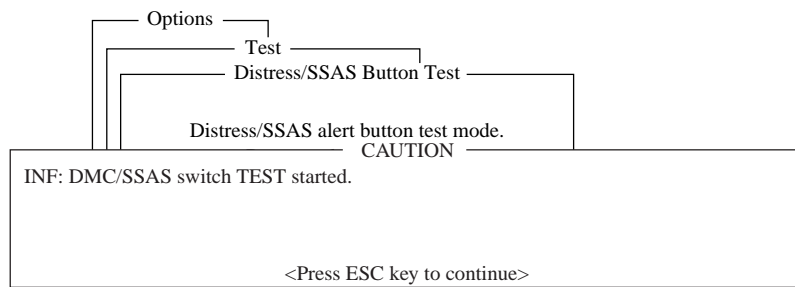

*Display during testing*

5. Open the cover of the No. 1 SSAS unit.
6. Press the button of the No. 1 SSAS unit to turn on (■) the unit.  
The CAUTION window displays the message “SSAS UNIT works correctly.” if the unit is functioning properly.
7. 30 seconds after the button is pushed in, the SSAS test report is automatically sent to the station specified in the youngest SSAS report number.
8. Turn the button of the No. 1 SSAS off (■).  
**Note:** To test the No. 2 and No. 3 SSAS repeat steps 6-8.
9. After the test is completed, press the [Esc] key on the keyboard twice to return to the standby mode. The following message appears.

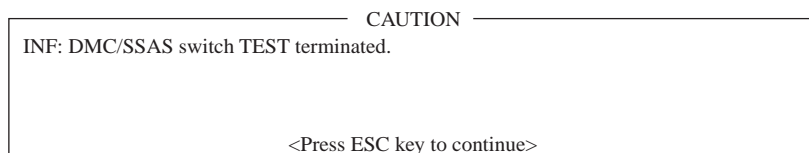

*Display at completion of test*

Further, with the button left in the “ON” state (■) the message “[Please return the SSAS button into OFF-STATE.” appears.

10. Press the button again to turn it off (■).
10. Close the button cover.
11. Press the [Esc] key three times to return to the standby display.

**Note:** If you turn off the communication unit with the button of an SSAS unit turned on (■) the message “Please return the SSAS button into OFF-STATE.” appears. Press the button to turn it off (■).

## 3.5 SSAS Report Test

You can test for successful transmission of the SSAS report to the address you specify, without using the button. The test report message states “!!! Test Call !!!” to alert the receiver of the message that it is a test call.


**Note:** This function is only available in the SSAS manager mode. Switch to this mode (see paragraph 3.1.2) and then follow this procedure.

1. Press the [F5] key to open the Reports menu.
2. Press the [4] key to choose the SSAS Report menu.
3. Press the [1], [2], [3], [4] or [5] key as appropriate, and the SSAS report setting menu appears.
4. Set destination where to transmit the test.
5. Press the [↑] key to choose Status and then press the [Enter] key.
6. Press the [↓] key to choose TEST and then press the [Enter] key.
7. Press the [Esc] key to open the Update window on the FELCOM 15/FELCOM 16 or the Entry window on the FELCOM 12.
8. Yes is selected; press the [Enter] key. The test report is transmitted. After it is transmitted, “Status” is automatically set to ON.
9. Press the [Esc] key twice to return to the standby display.


表 1 TABLE 1

寸法区分 (mm) DIMENSIONS	公差 (mm) TOLERANCE
$L \leq 50$	$\pm 1.5$
$50 < L \leq 100$	$\pm 2.5$
$100 < L \leq 500$	$\pm 3$



A

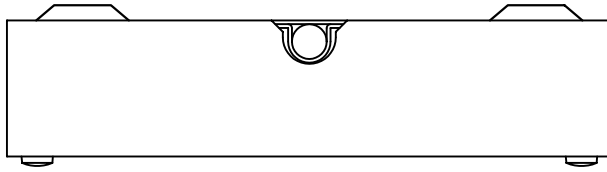

B

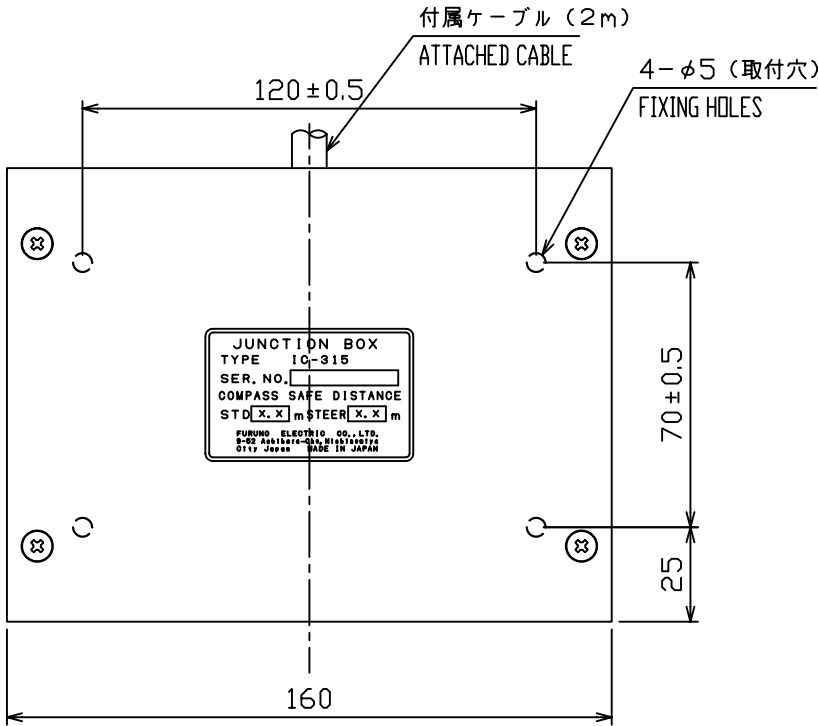

C

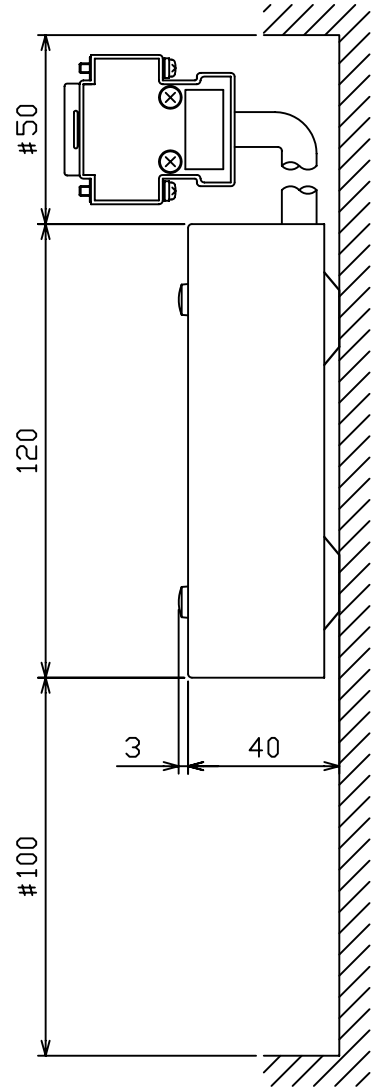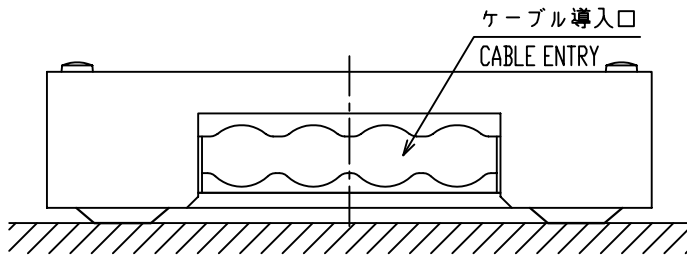

- 注 記 1) #印寸法は最小サービス空間寸法とする。  
 2) 指定外の寸法公差は表 1 による。  
 3) 取付用ネジは+タッピンネジ呼び径4×16を使用のこと。




- NOTE 1. #: MINIMUM SERVICE CLEARANCE.  
 2. TABLE 1 INDICATES TOLERANCE OF DIMENSIONS WHICH IS NOT SPECIFIED.  
 3. USE SELF-TAPPING SCREWS 4x16 FOR FIXING THE UNIT.

D

DRAWN	Mar. 1 '05	T. YAMASAKI		TITLE	IC-315	
CHECKED	Mar. 1 '05	T. MATSUGUCHI		名称	接続箱	
APPROVED	Mar. 03 '05	<i>T. Matsuguchi</i>	FELCOM 15/16		外寸図	
SCALE	1/2	MASS	0.96 ±10% kg	質量はケーブルを含む。 MASS W/ CABLE.	NAME	JUNCTION BOX
DWG No.	C5635-G06-D		16-018-600G-2		OUTLINE DRAWING	

寸法区分 (mm) DIMENSIONS	公差 (mm) TOLERANCE
$L \leq 50$	$\pm 1.5$
$50 < L \leq 100$	$\pm 2.5$
$100 < L \leq 500$	$\pm 3$


表 1 TABLE 1

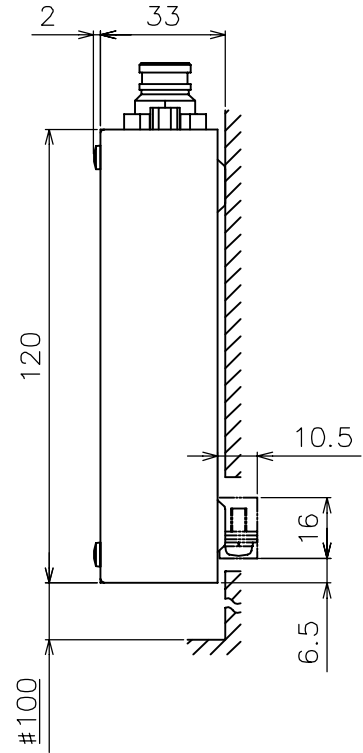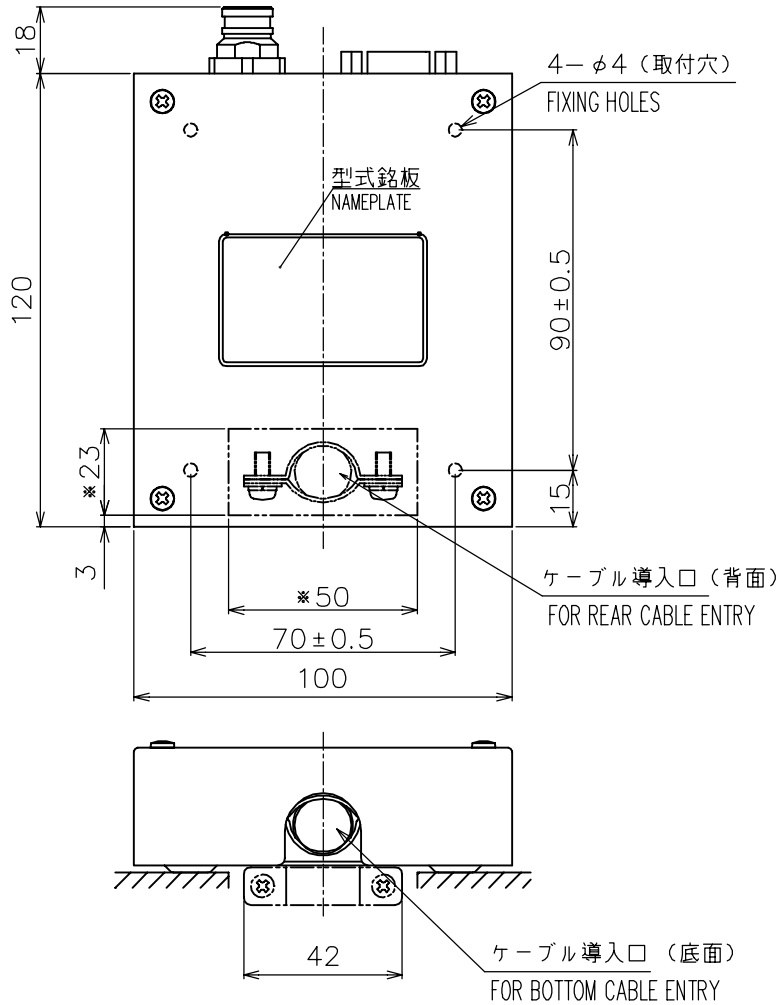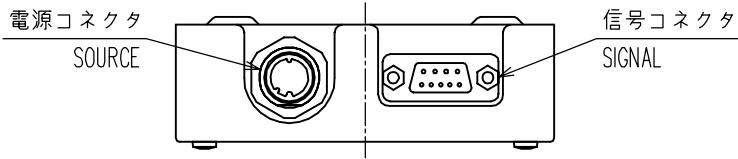

- 注 記
- 1) #印寸法は最小サービス空間寸法とする。
  - 2) 指定外の寸法公差は表 1 による。
  - 3) 取付には+タッピンネジ 3 × 10 を使用のこと。
  - 4) \*印寸法は、背面からケーブル導入時の切抜穴を示す。

- NOTE
1. #: MINIMUM SERVICE CLEARANCE.
  2. TABLE 1 INDICATES TOLERANCE OF DIMENSIONS WHICH IS NOT SPECIFIED.
  3. USE SELF-TAPPING SCREWS 3X10 FOR FIXING THE UNIT.
  4. \*: CUTOUT DIMENSIONS FOR REAR CABLE ENTRY.

DRAWN	JUNE 15, '04 E. MIYOSHI	TITLE	IC-312
CHECKED	TAKAHASHI. T	名称	保安警報発呼器インターフェイス
APPROVED	Y. Hatai	FELCOM 12	外寸図
SCALE	1/2 MASS 0.6 ±10% kg	NAME	SSAS ALERT UNIT I/F
DWG.No.	C5613-G08-A	16-018-800G-1	OUTLINE DRAWING

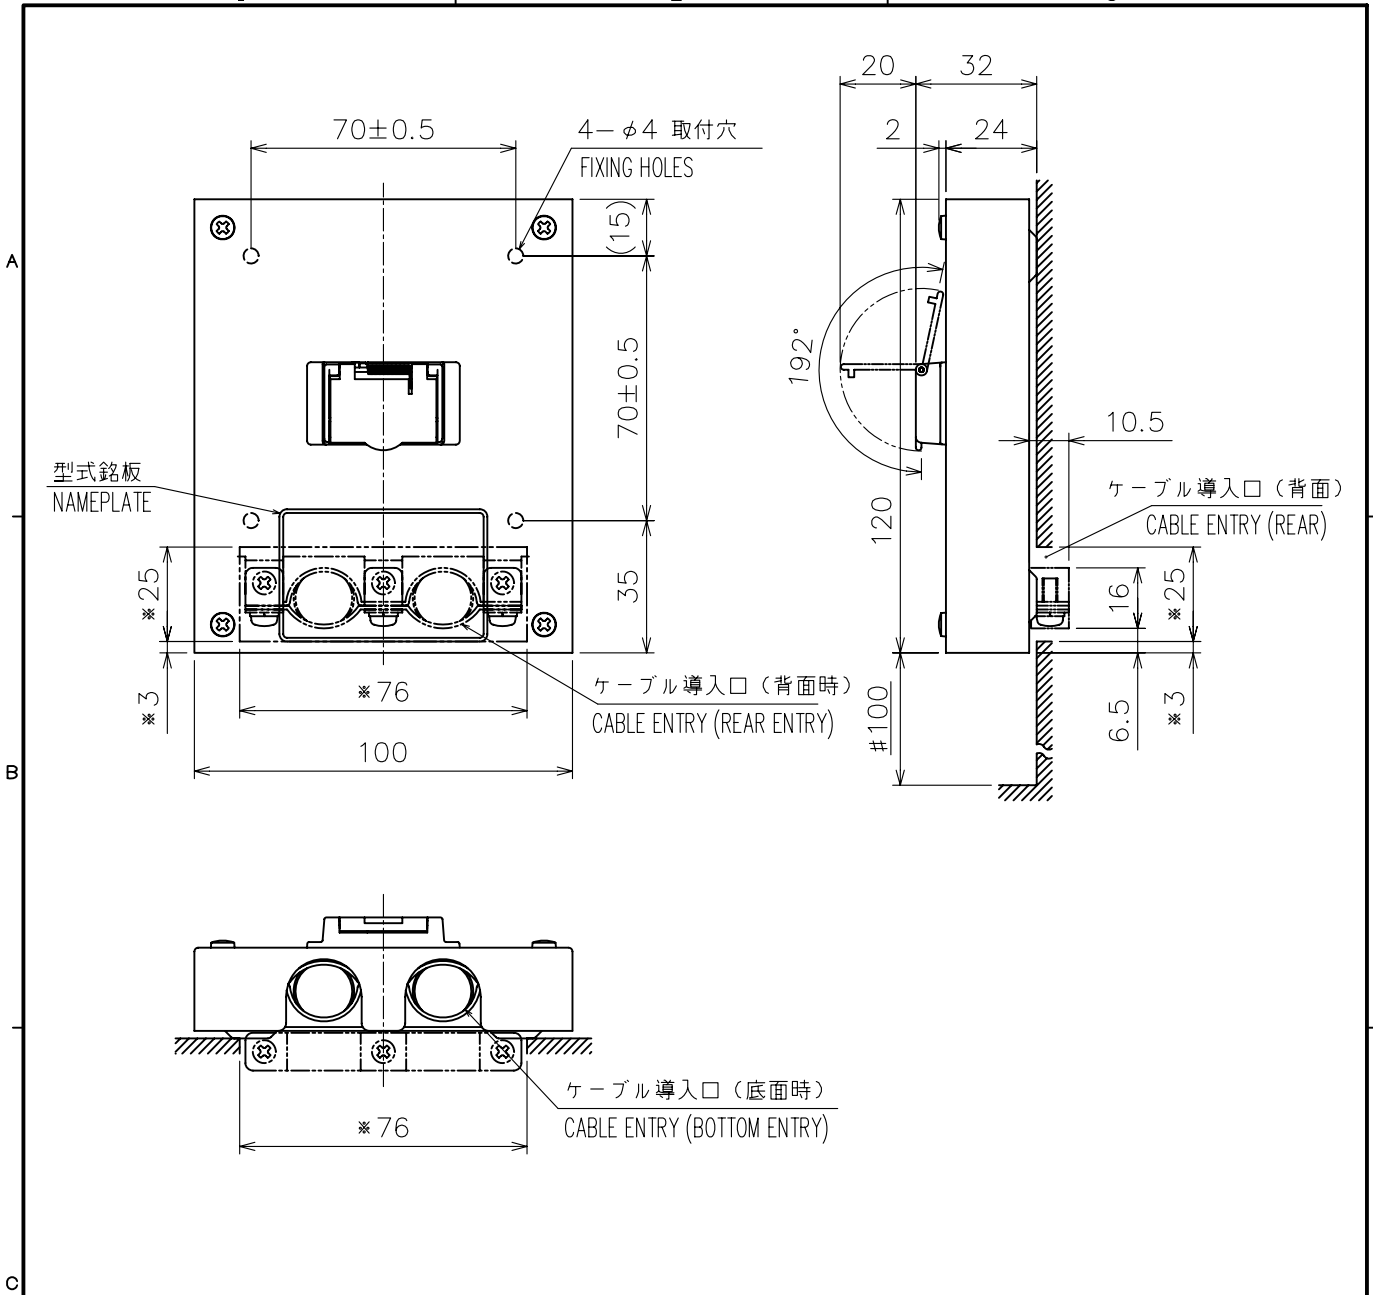

注 記

- 1) #印寸法は最小サービス空間寸法とする。
- 2) 指定外の寸法公差は表1による。
- 3) 取付用ネジはタッピンネジ呼び径3×10を使用のこと。
- 4) \*印寸法は、ケーブルを背面から導入時に設ける穴の寸法

NOTE

1. #: MINIMUM SERVICE CLEARANCE.
2. TABLE 1 INDICATES TOLERANCE OF DIMENSIONS WHICH IS NOT SPECIFIED.
3. USE TAPPING SCREWS  $\phi 3 \times 10$  FOR FIXING THE UNIT.
4. \*: CUTOUT DIMENSIONS FOR REAR CABLE ENTRY.

表1 TABLE 1


寸法区分 (mm) DIMENSION	公差 (mm) TOLERANCE
$L \leq 50$	$\pm 1.5$
$50 < L \leq 100$	$\pm 2.5$
$100 < L \leq 500$	$\pm 3$

DRAWN Apr. 13 '07 T.YAMASAKI		TITLE IC-307
CHECKED Apr. 13 '07 T.TAKENO		名称 保安警報発呼器
APPROVED Apr. 17 '07 R.Esumi	FELCOM 12/15/16	外寸図
SCALE 1/2	MASS 0.35 $\pm 10\%$ kg	NAME SSAS ALERT UNIT
DWG.No. C5635-G10-B	16-018-700G-2	OUTLINE DRAWING



表 1 TABLE 1

寸法区分 (mm) DIMENSIONS	公差 (mm) TOLERANCE
L ≤ 50	± 1.5
50 < L ≤ 100	± 2.5
100 < L ≤ 500	± 3

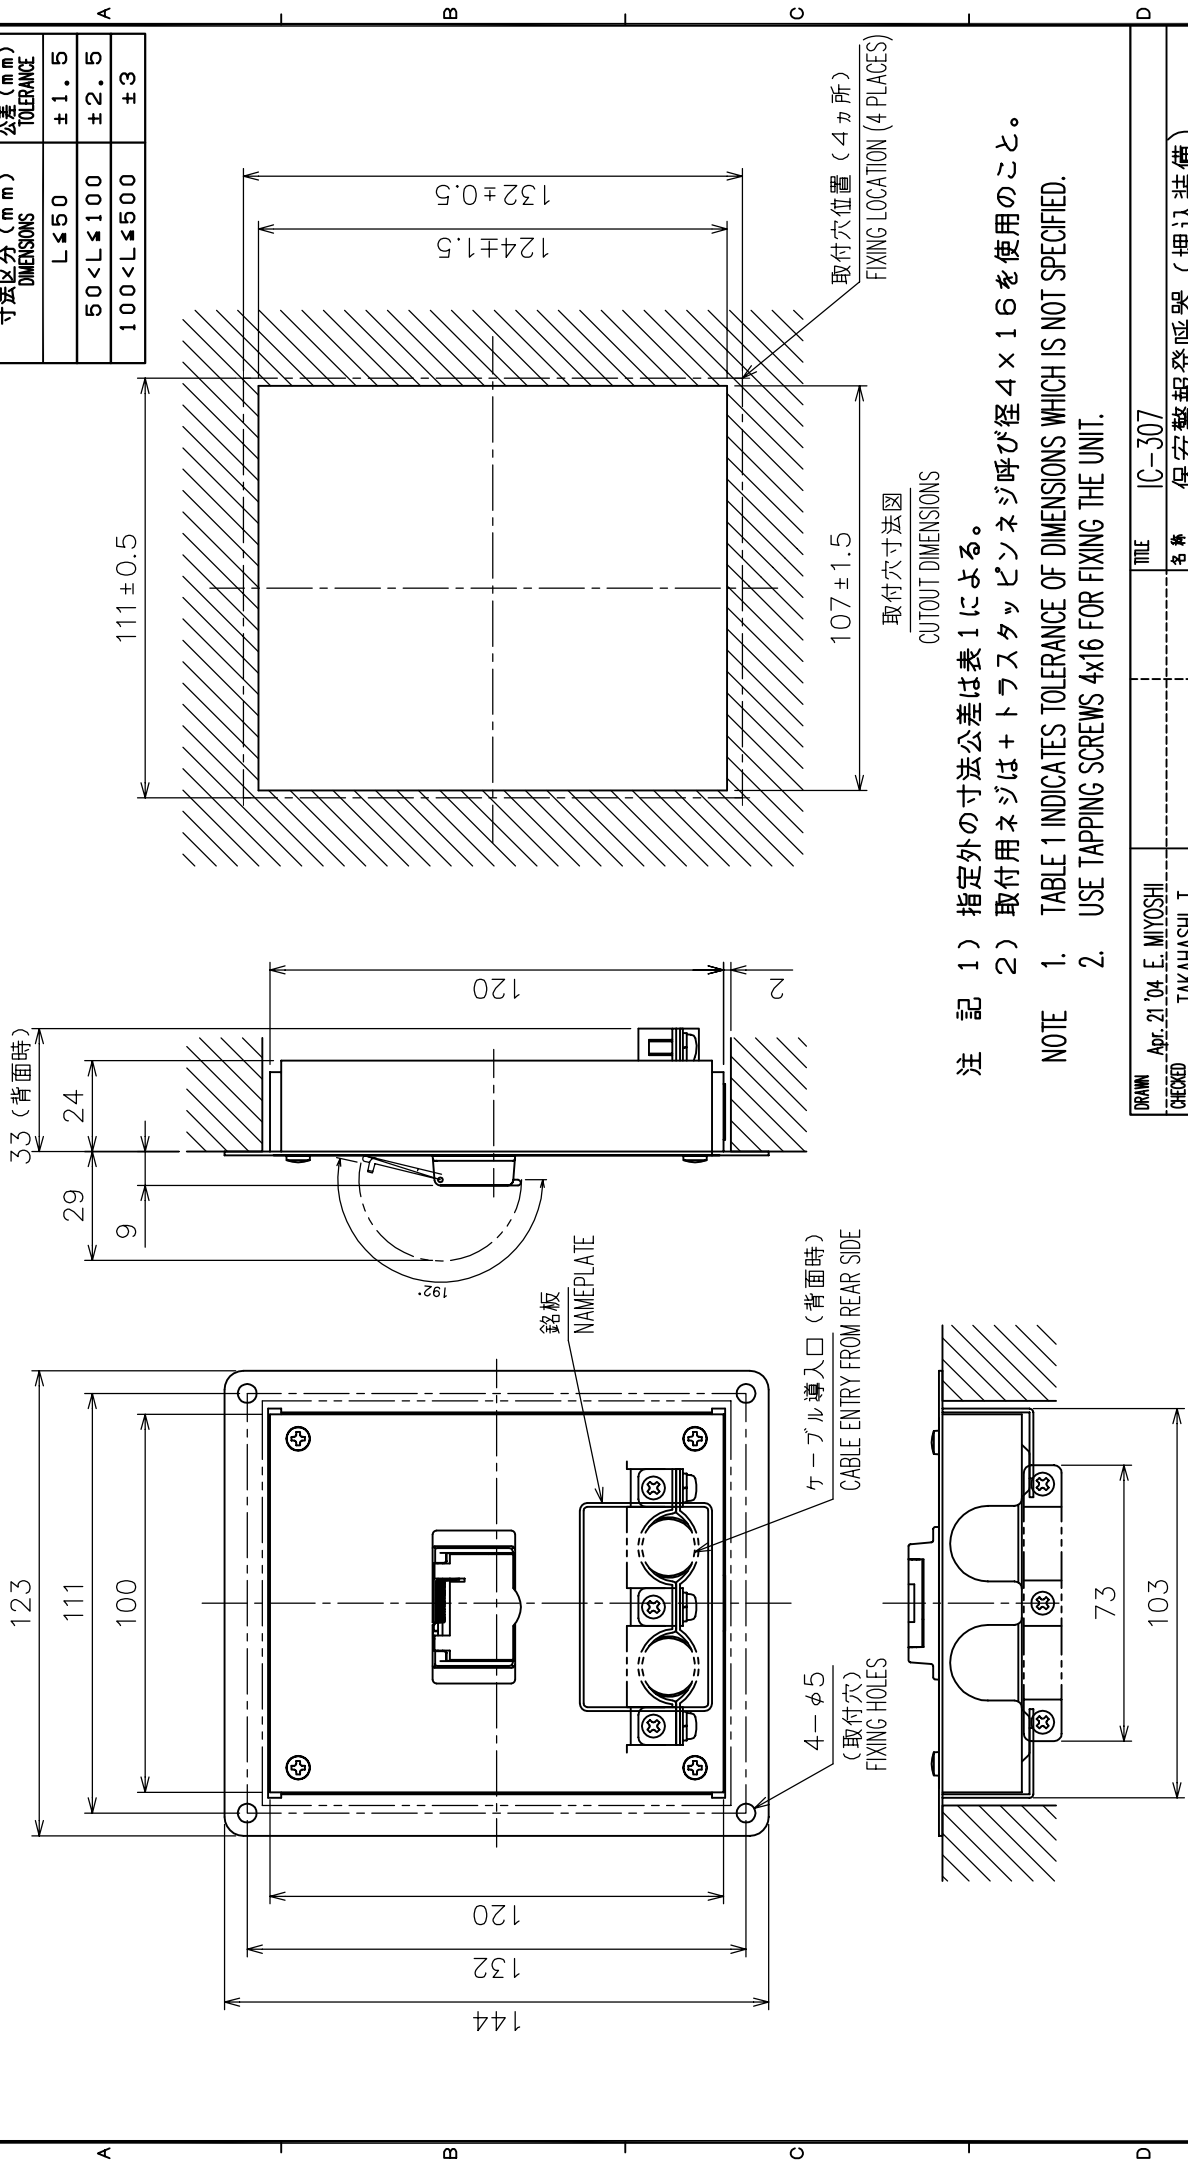

CUTOUT DIMENSIONS

- 注 記 1) 指定外の寸法公差は表 1 による。  
 2) 取付用ネジは + トラスタッピネジ呼び径 4 × 1.6 を使用のこと。
- NOTE 1. TABLE 1 INDICATES TOLERANCE OF DIMENSIONS WHICH IS NOT SPECIFIED.  
 2. USE TAPPING SCREWS 4x1.6 FOR FIXING THE UNIT.

DRAWN	Apr. 21 '04 E. MIYOSHI	TITLE	IC-307
CHECKED	TAKAHASHI, T	名 称	保安警報発呼器 (埋込装備)
APPROVED	Y. Hatai	FELCOM	12/15/16
SCALE	1/2	MASS	0.5 kg
DWG.No.	C5635-G11-A	16-018-710G-1	SSAS ALERT UNIT (FLUSH MOUNT)
OUTLINE DRAWING			


This page is intentionally left blank.

A

B

C

D

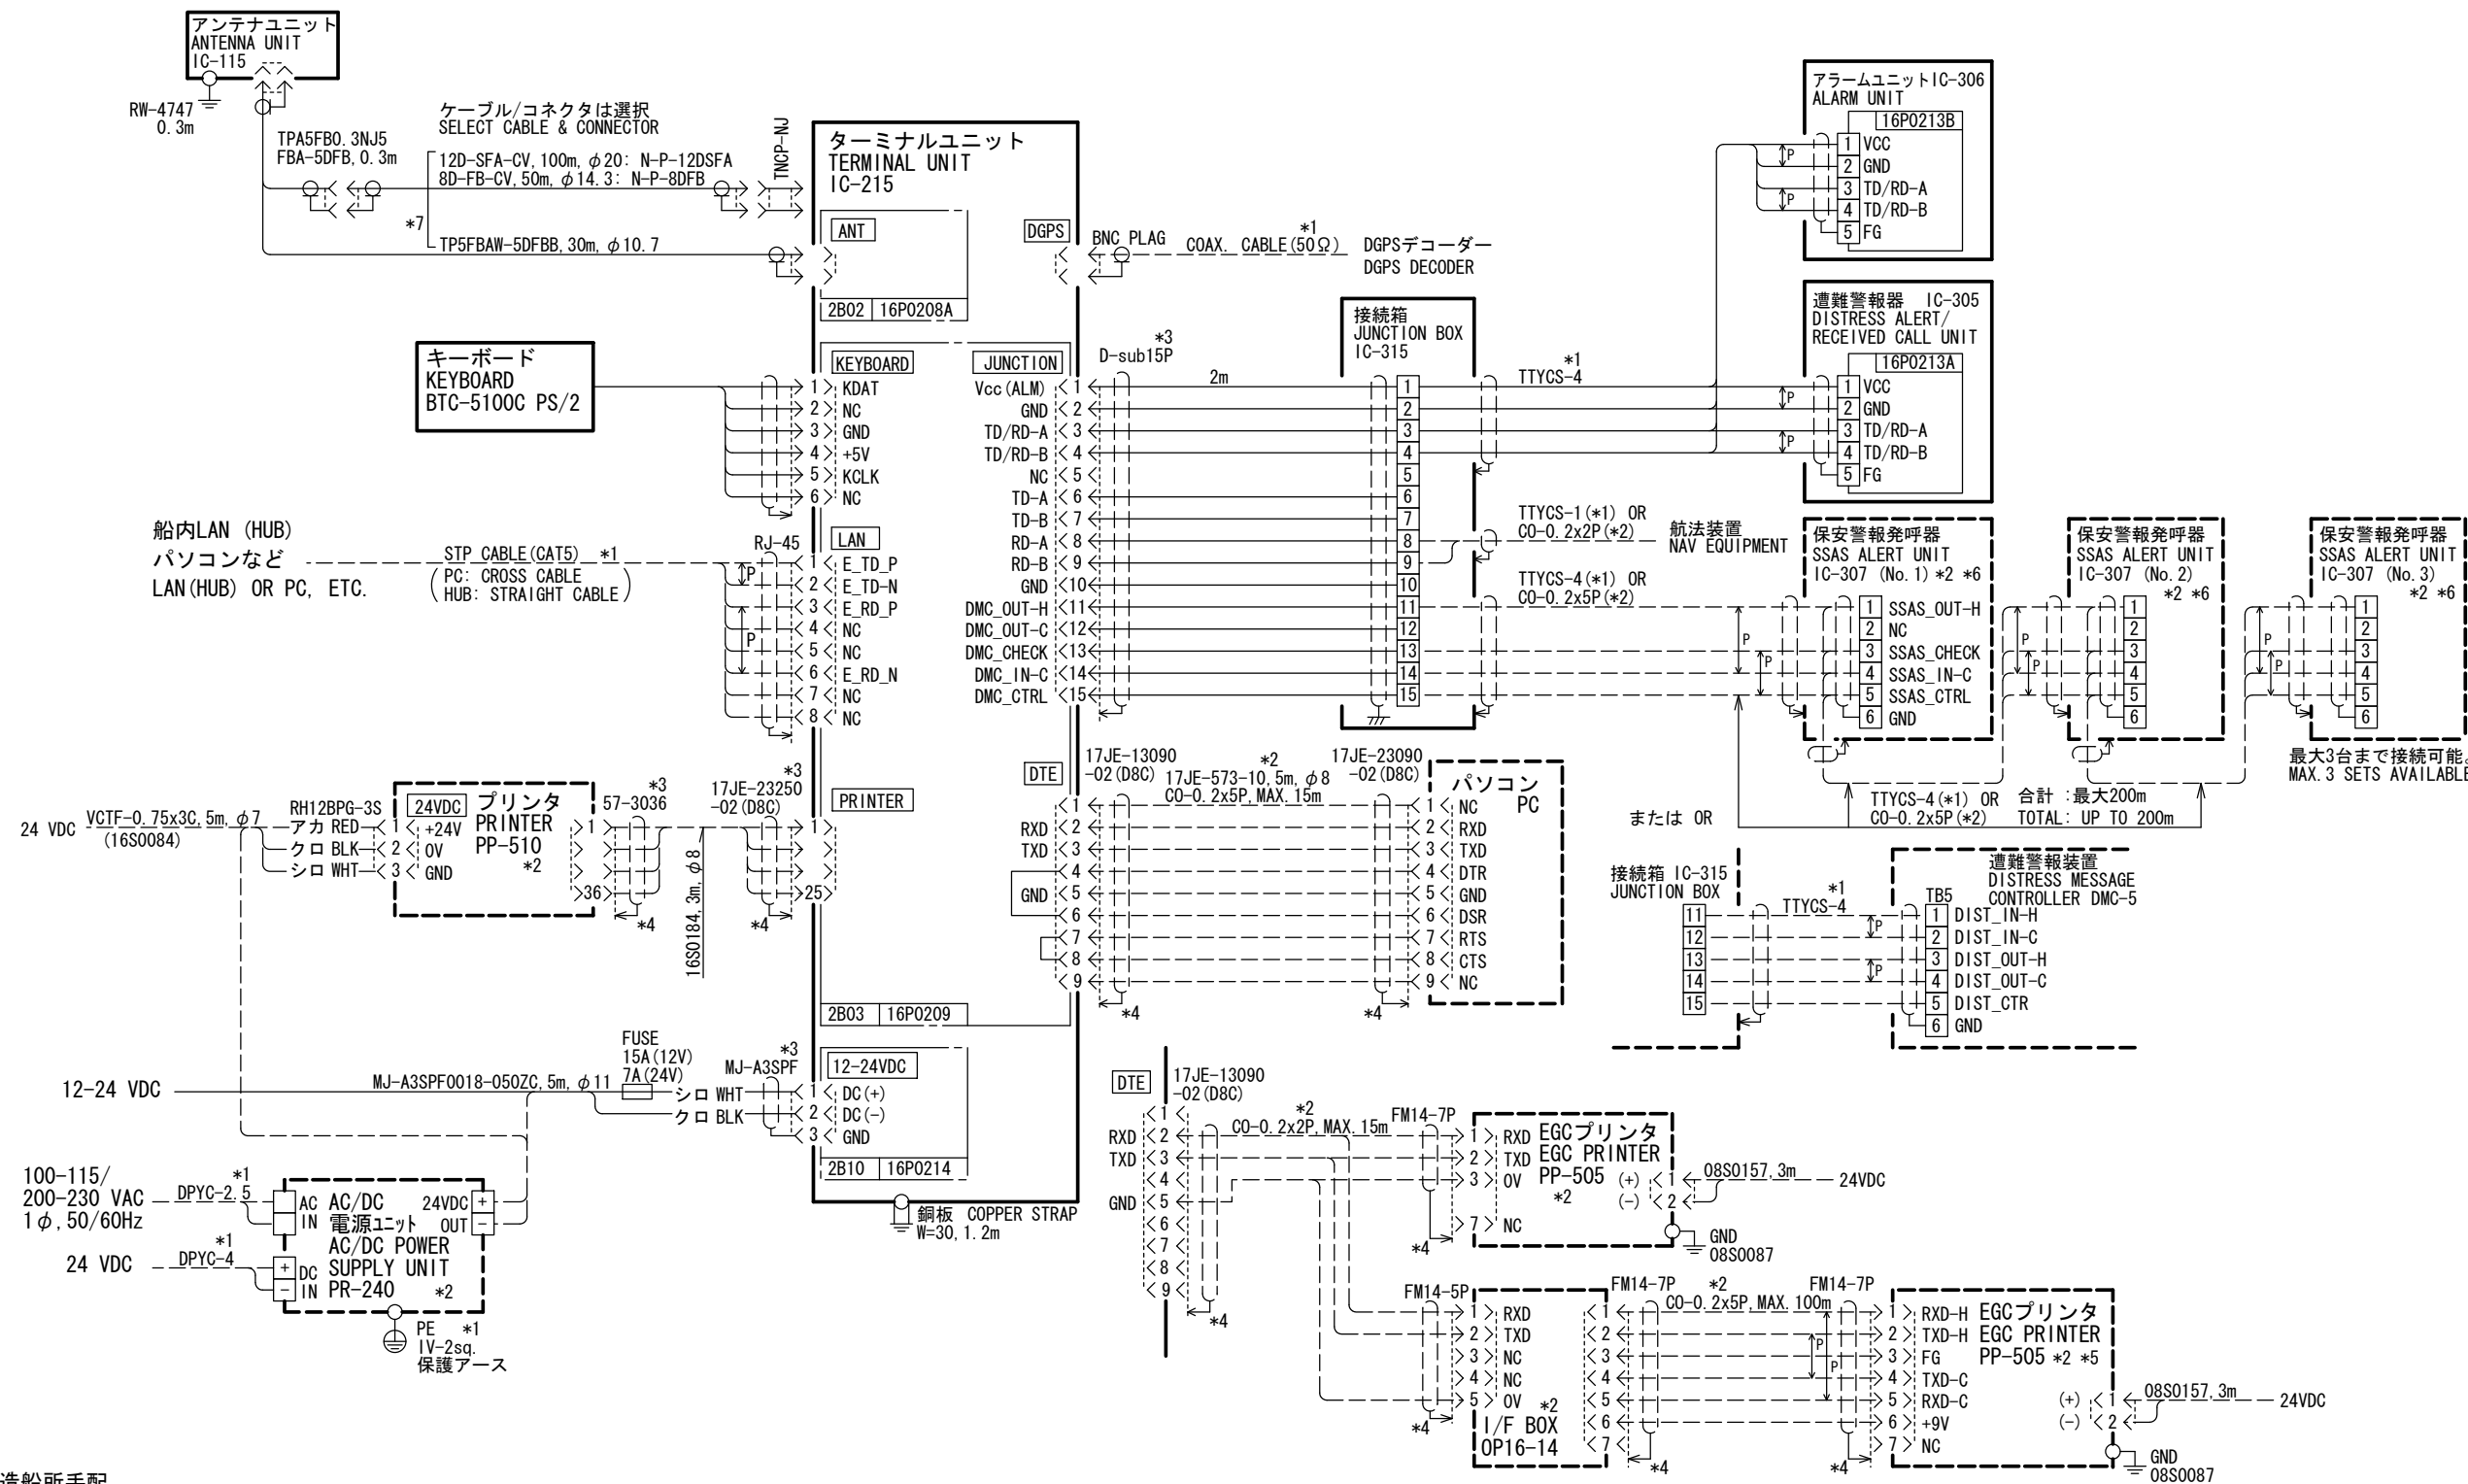


- 注記
- \* 1) 造船所手配。
  - \* 2) オプション。
  - \* 3) 工場にて取付済み。
  - \* 4) コネクタクランプでアースに落とす。
  - \* 5) TB基板 (16P0116) が必要。
  - \* 6) 終端のIC-307はジャンパー設定を変更する。
  - \* 7) アンテナケーブルは切断して使用しないこと。

- NOTE
- \*1. SHIPYARD SUPPLY.
  - \*2. OPTION.
  - \*3. FITTED AT FACTORY.
  - \*4. GROUND THRU CONNECTOR CLAMP.
  - \*5. TB BOARD (16P0116) REQUIRED.
  - \*6. CHANGE SETTING OF JUMPER IN IC-307 TO TERMINATE.
  - \*7. DO NOT SHORTEN ANTENNA CABLE.

CO-0.2x2P: CO-SPEVV-SB-C 0.2x2P, φ10.5  
 CO-0.2x5P: CO-SPEVV-SB-C 0.2x5P, φ13.5

DRAWN Aug. 24 '07 T. YAMASAKI	TITLE FELCOM 15
CHECKED Aug. 24 '07 T. TAKENO	名称 インマルサットC船舶地球局
APPROVED Aug. 27 '07 R. Esumi	相互結線図
SCALE MASS kg	NAME INMARSAT-C MES
DWG No. C5635-C01-M	INTERCONNECTION DIAGRAM

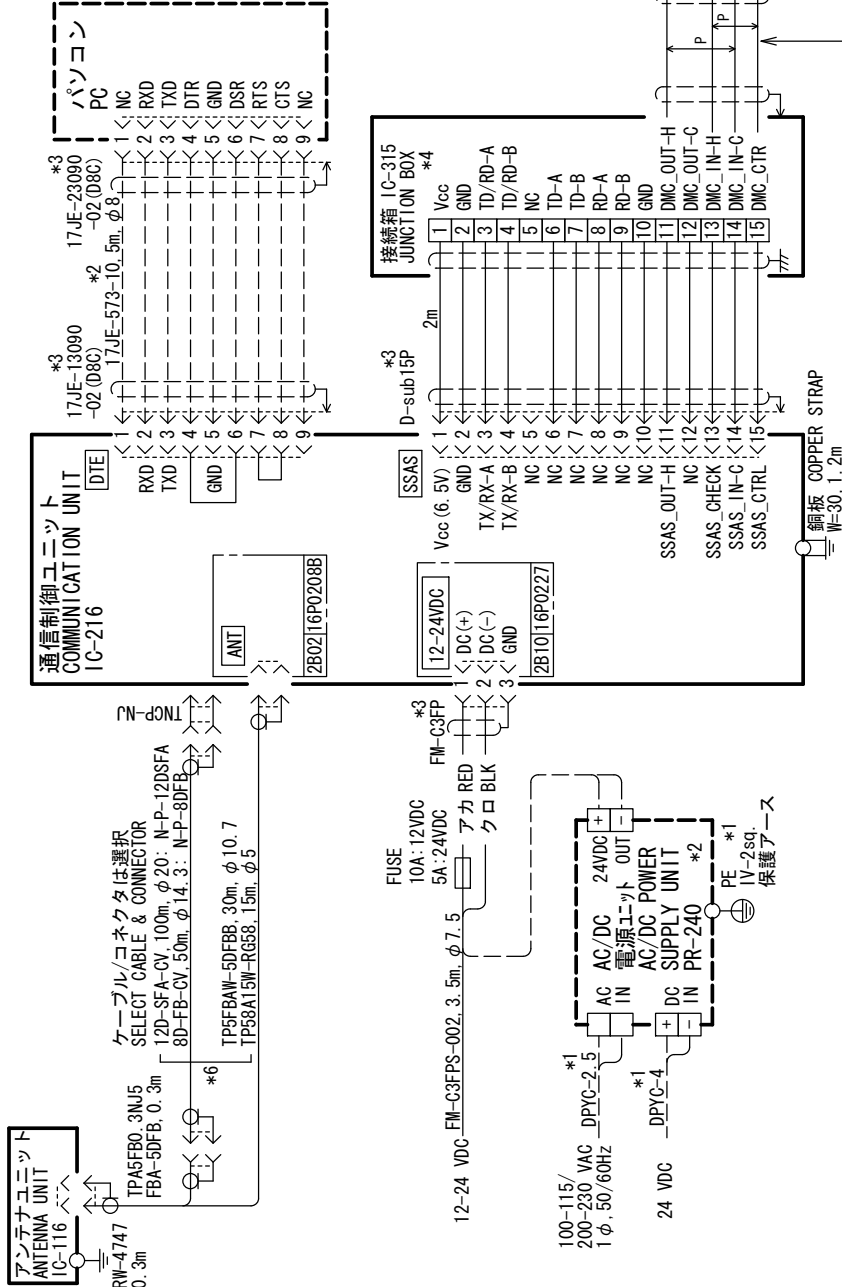

CO-0-2x5P: CO-SPEW-SB-C 0.2x5P, φ13.5

- 注記
- \*1) 造船所手配。
  - \*2) オプション。
  - \*3) 工場にて取付済み。
  - \*4) SSAS仕様標準支給。
  - \*5) 終端のIC-307はジャンパー設定を変更する。
  - \*6) アンテナケーブルは切断して使用しないこと。
- NOTE
- \*1. SHIPYARD SUPPLY.
  - \*2. OPTION.
  - \*3. FITTED AT FACTORY.
  - \*4. STANDARD SUPPLY FOR SSAS SPEC.
  - \*5. CHANGE SETTING OF JUMPER IN IC-307 TO TERMINATE.
  - \*6. DO NOT SHORTEN ANTENNA CABLE.

DRAWN	Apr. 24 '07	T. YAMASAKI	TITLE	FELCOM 16
CHECKED	Apr. 24 '07	T. TAKENO	名称	インマルサットMINI-C携帯移動地球局
APPROVED	May. 9 '07	R. Esumi	相互結線図	
SCALE	MASS	kg	NAME	INMARSAT MINI-C MES
DWG No.	C5638-C01-K		INTERCONNECTION DIAGRAM	


This page is intentionally left blank.

A

B

C

D

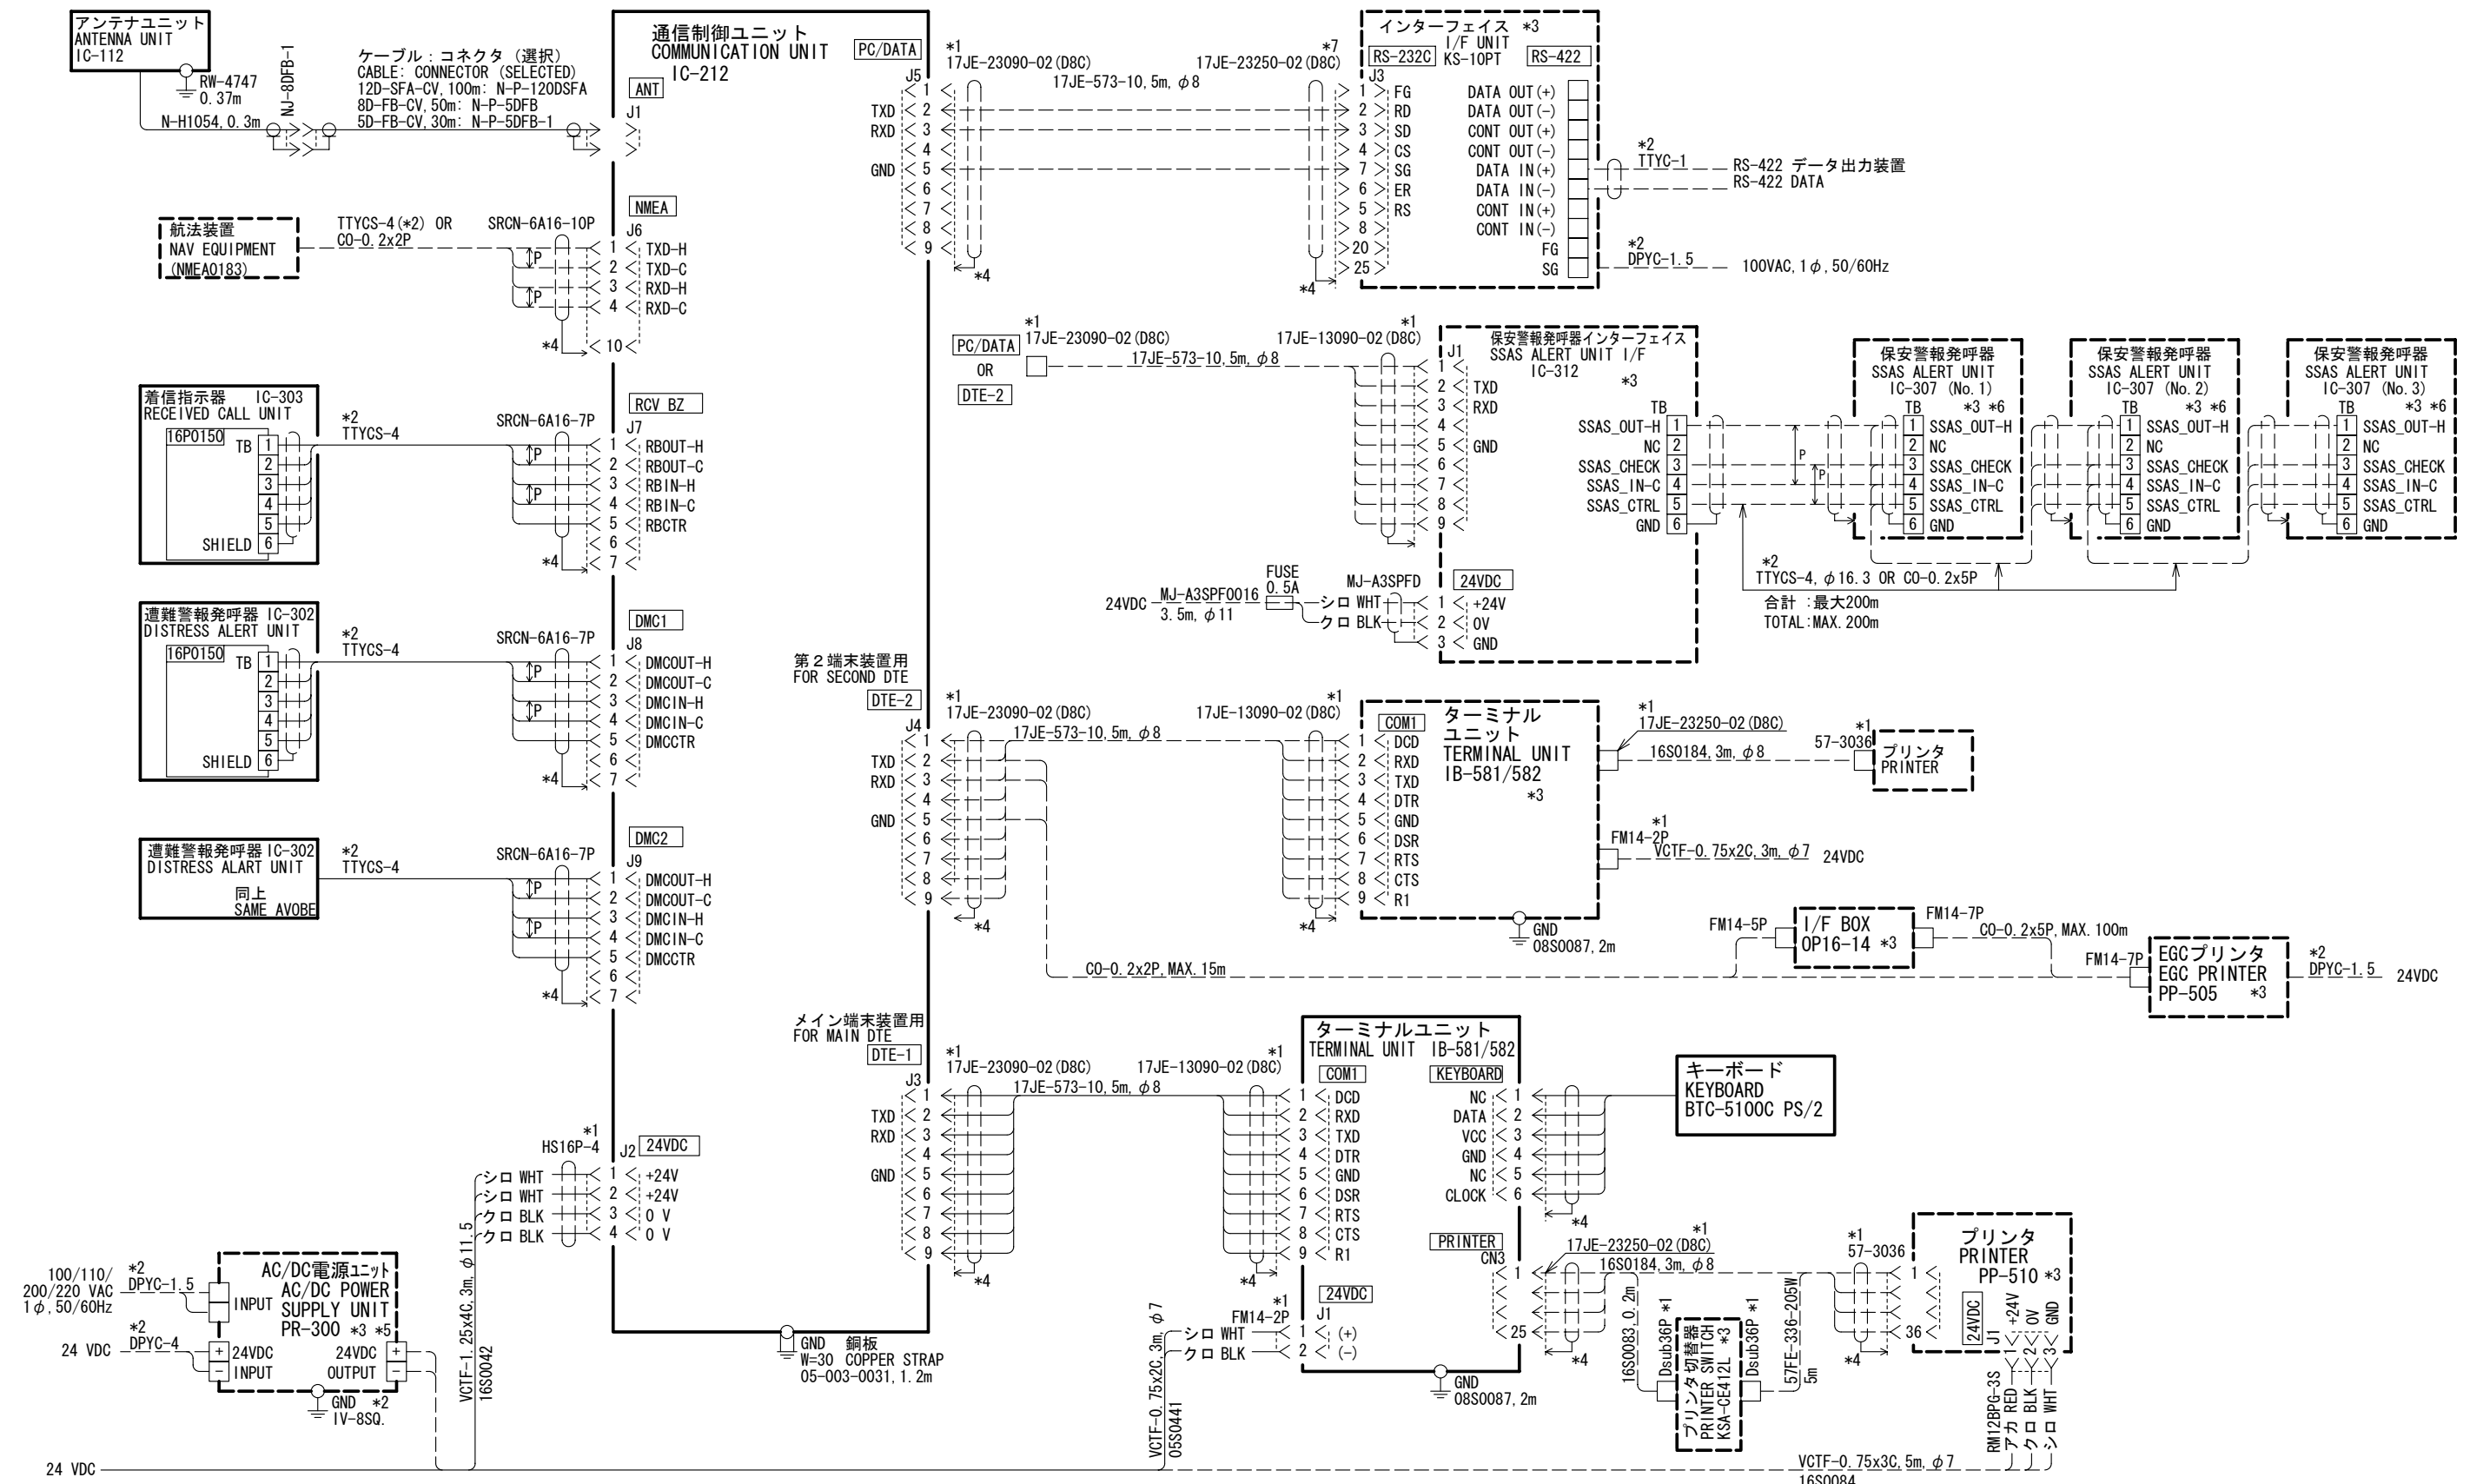

- 注記**
- \* 1) 工場にて取付済み。
  - \* 2) 造船所手配。
  - \* 3) オプション。
  - \* 4) コネクタクランプでアースに落とす。
  - \* 5) 船内電源に応じてタップを替える。
  - \* 6) 2台または3台接続可能。
  - \* 7) コネクタの取り替えが必要。

- NOTE**
- \*1. FITTED AT FACTORY.
  - \*2. SHIPYARD SUPPLY.
  - \*3. OPTION.
  - \*4. GROUND THRU CONNECTOR CLAMP.
  - \*5. CHANGE TAP CONNECTION IN ACCORDANCE WITH AC MAINS.
  - \*6. 2 OR 3 SETS CAN BE CONNECTED.
  - \*7. REPLACE CONNECTOR.

C0-0. 2x2P: C0-SPEVV-SB-C 0. 2x2P, φ 10. 5  
C0-0. 2x5P: C0-SPEVV-SB-C 0. 2x5P, φ 13. 5

DRAWN Jun. 3 '04 K. MIYAZAWA	TITLE FELCOM 12
CHECKED TAKAHASHI. T	名称 インマルサットC船舶地球局
APPROVED Y. Hatai	相互結線図
SCALE MASS kg	NAME INMARSAT-C MES
DWG No. C5613-C01- J	INTERCONNECTION DIAGRAM